

## PLC-ZM5000 IR Command List

- Transmission format of LCD projector operation key  
: NEC Format (single command / command pipelining mode)
- Transmission format of PC mouse operation button (mouse cursor button) / L / R key  
: Sanyo Mouse Code Format (Includes 3 bit of ID)
- Custom Code + Custom Code : 8 patterns as below  
33h+00h(Default; code1), 33h+11h(code2), 33h+22h(code3), 33h+33h(code4),  
33h+44h(code5), 33h+55h(code6), 33h+66h(code7), 33h+77h(code8)

Key No.	Data Code (HEX)	Function
1	11	ON
2	10	STAND-BY
3	8B	SHUTTER
4	05	INPUT
5	1C	MENU
6	89	AUTO PC
7	8C	CURSOR UP
8	1E	CURSOR LEFT / VOLUME -
9	0F / *1	SELECT / JOYSTICK
10	1D	CURSOR RIGHT / VOLUME +
11	8D	CURSOR DOWN / MUTE
12	*1	L-CLICK
13	*1	R-CLICK
14	8A	P-TIMER
15	84	POINTER
16	82	SCREEN
17	0D	IMAGE SELECT
18	0C	IMAGE ADJUST
19	38	INPUT 1
20	43	FREEZE (Number 1)
21	88	D. ZOOM (Number 2)
22	39	INPUT 2 (Number 3)
23	40	LENS SHIFT (Number 4)
24	5B	KEystone (Number 5)
25	06	INPUT 3 (Number 6)
26	47	ZOOM + (Number 7)
27	4A	FOCUS + (Number 8)
28	16	INFORMATION (Number 9)
29	46	ZOOM -
30	4B	FOCUS - (Number 0)
31	1A	FILTER
32	07	PIP

\*1... JOYSTICK button transmit code for PC mouse operation button (in 8 directions).