



Congratulations on purchasing this product

PFWX-51B
PFWU-51B

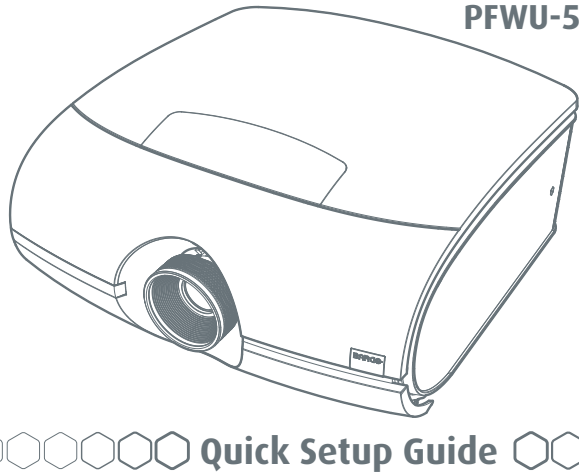


Quick Setup Guide


1 Packaging Contents

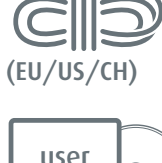


AAA (2x)

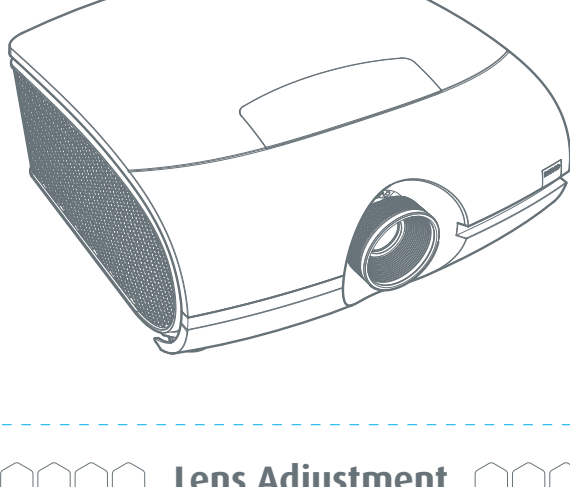

2 Lens Adjustment

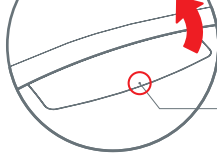

Push to open

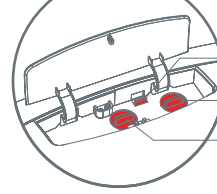


Lens Release

Hor. Lens Shift


Vert. Lens Shift

Please consult the User Manual for detailed info on Lens Assembly or Lens Replacement. This should only be done by a qualified Service Technician, preferably prior to ceiling mounting.


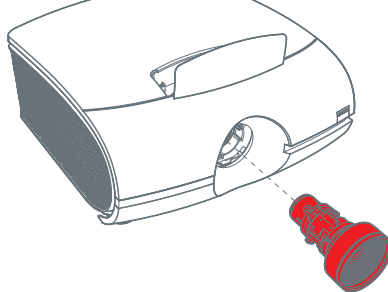


3 Rear Cover

Flip open the rear lid to gain access to the inputs panel.

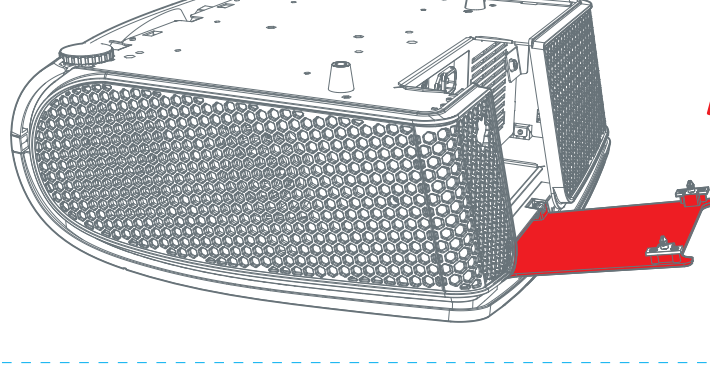

4 Ceiling Mount*

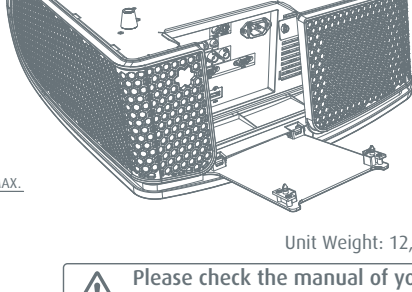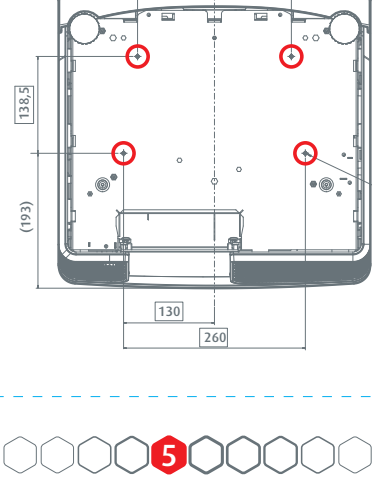


Unit Weight: 12,6 kg


Please check the manual of your supportsystem for compatibility

*(Ceiling mount system is not included)




5 Input Cables

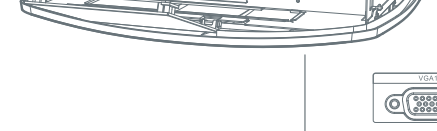

(See User Manual for detailed info on Inputs and PiP)

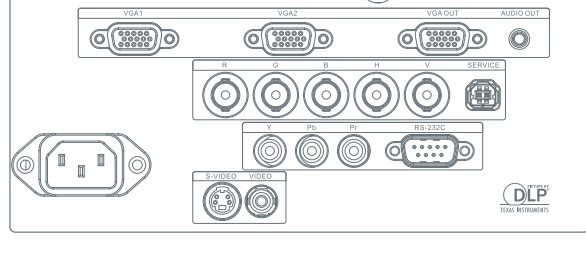


6 Side Cover Removal

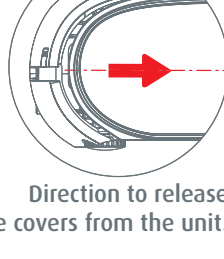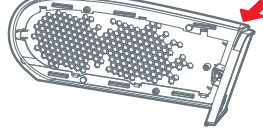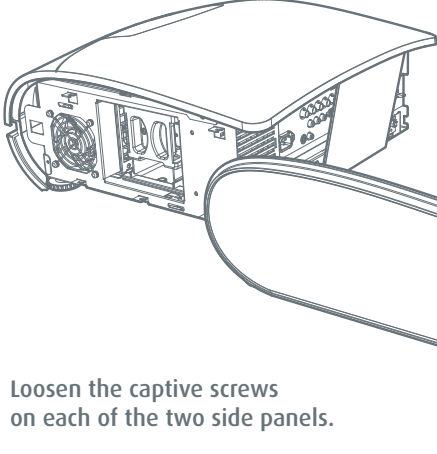

Loosen the captive screws on each of the two side panels.

Direction to release the side covers from the unit.

 7 Remote Control



Menu - OK

Menu - LEFT

Feedback LED

Menu - UP

Menu - RIGHT

Menu - DOWN

Home/Menu

Battery Lid (Slide down to open)




Quick Keys

(for Remote and keypad)

Quick Key 1

Push Menu-UP twice for instant 'Picture Mute'


8 Starting Projector

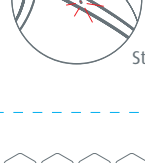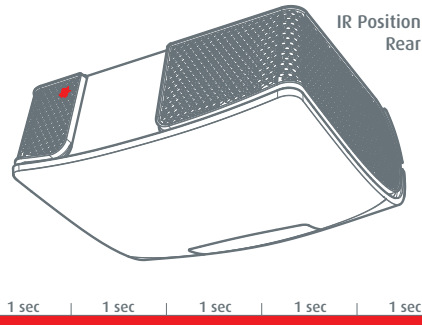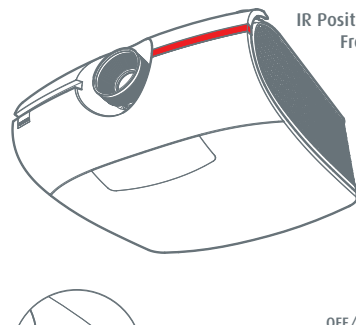

Status Led




9 OSD Lite Menu

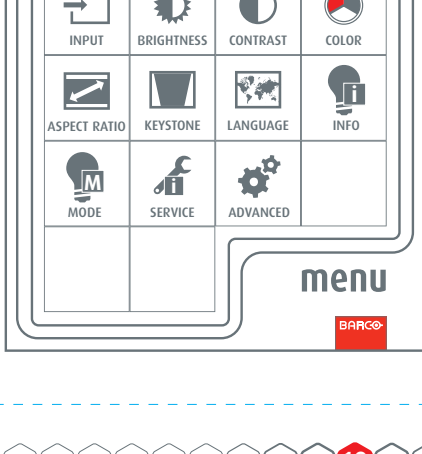

- INPUT _____ Toggle between input sources
- BRIGHTNESS _____ adjust lamp brightness level
- CONTRAST _____ adjust image contrast
- COLOR _____ adjust image colour
- ASPECT RATIO _____ modify image aspect ratio
- KEystone _____ adjust keystone
- LANGUAGE _____ select language
- INFO _____ information on lamp status
- MODE _____ normal/eco/power
- SERVICE _____ service information
- ADVANCED _____ see user manual

10 Important Info

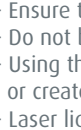

- Remove the lens before transporting the projector.
- To save lamp lifetime, first switch the projector to standby mode and wait two minutes, then switch off the main power.
- Ensure that the projector is operating with clean filters.
- Do not block the ventilation in- and outlets.
- Using the projector at a non recommended tilt angle will reduce the lifetime of the lamps or create unexpected behaviour of the unit.
- Laser light can cause severe damage to the DMD. This damage is not covered by warranty.



For more information and Maintenance Guidelines, check the Detailed User Manual on:

<http://www.barco.com/en/products-solutions/projectors>