

IN5122/IN5124

User's Manual

Manuel d'utilisation

Bedienungsanleitung

Manual de usuario

Manuale d'istruzioni

Gebruiksaanwijzing

Instruções do Proprietário


操作指南

사용 설명서

Bruksanvisningens

Руководство пользователя

Regulatory models: W60, W61

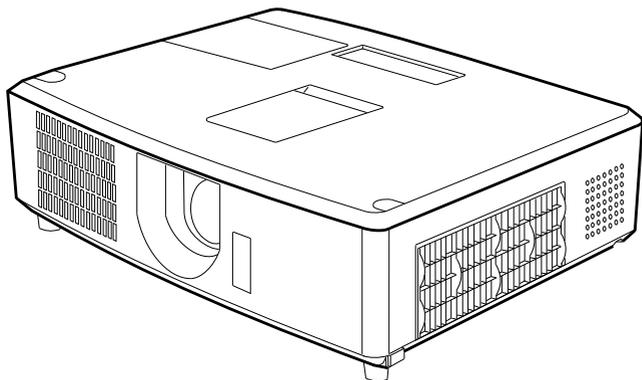

010-0757-00

DISPERINDAG No. 0287/1.824.51/09.03


InFocus

Bright Ideas Made Brilliant

This page left blank intentionally

Projector IN5122/IN5124

User's Manual

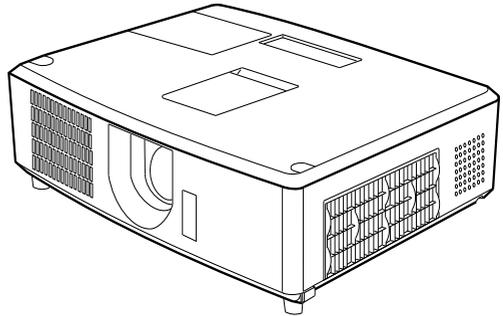

Thank you for purchasing this projector.

⚠ WARNING ▶ Before using this product, please read all manuals for this product. Be sure to read **Safety Instructions** first. After reading them, store them in a safe place for future reference.

About this manual

Various symbols are used in this manual. The meanings of these symbols are described below.

⚠ WARNING This symbol indicates information that, if ignored, could possibly result in personal injury or even death due to incorrect handling.

⚠ CAUTION This symbol indicates information that, if ignored, could possibly result in personal injury or physical damage due to incorrect handling.

NOTICE This entry indicates fear of causing trouble.



Please refer to the pages written following this symbol.

NOTE • The information in this manual is subject to change without notice.
• The manufacturer assumes no responsibility for any errors that may appear in this manual.
• The reproduction, transfer or copy of all or any part of this document is not permitted without express written consent.

Trademark acknowledgment

- Mac[®] is a saved trademark of Apple Inc.
- Windows[®], DirectDraw[®] and Direct3D[®] are saved trademarks of Microsoft Corporation in the U.S. and/or other countries.
- VESA and DDC are trademarks of the Video Electronics Standard Association.
- HDMI, the HDMI logo, and High-Definition Multimedia Interface are trademarks or saved trademarks of HDMI Licensing LLC in the United States and other countries.
- Trademark PJLink is a trademark applied for trademark rights in Japan, the United States of America and other countries and areas.
- Blu-ray Disc is a trademark.

PJLink[™]

All other trademarks are the properties of their respective owners.

Contents

Introduction	3	SETUP menu	38
Features	3	AUTO KEYSTONE,  KEYSTONE,  KEYSTONE,	
Checking the contents of package	3	CORNER CORRECTION, LOW POWER, CEILING,	
Part names	4	REAR, POWER SAVING MODE, MONITOR OUT	
Setting up	7	DEFAULT	
Arrangement	7	AUDIO menu	41
Connecting with your devices	9	VOLUME, INTERNAL SPEAKERS, AUDIO SOURCE,	
Connecting to a power supply	14	HDMI NOISE CANCEL, MIC LEVEL, MIC VOLUME	
Using the security bar and slot	14	SCREEN menu	43
Remote control	15	LANGUAGE, MENU POSITION, BLANK,	
Installing the batteries	15	START UP LOGO, CAPTURE NEW, CAPTURE	
About the remote control signal	15	LOCK, DISPLAY MESSAGES, SOURCE NAME,	
Using as a simple PC mouse & keyboard	16	RULED LINES, CLOSED CAPTIONS	
Power on and off	17	OPTION menu	49
Turning on the power	17	AUTOSOURCE, AUTO KEYSTONE, AC POWER	
Turning off the power	17	ON, AUTO POWER, USB TYPE B, CUSTOM KEY,	
Operating	18	SOURCES, POWER-UP SOURCE, SERVICE	
Adjusting the volume	18	NETWORK menu	57
Temporarily muting the sound	18	SETUP, PROJECTOR NAME, MY IMAGE,	
Selecting an input signal	18	AMX D.D., PRESENTATION, NETWORK INFO,	
Selecting an aspect ratio	19	NETWORK RESTART	
Adjusting the projector's elevator	20	SECURITY menu	64
Adjusting the lens	21	SECURITY PASSWORD CHANGE, SNAPSHOT	
Using the automatic adjustment feature	22	PASSWORD, PIN LOCK, TRANSITION DETECTOR,	
Correcting the distortion	23	MY TEXT PASSWORD, MY TEXT DISPLAY, MY	
Temporarily blanking the screen	25	TEXT WRITING, SECURITY INDICATOR, STACK	
Using the menu features	26	LOCK	
BASIC MENU	28	Presentation tools	70
ASPECT RATIO, AUTO KEYSTONE,  KEYSTONE,		PC-LESS Presentation	70
 KEYSTONE, CORNER CORRECTION, PRESETS,		Thumbnail Mode, Full Screen Mode,	
LOW POWER, CEILING, REAR, RESET, RESET		Slideshow mode, Playlist	
FILTER HOURS, LANGUAGE, ADVANCED MENU,		USB Display	79
EXIT		Right-Click menu, Floating menu,	
PICTURE menu	30	Options window	
BRIGHTNESS, CONTRAST, GAMMA, COLOR		Maintenance	82
TEMPERATURE, COLOR, TINT, SHARPNESS, ACTIVE		Replacing the lamp	82
IRIS, USER PRESET		Cleaning and replacing the air filter	84
IMAGE menu	33	Other care	86
ASPECT RATIO, OVERSCAN, VERTICAL POSITION,		Troubleshooting	87
HORIZONTAL POSITION, PHASE, TRACKING,		Related messages	87
AUTO IMAGE		Regarding the indicator lamps	89
INPUT menu	36	Resetting all settings	90
DETECT FILM, VIDEO NOISE REDUCTION, COLOR		Situations that may be easy to be mistaken	
SPACE, VIDEO STANDARD, COMPUTER IN,		for projector defects	91
RESOLUTION		Specifications	95

Introduction

Features

The projector provides you with the following features:

- ✓ This projector has a variety of I/O ports that should cover all business applications. The **HDMI** port supports various types of image sources which have digital interfaces enabling you to display clearer images on the screen.
- ✓ This projector has a 2.0x optical zoom, and horizontal and vertical manual lens shift, giving you installation flexibility.
- ✓ If you insert a USB storage device, such as a USB memory stick, into the **USB TYPE A** port and select that port as the input source, you can view images stored on the device.
- ✓ This projector can be controlled and monitored via LAN connection.
- ✓ The built-in 16W speakers can deliver sufficient levels of sound to fill a large space such as a classroom without using external speakers.

Checking the contents of package

Please see the **Contents of package** section in the **Quick Start Guide**.

Your projector should come with the items shown there. Contact your dealer immediately if any items are missing.


NOTE • Keep the original packing materials, for future reshipment. Be sure to use the original packing materials when moving the projector. Use special caution with the lens.

• The projector may make a rattling sound when tilted, moved or shaken, since a flap to control the air flow inside of the projector will move. Be aware that this is not a failure or malfunction.

Part names

Projector

- (1) Lamp cover (📖 82)
The lamp unit is inside.
- (2) Speakers (x2) (📖 13, 41)
- (3) Filter cover (📖 86)
The air filter and intake vent are inside.
- (4) Elevator feet (x2) (📖 20)
- (5) Elevator buttons (x2) (📖 20)
- (6) Remote sensor (📖 15)
- (7) Lens (📖 86)
- (8) Lens cover
- (9) Intake vents
- (10) Control panel (📖 5)
- (11) Lens adjuster door (📖 5)
The adjusters for the lens are behind the door.
- (12) **AC IN** (AC inlet) (📖 14)
- (13) Exhaust vent
- (14) Rear panel (📖 5)
- (15) Security bar (📖 14)
- (16) Heel

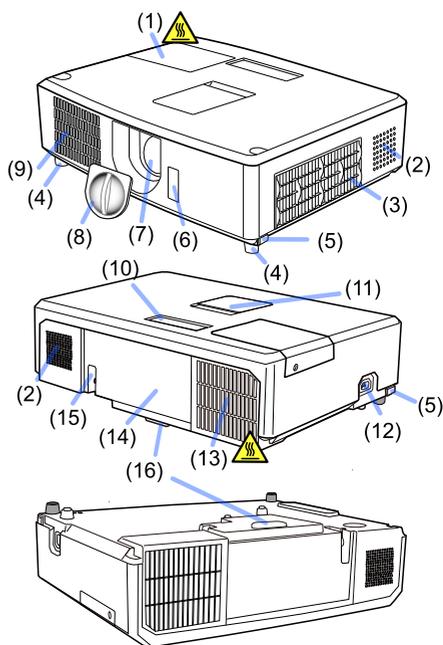

⚠ WARNING ▶ Do not open or remove any portion of the product, unless the manuals direct it.

▶ Do not subject the projector to unstable conditions.

▶ Do not shock or apply pressure to this product.

▶ Do not look into the lens or openings of the projector when the lamp is on.

▶ Keep the lens cap away from children and pets. Make sure they do not swallow the caps. If swallowed consult a physician immediately for emergency treatment.

⚠ CAUTION ▶ Do not touch the projector anywhere around the lamp cover or the exhaust vents during use or just after use, since it is too hot.

▶ Do not attach anything onto the lens except the projector's lens cover because it could melt or otherwise damage the lens.




(continued on next page)

Part names (continued)


Control panel and Lens adjusters

- (1) Lens adjuster door
- (2) **FOCUS** ring (📖21)
- (3) **ZOOM** ring (📖21)
- (4) **HORIZONTAL** adjuster (📖21)
- (5) **VERTICAL** adjuster (📖21)
- (6) **LOCK** (horizontal lens position lock) (📖21)
- (7) **STANDBY/ON** button (📖17)
- (8) **SOURCE** button (📖17)
- (9) **MENU** button (📖26)
- (10) **SECURITY** indicator (📖69)
- (11) **LAMP** indicator (📖90)
- (12) **TEMP** indicator (📖90)
- (13) **POWER** indicator (📖90)

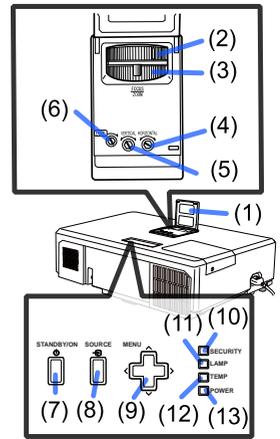

Rear panel (📖9 ~ 13)

- (1) **LAN** port
- (2) **USB TYPE A** port
- (3) **HDMI** port
- (4) **USB TYPE B** port
- (5) **MIC** port (📖13)
- (6) **AUDIO IN1** port
- (7) **AUDIO IN2** port
- (8) **AUDIO IN3 (R,L)** ports
- (9) **AUDIO OUT (R,L)** ports
- (10) **COMPUTER IN1** port
- (11) **COMPUTER IN2** ports (📖12)
(G/Y, B/Cb/Pb, R/Cr/Pr, H, V)
- (12) **REMOTE CONTROL** port
- (13) **MONITOR OUT** port
- (14) **CONTROL** port
- (15) **COMPONENT** ports (Y, Cb/Pb, Cr/Pr)
- (16) **VIDEO** port
- (17) **S-video** ports
- (18) Security slot (📖14)

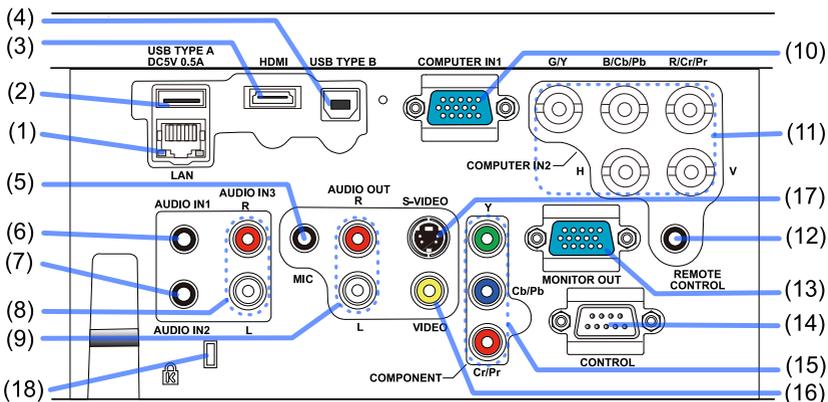


(continued on next page)

Part names (continued)

Remote control


- (1) **STANDBY/ON** button (📖17)
- (2) **HELP** button
- (3) **MENU** button (📖26)
- (4) **UP/▲** button (📖26)
- (5) **PREVIOUS PAGE/◀** button (📖26)
- (6) **SELECT** button (📖26)
- (7) **NEXT PAGE/▶** button (📖26)
- (8) **DOWN/▼** button (📖26)
- (9) **VOLUME +** button (📖18)
- (10) **CUSTOM** button (📖51)
- (11) **SOURCE** button (📖18)
- (12) **VOLUME -** button (📖18)
- (13) **BLANK** button (📖25)
- (14) **PRESETS** button (📖28)
- (15) **MUTE** button (📖18)
- (16) **AUTO IMAGE** button (📖22)
- (17) **RESIZE** button (📖19)

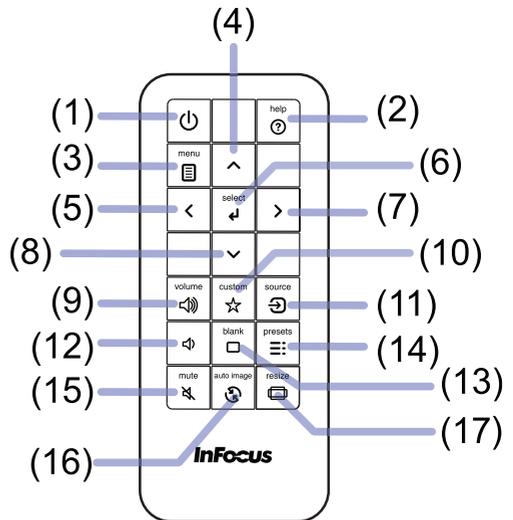

Setting up

Install the projector according to the environment and manner the projector will be used in.


For special installation applications such as a ceiling mount application, specific mounting accessories (📖 **Specifications** in the **Quick Start Guide**) and service may be required. Before installing the projector, consult with your dealer about your installation application.

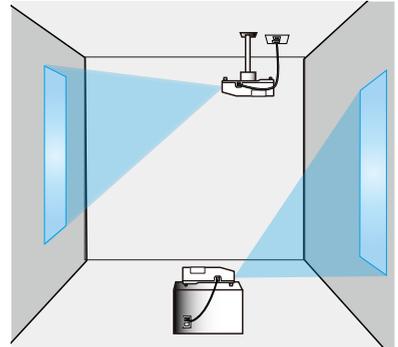

Arrangement

Refer to the following tables **T-1** and **T-2** in the **Quick Start Guide** to determine the screen size and projection distance. The values shown in the table are calculated for a full size screen.

- Ⓜ × Ⓥ : Screen size
- ⓐ : Projection distance
(from the projector's end)
- ⓑ, ⓒ : Screen height

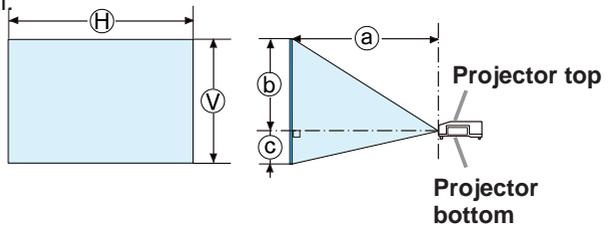

⚠ WARNING ► **Install the projector where you can access the power outlet easily.** If anything unusual occurs, unplug the projector immediately. Otherwise this may result in a fire or electrical shock.

► **Do not subject the projector to unstable conditions.** If the projector falls or topples over, it could result in personal injury, and/or damage to the projector and surrounding items. Using a damaged projector can result in a fire and an electrical shock.

- Do not place the projector on unstable surfaces, such as an inclined surface, surfaces subject to vibration, on top of a wobbly table or cart, or a surface that is smaller than the projector.
- Do not position the projector on its side, front or rear.
- Do not attach or place anything on the projector unless otherwise specified in the manual.
- Do not use any mounting accessories except the accessories specified by the manufacturer. Read and keep the manuals of the accessories used.
- For special installations such as ceiling mounting, be sure to consult your dealer beforehand.

(continued on next page)

Arrangement (continued)

⚠ WARNING ► **Do not install the projector near thermally conductive or flammable items.** These types of items can become heated by the projector and result in a fire and burns.

- Do not place the projector on a metal stand.
- **Do not place the projector in a place where it may get wet.** Getting the projector wet or inserting liquid into the projector can cause a fire, electrical shock, and damage the projector.
- Do not place the projector near water, such as in a bathroom, kitchen, or poolside.
- Do not place the projector outdoors or by a window.
- Do not place any item containing liquid near the projector.

⚠ CAUTION ► **Place the projector in a cool place with sufficient ventilation.** The projector may shutdown automatically or may malfunction if its internal temperature is too high.

- Using a damaged projector can result in a fire and an electrical shock.
- Do not place the projector in direct sunlight or near hot objects such as heaters.
- Keep a space of 12" (30 cm) or more between the side of the projector and other objects such as walls.
- Do not place the projector on carpet, cushions or bedding.
- Do not stop up, block or cover the projector's vent holes. Do not place any item around the projector that could be sucked in or stuck to the projector's intake vents.
- Do not place the projector in places that are exposed to magnetic fields; doing so can cause the cooling fans inside the projector to malfunction.

► **Avoid placing the projector in smoky, humid or dusty places.** Placing the projector in such places can cause a fire, electrical shock and projector malfunction.

- Do not place the projector near humidifiers, especially ultrasonic humidifiers, since chlorine and minerals contained in tap water are atomized and could be deposited in the projector causing image degradation or other problems.
- Do not place the projector in a smoking area, kitchen, passageway or by a window.

NOTICE • Position the projector so that light does not directly hit the projector's remote sensor.

- Do not place the product in a place where radio interference may be caused.
- Keep heat-sensitive items away from the projector. Otherwise, they may be damaged by the heat from the projector.

Connecting with your devices

Before connecting the projector to a device, consult the device's manual to confirm that the device is suitable for connecting with this projector and prepare needed accessories, such as a cable in accordance with the signal of the device. Consult your dealer if any needed accessories did not come with the product or if the needed accessory is damaged.

After verifying that the projector and the devices are turned off, make the connection, according to the following instructions. Refer to the illustrations on subsequent pages.

Before connecting the projector to a network system, be sure to read the **Network Guide** too.

⚠ WARNING ▶ Only use appropriate accessories. Otherwise they may cause a fire or damage the projector and devices.

- Only use accessories specified or recommended by the projector's manufacturer. They may be regulated under some standard.
- Do not disassemble or modify the projector or the projector's accessories.
- Do not use damaged accessories. Be careful not to damage the accessories. Route a cable so that it cannot be stepped on or pinched.

⚠ CAUTION ▶ If the cable only has a core at one end, connect the end with the core to the projector. This may be required by EMI regulations.

NOTE

- The feature of some of the input ports can be selected based on your usage requirements. Refer to the page number indicated beside each port in the following illustration.
- Be careful not to mistakenly connect a connector to an incorrect port. Otherwise it may cause a device or projector malfunction.
 - When connecting a connector to a port, make sure that the shape of the connector fits the port.
 - Tighten the screws to connect a connector equipped with screws to a port.
 - Use cables with straight plugs, not L-shaped ones, as the input ports of the projector are recessed.


About Plug-and-Play capability

- Plug-and-Play is a system composed of a computer, its operating system and peripheral equipment (i.e. display devices). This projector is VESA DDC 2B compatible. Plug-and-Play can be used by connecting this projector to a computer that is VESA DDC (display data channel) compatible.
 - Take advantage of this feature by connecting a computer cable to the **COMPUTER IN1** port (DDC 2B compatible). Plug-and-Play may not work properly if any other type of connection is attempted.
 - Please use the standard drivers in your computer as this projector is a Plug-and-Play monitor.

(continued on next page)

Connecting with your devices (continued)

Computer

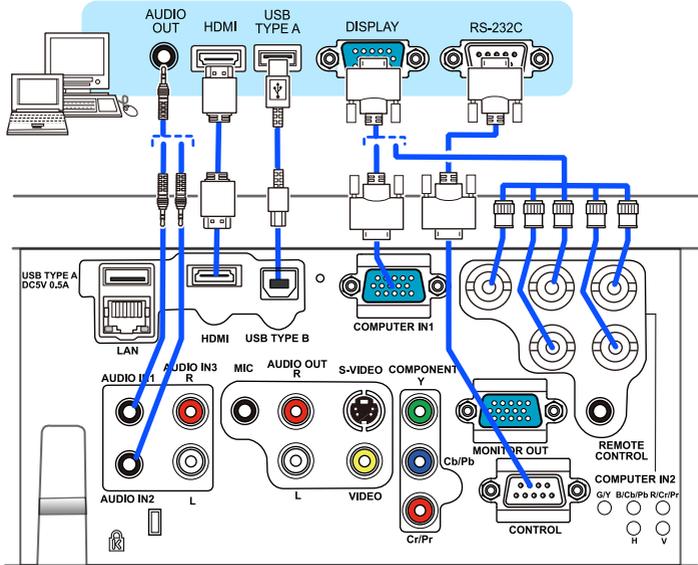


NOTE • Before connecting the projector to a computer, consult the computer's manual and check the compatibility of the signal level, the synchronization methods and the display resolution output to the projector.

- Some signals may require an adapter to plug into this projector.
- Some computers have multiple screen display modes that may include some signals which are not supported by this projector.
- Although the projector can display signals with resolutions up to WUXGA (1920X1200), the signal will be converted to the projector's panel resolution before being displayed. The best display performance will be achieved if the resolutions of the input signal and the projector panel are identical.
- If you connect this projector and a notebook computer, you need to output the display to an external monitor, or output simultaneously to the internal display and an external monitor. Consult the computer's manual for the setting.
- Depending on the input signal, the projector's automatic adjustment feature may take some time and may not feature correctly.
- A composite sync signal or sync-on-green signal may confuse the projector's automatic adjustment feature (35).
- If the automatic adjustment feature does not work correctly, you may not see the dialog to set the display resolution. In this situation, use an external display device. You may be able to see the dialog and set an appropriate display resolution.

(continued on next page)

Connecting with your devices (continued)

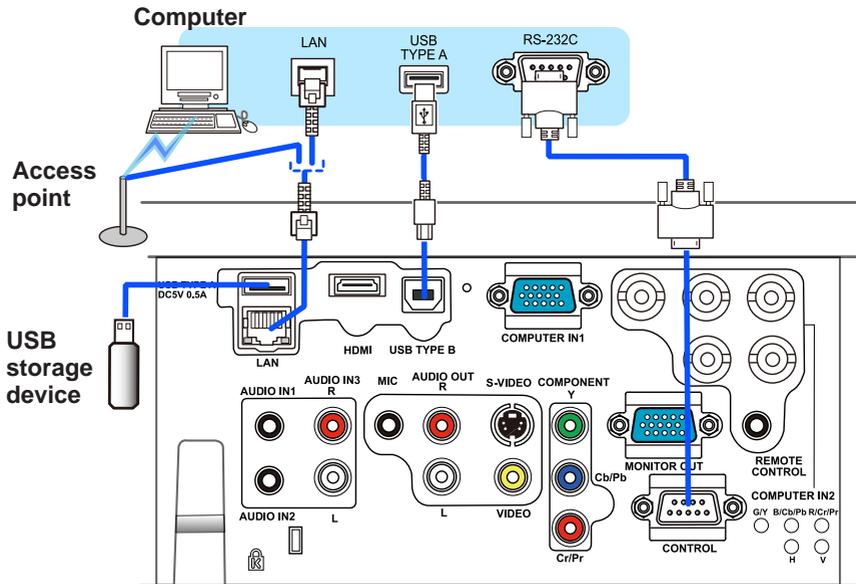


- ⚠ CAUTION** ▶ Before connecting the projector to a network system be sure to obtain the network administrator's approval.
- ▶ Do not connect the **LAN** port to any network that might have excessive voltage.
- ▶ Before removing a USB storage device from the projector port, be sure to use the **REMOVE USB** feature on the thumbnail screen to secure your data. (73)

NOTE • If an oversized USB storage device blocks the **LAN** port, use a USB extension cable to connect the USB storage device.

(continued on next page)

Connecting with your devices (continued)

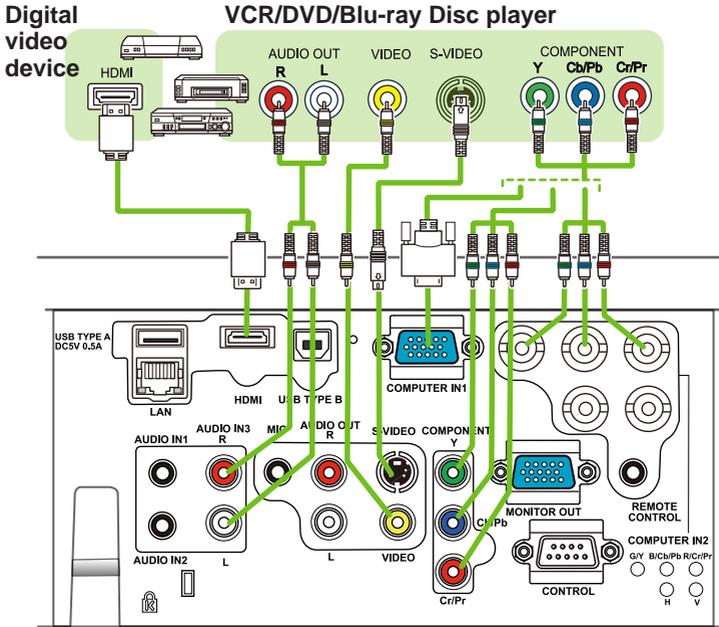


NOTE • The **HDMI** port of this model is compatible with HDCP (High-bandwidth Digital Content Protection) and therefore capable of displaying a video signal from HDCP compatible DVD players and the like.

- The HDMI supports the following video signals:
480i@60, 480p@60, 576i@50, 576p@50, 720p@50/60, 1080i@50/60, 1080p@50/60
- This projector can be connected with other equipment which have HDMI connectors, but with some equipment, the projector may not work properly (such as not displaying video).
- Be sure to use an HDMI cable that has an HDMI logo.
- When connecting the projector to a device with a DVI connector, use a DVI to HDMI cable to connect to the HDMI input.

(continued on next page)

Connecting with your devices (continued)

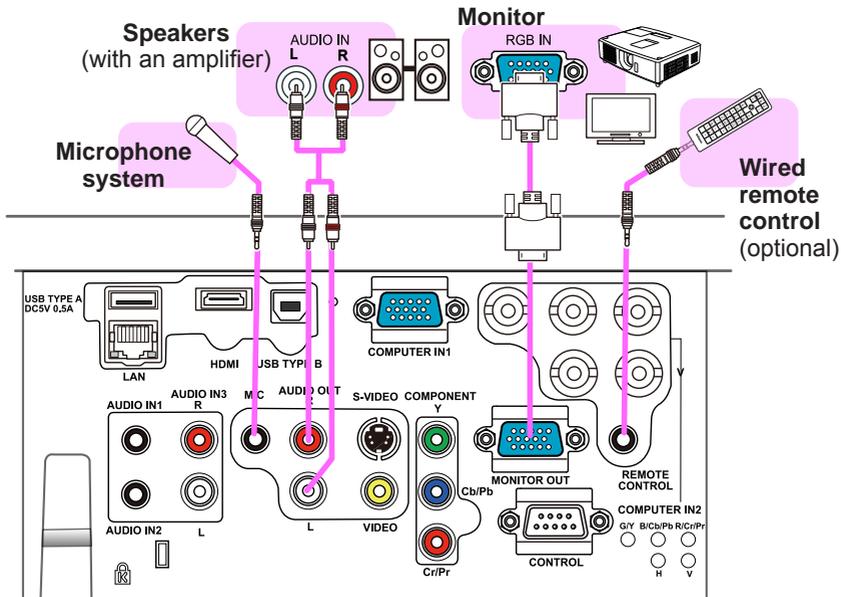


NOTE • If loud feedback noise comes from the speakers, move the microphone away from the speaker.

Microphone feature

- You can connect a dynamic microphone to the **MIC** port with a 3.5 mm mini-plug. In that case, the built-in speaker outputs the sound from the microphone, even when the sound from the projector is output. You can input line level signal to the **MIC** port from equipment such as wireless microphone. Select **HIGH** in the **MIC LEVEL** item of the **AUDIO** menu when you input line level audio signal to the **MIC** port. In the normal mode, the volume of the microphone can be adjusted separately from the volume of the projector using the menu. (41, 42) In the power saving mode, the volume of the microphone is adjustable with the **VOLUME +/-** buttons on the remote control, in synchronization with the volume of the projector. (18)
- Even when the sound of projector is set to mute mode by the **AUDIO SOURCE** feature (41), the volume of the microphone is adjustable.
- The **MUTE** button on the remote control works on the sounds of the microphone and the projector regardless of which mode is being used. (18)
- This projector doesn't support plug-in power for the microphone.

Connecting to a power supply

1. Plug the power cord into the projector's **AC IN** (AC inlet) port.
2. Firmly plug the power cord's plug into the outlet. A few seconds after connecting the power supply, the **POWER** indicator will light steady orange.

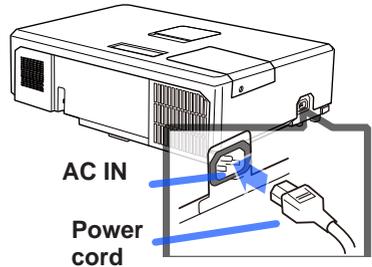

Please remember that when the AC POWER ON feature is activated (49), the power supply connection will turn the projector on.

⚠ WARNING ▶ Please use extra caution when connecting the power cord, as incorrect or faulty connections may result in fire and/or electrical shock.


- Only use the power cord that came with the projector. If it is damaged, contact your dealer to get a new one.
- Only plug the power cord into an outlet whose voltage is matched to the power cord. The power outlet should be close to the projector and easily available. Remove the power cord for complete separation.
- Never modify the power cord.

Using the security bar and slot

A commercially available anti-theft chain or wire can be attached to the security bar on the projector. Refer to the illustration to choose an anti-theft chain or wire.

This product also has a security slot for a Kensington lock.

For details, refer to the security tool manual.

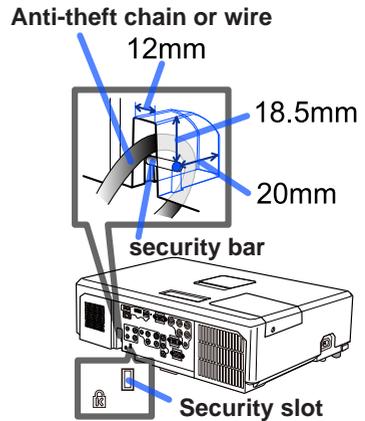

⚠ WARNING ▶ Do not use the security bar and slot to prevent the projector from falling down, since it was not designed for this purpose.

⚠ CAUTION ▶ Do not place the anti-theft chain or wire near the exhaust vents. It may become too hot.

NOTE • The security bar and slot will not prevent theft by themselves. They should be used as supplemental theft prevention measures.

Remote control

Installing the batteries

Please insert the batteries into the remote control before using it. If the remote control starts to malfunction, try replacing the batteries. If you will not be using the remote control for a long period, remove the batteries and store them in a safe place.

1. Holding the hook part of the battery cover, remove it.
2. Align and insert the two AA batteries according to their plus and minus terminals as indicated in the remote control.
3. Replace the battery cover in the direction of the arrow and snap it back into place.




- ⚠ WARNING** ▶ Always handle the batteries with care and use them only as directed. Improper use may result in battery explosion, cracking or leakage, which could result in fire, injury and/or pollution of the surrounding environment.
- Be sure to use only the batteries specified. Do not use different types of batteries simultaneously. Do not mix new batteries with used ones.
 - Make sure the plus and minus terminals are correctly aligned when loading a battery.
 - Keep batteries away from children and pets.
 - Do not recharge, short circuit, solder or disassemble batteries.
 - Do not place batteries in fire or water. Keep batteries in a dark, cool and dry place.
 - If you observe a battery leaking, wipe out the leakage and replace the battery. If the leakage adheres to your body or clothes, rinse well with water immediately.
 - Obey local battery disposal laws.

About the remote control signal

The remote control works with the projector's remote sensor. This projector has a remote sensor on the front. When the sensor is active, the sensor senses the signal within the following range:

60 degrees (30 degrees to the left and right of the sensor)
within approximately 9.8' (3 m).

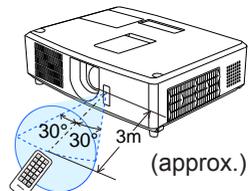


NOTE • You may be able to reflect the remote control signal from the screen. If you are having difficulty sending the signal to the sensor directly, try reflecting the signal.


- The remote control uses infrared light to send signals to the projector (Class 1 LED), so be sure to use the remote control in an area free from obstacles that could block the remote control's signal to the projector.
- The remote control may not work correctly if strong light (e.g. direct sunlight) or light from an extremely close range (e.g. light from an inverter fluorescent lamp) shines on the projector's remote sensor. Adjust the position of the projector to avoid those lights.

Using as a simple PC mouse & keyboard

The accessory remote control works as a simple mouse and keyboard of the computer, when the projector's **USB TYPE B** port and the computer's type A USB port are connected and **MOUSE** is selected for the **USB TYPE B** item in the **OPTION** menu (☞50).

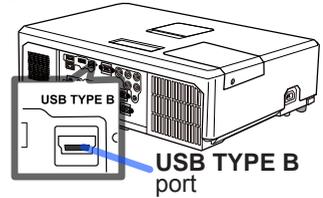

- (1) **PAGE UP key:** Press ▲ button.
- (2) **PAGE DOWN key:** Press ▼ button.
- (3) **Mouse left button:** Press ◀ button.
- (4) **Mouse right button:** Press ▶ button.

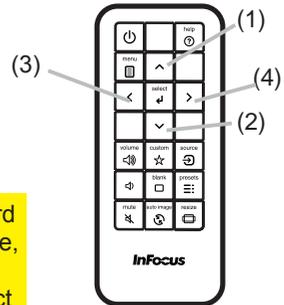

⚠ NOTICE ▶ Improper use of the simple mouse & keyboard feature could damage your equipment. When using this feature, please connect this product only to a computer. Be sure to check your computer's manuals before connecting this product to the computer.


NOTE When the simple mouse & keyboard feature of this product does not work correctly, please check the following.

- When a USB cable connects this projector with a computer having a built-in pointing device (e.g. track ball) like a laptop PC, open BIOS setup menu, then select the external mouse and disable the built-in pointing device, because the built-in pointing device may have priority to this feature.
- Windows 95 OSR 2.1 or higher is required for this feature. And also this feature may not work depending on the computer's configurations and mouse drivers. This feature can work with the computer which can operate general USB mouse or keyboard.
- You cannot do things like press two buttons at once (for instance, pressing two buttons simultaneously to move the mouse pointer diagonally).
- This feature is activated only when the projector is working properly. This feature is not available in any of the following cases:
 - When the lamp is warming up. (The **POWER** indicator blinks in green.)
 - When either **USB TYPE A** or **USB TYPE B** port is selected.
 - When displaying **BLANK** (☞25), **RULED LINES** (☞47) or **MY IMAGE** (☞60) screen.
 - When any menu is displayed on the screen.
 - When using the cursor buttons to operate the sound or screen features such as adjusting the sound volume, correcting the keystone, correcting the image position and magnifying the screen.

Power on and off

Turning on the power

1. Make sure that the power cord is firmly connected correctly to the projector and the outlet.
2. Make sure that the **POWER** indicator is steady orange (📖 89). Then remove the lens cover.
3. Press **STANDBY/ON** on the projector or the remote control.
The projection lamp will light up and the **POWER** indicator will begin blinking green. When the power is completely on, the indicator will stop blinking and become a steady green (📖 89).

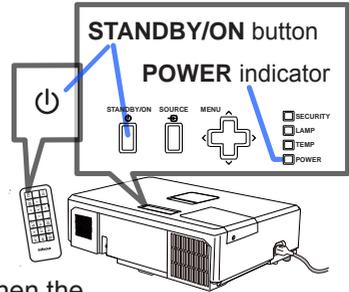

To display an image, select an input signal based on the section **Selecting an input signal** (📖 18).

Turning off the power

1. Press the **STANDBY/ON** button on the projector or the remote control.
The message “Power off?” will appear on the screen for about 5 seconds.
2. Press the **STANDBY/ON** button again when the message appears.
The projector lamp will go off, and the **POWER** indicator will begin blinking in orange. Then the **POWER** indicator will stop blinking and light a steady orange when the lamp has cooled completely (📖 89).
3. Attach the lens cover, after the **POWER** indicator turns steady orange.

Do not turn the projector on for about 10 minutes or more after turning it off. Also, do not turn the projector off immediately after turning it on. Doing so may cause the lamp to malfunction or shorten the lifetime of some parts including the lamp.

⚠ WARNING ▶ A strong light is emitted when the projector’s power is on. Do not look into the projector lens or look inside the projector through any of the projector’s openings.

▶ Do not touch anywhere around the lamp cover or exhaust vents during use or just after use, since it will be too hot.

NOTE • Turn the power on and off in the correct order. Please power on the projector prior to the connected devices.


• This projector has a feature which can make the projector automatically turn on and off. Please refer to the AC POWER ON (📖 49) and AUTO POWER (📖 50) items in the OPTION menu.

Operating

VOLUME +/- button


Adjusting the volume

- Use the **VOLUME +/VOLUME -** buttons to adjust the volume.
 - A dialog will appear on the screen to help you adjust the volume. If you do not do anything, the dialog will automatically disappear after a few seconds.
 - When  is selected for the current image input port, the volume adjustment is disabled. Please see AUDIO SOURCE in the AUDIO menu (41).
 - Even if the projector is in a power saving mode, the volume is adjustable when both of the following conditions are true:
 - An option other than  is selected for STANDBY in the AUDIO SOURCE item of the AUDIO menu (41).
 - DISABLE is the selected POWER SAVING MODE option in the SETUP menu (40).
 - In Power Saving Mode, the volume of the microphone is adjustable with the **VOLUME +/-** buttons on the remote control, in synchronization with the volume of the projector (18).

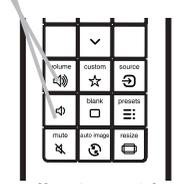



Temporarily muting the sound

- Press **MUTE** button on the remote control.
 - A dialog will appear on the screen indicating that you have muted the sound.
 - To restore the sound, press the **MUTE**, **VOLUME +** or **VOLUME -** button. Even if you do not do anything, the dialog will automatically disappear after a few seconds.
 - When  is selected for the current image input port, the sound is always muted. Please see AUDIO SOURCE in the AUDIO menu (41).
 - CLOSED CAPTIONS is automatically activated when sound is muted and an input signal containing CLOSED CAPTIONS is received. This feature is available only when the signal is NTSC for **VIDEO** or **S-video**, or 480i@60 for **COMPONENT**, **COMPUTER IN1** or **COMPUTER IN2**, and when AUTO is selected for DISPLAY in the CLOSED CAPTIONS menu under the SCREEN menu (48).

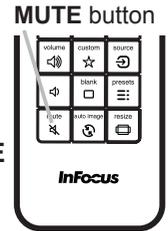

Selecting an input signal

- Press the projector or the remote's **SOURCE** button.
 - Each time you press the button, the projector switches its input port from the current port as below.

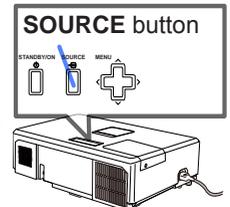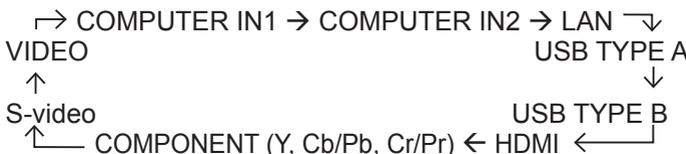

- When AUTOSOURCE has been set to ON in the OPTION menu (49), the projector will repeatedly check the ports in the above order until an input signal is detected.
- It may take several seconds to project the images from the **USB TYPE B** port.

Selecting an aspect ratio

1. Press the **RESIZE** button on the remote control.
 - Each time you press the button, the projector switches the aspect ratio mode as per below.

IN5122: AUTO ⇄ 16:10 ⇄ 16:9 ⇄ 4:3



IN5124: AUTO ⇄ NATIVE ⇄ 16:10 ⇄ 16:9 ⇄ 4:3




Note: For a LAN, USB TYPE A or USB TYPE B port input, or if there is no signal

IN5122: 4:3 (fixed)

IN5124: 16:10 (fixed)

- The AUTO mode keeps the original aspect ratio of the signal.

RESIZE button

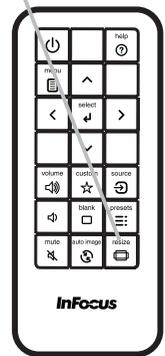



Adjusting the projector's elevator

When the location where the projector is being placed is slightly uneven to the left or right, use the elevator feet to help level the projector horizontally.


Using the feet, you can also tilt the projector to project to a suitable angle to the screen, elevating the front side of the projector up to 12 degrees.

This projector has 2 elevator feet and 2 elevator buttons. An elevator foot can be adjusted when you push the elevator button on the same side as it.

1. Holding the projector, push the elevator buttons to loosen the elevator feet.
2. Position the front side of the projector to the desired height.
3. Release the elevator buttons in order to lock the elevator feet.
4. After making sure that the elevator feet are locked, put the projector down gently.
5. If necessary, the elevator feet can be manually twisted to make more precise adjustments. Hold the projector when twisting the feet.

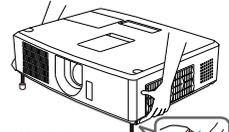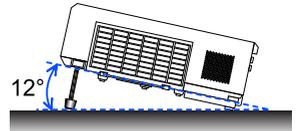

To loosen an elevator foot, push the elevator button on the same side as it.

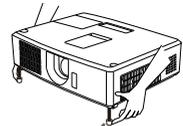


For fine adjustments, twist the foot.

⚠ CAUTION ▶ Do not handle the elevator buttons without holding the projector, since the projector can fall down.

▶ Do not tilt the projector except by elevating its front with the adjuster feet up to 12 degrees. Tilting the projector more than this could cause a malfunction or shorten the lifetime of the projector or projector consumables.

Adjusting the lens

1. Use the **ZOOM** ring to adjust the screen size.
2. Use the **FOCUS** ring to focus the image.
3. Turn the **VERTICAL** adjuster completely counter clockwise. Then turn it clockwise and adjust the vertical lens position upward.
4. Turn the **LOCK** counter clockwise to loosen the lock of the **HORIZONTAL** adjuster.
5. Turn the **HORIZONTAL** adjuster clockwise or counter clockwise to adjust the horizontal lens position.
6. Turn the **LOCK** completely clockwise to tighten it and lock the horizontal lens position.
7. Use the **FOCUS** ring to focus the image.

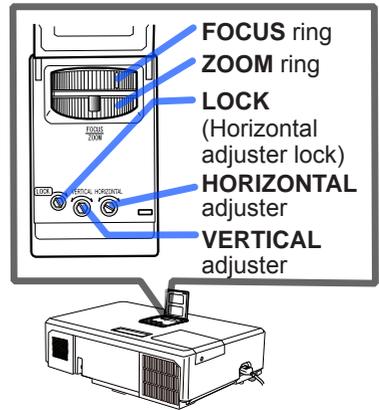

⚠ CAUTION ▶ Operate the lens adjustment controls gently as the lens may malfunction when subjected to jolts. You may need to use more strength using the controls near the end of their range. Be careful not to apply too much strength.

NOTE • Use a hexagon wrench to turn the **VERTICAL, HORIZONTAL** adjustment controls and **LOCK them in place**. If you do not have a hexagon wrench, you can use a flathead screwdriver with careful handling.

- Use the **LOCK** so that the lens does not shift from the adjusted horizontal lens position. Adjusting the vertical lens position may shift the horizontal lens position. This projector is not equipped with a vertical lens position lock.

Using the automatic adjustment feature **AUTO IMAGE** button

- 1 Press the **AUTO IMAGE** button on the remote control.

- Pressing this button performs the following.

- **For a computer signal**

The vertical position, the horizontal position and the horizontal phase will be automatically adjusted.

Make sure that the application window is set to its maximum size prior to attempting to use this feature. A dark image may still be incorrectly adjusted. Use a bright image when adjusting.

- **For a video signal and S-video signal**

The video standard best suited for the respective input signal will be selected automatically. This feature is available only when AUTO is the selected VIDEO STANDARD in the INPUT menu (📖 37). The vertical and horizontal position will be automatically set to the default.

- **For a component video signal**

The vertical and horizontal position will be automatically set to the default. The horizontal phase will be automatically adjusted.

- The automatic adjustment operation requires approximately 10 seconds. Also please note that it may not function correctly with some inputs.
- When this feature is performed for a video signal, certain items (e.g. a line) may appear outside an image.
- When this feature is performed for a computer signal, a black frame may be displayed on the edge of the screen, depending on the PC model.
- The items adjusted by this feature may vary when FINE or DISABLE is selected for the AUTO IMAGE feature in the OPTION>SERVICE menu (📖 52).



 
Correcting the distortion

To correct the distortion of the projected screen, you can select one of three options:

AUTO KEYSTONE: performs automatic vertical keystone correction. (📖 38)

MANUAL KEYSTONE: allows you to adjust the vertical and horizontal keystone.

CORNER CORRECTION: allows you to adjust each of the screen corners and sides to correct the distortion.



NOTE • The menu or dialog will automatically disappear after several seconds of inactivity.
 • When the **TRANSITION DETECTOR** is **ON**, these features are not available (📖 67).

AUTO KEYSTONE


1. Press the **MENU** button to bring up the **BASIC MENU**.
2. Highlight **AUTO KEYSTONE** and press the **▶** or **SELECT** buttons to perform automatic vertical keystone correction.

MANUAL KEYSTONE

1. Press the **MENU** button to bring up the **BASIC MENU**.
2. Select vertical or horizontal keystone (⏏ / ⏏) with the **▲/▼** buttons.
3. Use the **◀/▶** buttons to adjust the keystone distortion.

CORNER CORRECTION

1. Press the MENU button to bring up the BASIC MENU.
2. When CORNER CORRECTION is highlighted, pressing the ► or **SELECT** button displays the CORNER CORRECTION dialog.
3. Select one of the corners or sides to be adjusted with the ▲/▼/◀/▶ buttons and press the **SELECT** button.

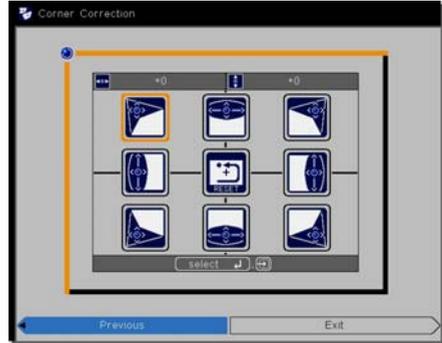

4. Adjust the selected image portion as per below.
 - To adjust a corner, use the ▲/▼/◀/▶ buttons to adjust the position of the corner.
 - To adjust the upper or lower side, use the ◀/▶ buttons to select any one point on the side, and use the ▲/▼ buttons to adjust the distortion of the side.
 - To adjust the left or right side, use the ▲/▼ buttons to select any one point on the side, and use the ◀/▶ buttons to adjust the distortion of the side.
 - To adjust another corner or side press the **SELECT** button and follow the procedure from step 4.


NOTE • Each corner and side can be adjusted individually but in some cases it may be adjusted in conjunction with another corner or side. This is due to control restrictions and is not a malfunction.

5. To close the operation, press the **KEYSTONE** button, or highlight EXIT in the dialog with ▲/▼ buttons and press the ► or **SELECT** button. Alternatively, highlight RETURN in the dialog with the ▲/▼ buttons and press the ◀ or **SELECT** button to return to the menu in step 1.

Temporarily blanking the screen

1. Press the **BLANK** button on the remote control.
 - The BLANK screen will display instead of the input signal image. Please refer to BLANK in the SCREEN menu (📖 43). To exit the BLANK screen and return to the input signal screen, press the **BLANK** button again.
 - The projector automatically exits from the BLANK mode when some control buttons are pressed.

BLANK button

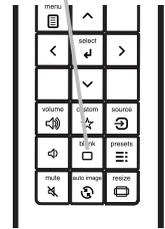


⚠ CAUTION ▶ If you wish to have a blank screen when the projector's lamp is on, use the BLANK feature above.

Taking any other action may cause the damage on the projector.

NOTE • Sound is not affected by the BLANK screen feature. If necessary, mute or adjust volume first. To display the BLANK screen and mute the sound at one time, use the AV MUTE feature (📖 51).

Using the menu features

This projector has the following menus: BASIC MENU, PICTURE, IMAGE, INPUT, SETUP, AUDIO, SCREEN, OPTION, NETWORK, and SECURITY menus. BASIC MENU consists of commonly used features, and the other menus are organized by purpose and brought together in the ADVANCED MENU. Each of these menus can be controlled using the same methods. When the projector is displaying any of the menus, the **MENU** button on the projector also controls the cursor buttons. Basic menu operation follows.

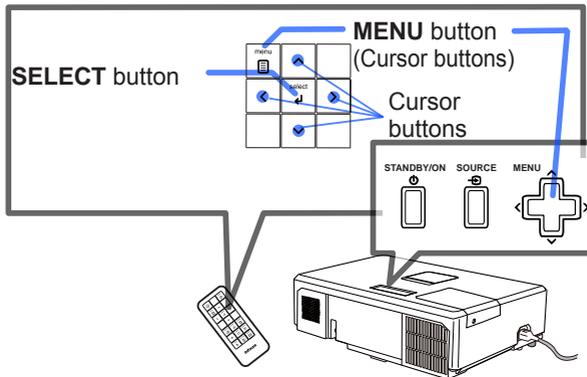

1. To start the MENU, press the **MENU** button. The MENU you last used (BASIC or ADVANCED) will appear. BASIC MENU will appear if the projector was just powered on.
2. **In the BASIC MENU**
 - (1) Use the ▲/▼ cursor buttons to highlight which item you would like to operate. If you want to go to the ADVANCED MENU, select ADVANCED MENU.
 - (2) Use the ◀/▶ cursor buttons to operate the item.



In the ADVANCED MENU

- (1) Use the ▲/▼ cursor buttons to highlight a menu. If you want to go to the BASIC MENU, select the BASIC MENU. The items in the menu appear on the right side.
- (2) Press the ▶ cursor button or **SELECT** button to move the cursor to the right side. Then use the ▲/▼ cursor buttons to select an item to operate and press the ▶ cursor button or **SELECT** button to progress. The operation menu or dialog of the selected item will appear.
- (3) Use the buttons as instructed in the OSD to operate the item.

 


(continued on next page)

Using the menu features (continued)

3. To close the MENU, press the **MENU** button again or select EXIT and press the ◀ cursor button or **SELECT** button. Even if you do not do anything, the dialog will automatically disappear after about 30 seconds.
 - Some features cannot be performed when a certain input port is selected, or when a certain input signal is displayed.
 - In the ADVANCED MENU, when you want to return to the previous display, press the ◀ cursor button on the remote control.

Indication in OSD (On Screen Display)




The meanings of the general words on the OSD are as follows.

Indication	Meaning
EXIT	Exits the OSD menu. It is the same as pressing the MENU button.
RETURN	Returns the menu to the previous menu.
CANCEL or NO	Cancels the operation in the current menu and returns to the previous menu.
OK or YES	Executes the adjustment or shifts the menu to the next menu.

BASIC MENU

From the BASIC MENU, items shown in the table below can be performed.

Highlight an item using the ▲/▼ cursor buttons and then make adjustments based on the table below.

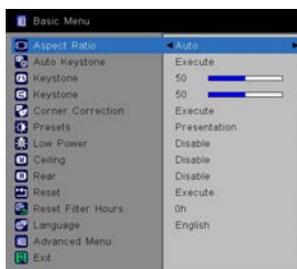

Item	Description																								
ASPECT RATIO	Using the ◀/▶ buttons switches the mode for aspect ratio. See the ASPECT RATIO item in IMAGE menu (33).																								
AUTO KEYSTONE	Using the ▶ button executes auto keystone feature. See the AUTO KEYSTONE item in SETUP menu (38).																								
▲ KEYSTONE	Using the ◀/▶ buttons corrects vertical keystone distortion. See the ▲ KEYSTONE item in SETUP menu (38).																								
◀ KEYSTONE	Using the ◀/▶ buttons corrects horizontal keystone distortion. See the ◀ KEYSTONE in SETUP menu (39).																								
CORNER CORRECTION	Pressing the ▶ button displays CORNER CORRECTION dialog. See the CORNER CORRECTION item in SETUP menu (39).																								
PRESETS	<p>Using the ◀/▶ buttons switches the image mode. The image modes are combinations of GAMMA and COLOR TEMPERATURE settings. Choose the correct mode for the projected source.</p> <p> PRESENTATION ⇄ VIDEO ⇄ DYNAMIC ⇄ BLACKBOARD BRIGHT ⇄ WHITEBOARD ⇄ GREENBOARD </p> <table border="1"> <thead> <tr> <th></th> <th>GAMMA</th> <th>COLOR TEMPERATURE</th> </tr> </thead> <tbody> <tr> <td>PRESENTATION</td> <td>1 DEFAULT</td> <td>2 MID</td> </tr> <tr> <td>VIDEO</td> <td>2 DEFAULT</td> <td>3 LOW</td> </tr> <tr> <td>DYNAMIC</td> <td>3 DEFAULT</td> <td>1 HIGH</td> </tr> <tr> <td>BLACKBOARD</td> <td>4 DEFAULT</td> <td>4 Hi-BRIGHT-1</td> </tr> <tr> <td>GREENBOARD</td> <td>4 DEFAULT</td> <td>5 Hi-BRIGHT-2</td> </tr> <tr> <td>WHITEBOARD</td> <td>5 DEFAULT</td> <td>2 MID</td> </tr> <tr> <td>BRIGHT</td> <td>6 DEFAULT</td> <td>6 Hi-BRIGHT-3</td> </tr> </tbody> </table> <ul style="list-style-type: none"> • When the combination of GAMMA and COLOR TEMPERATURE differs from pre-assigned modes above, the display on the menu for the PRESETS is “CUSTOM”. Please refer to the GAMMA and COLOR TEMPERATURE (30, 31) items in Image menu. • Lines or other noise may appear on the screen when this feature is operated, but this is not a malfunction. 		GAMMA	COLOR TEMPERATURE	PRESENTATION	1 DEFAULT	2 MID	VIDEO	2 DEFAULT	3 LOW	DYNAMIC	3 DEFAULT	1 HIGH	BLACKBOARD	4 DEFAULT	4 Hi-BRIGHT-1	GREENBOARD	4 DEFAULT	5 Hi-BRIGHT-2	WHITEBOARD	5 DEFAULT	2 MID	BRIGHT	6 DEFAULT	6 Hi-BRIGHT-3
	GAMMA	COLOR TEMPERATURE																							
PRESENTATION	1 DEFAULT	2 MID																							
VIDEO	2 DEFAULT	3 LOW																							
DYNAMIC	3 DEFAULT	1 HIGH																							
BLACKBOARD	4 DEFAULT	4 Hi-BRIGHT-1																							
GREENBOARD	4 DEFAULT	5 Hi-BRIGHT-2																							
WHITEBOARD	5 DEFAULT	2 MID																							
BRIGHT	6 DEFAULT	6 Hi-BRIGHT-3																							

(continued on next page)




Item	Description
LOW POWER	Using the ◀/▶ buttons turns the Low Power mode on and off. See LOW POWER in the SETUP menu (439).
CEILING	Using the ◀/▶ buttons switches the ceiling mode. See CEILING in the SETUP menu (439).
REAR	Using the ◀/▶ buttons switches the rear projection mode. See REAR in the SETUP menu (439).
RESET	Performing this resets all of the BASIC MENU items except for RESET FILTER HOURS and LANGUAGE. A confirmation dialog will display. Using the ▶ button selects OK and performs the reset.
RESET FILTER HOURS	The air filter usage time is shown in the menu. Performing this resets the filter timer which counts air filter usage time. A confirmation dialog will display. Using the ▶ button selects OK and performs the reset. See RESET FILTER HOURS in the SERVICE menu (452).
LANGUAGE	Using the ◀/▶ buttons changes the display language. See LANGUAGE in the SCREEN menu (443).
ADVANCED MENU	Press the ▶ or SELECT button to use the PICTURE, IMAGE, INPUT, SETUP, AUDIO, SCREEN, OPTION, NETWORK, and SECURITY menus.
EXIT	Press the ◀ or SELECT button to close the OSD menu.

Picture menu



From the Picture menu, the following items can be performed as shown in the table below. Highlight an item using the ▲/▼ cursor buttons, and press the ► cursor button or **SELECT** button to execute the item. Then make adjustments based on the table below.



Item	Description
BRIGHTNESS	Using the ◀/▶ buttons adjusts brightness. Dark ⇔ Light
CONTRAST	Using the ◀/▶ buttons adjusts contrast. Weak ⇔ Strong
GAMMA	<p>Using the ▲/▼ buttons switches the gamma mode.</p> <p>1 DEFAULT ⇔ 1 CUSTOM ⇔ 2 DEFAULT ⇔ 2 CUSTOM ⇔ 3 DEFAULT ⇕ ⇕ ⇕ 6 CUSTOM 3 CUSTOM ⇕ ⇕ 6 DEFAULT ⇔ 5 CUSTOM ⇔ 5 DEFAULT ⇔ 4 CUSTOM ⇔ 4 DEFAULT</p> <p>To adjust CUSTOM</p> <p>If you highlight one of the CUSTOM modes and then press the ► or the SELECT button, a dialog will appear to help you adjust the mode.</p> <p>This feature is useful when you want to change the brightness of particular tones.</p> <p>Choose an item using the ◀/▶ buttons, and adjust the level using the ▲/▼ buttons.</p> <p>You can display a test pattern to check your adjustment by pressing the SELECT button.</p> <p>Each time you press the SELECT button, the pattern changes as below:</p> <p>No pattern ⇔ Gray scale of 9 steps ⇐ ⇐ ⇐ ⇐ Ramp ⇔ Gray scale of 15 steps</p> <p>The eight equalizing bars correspond to eight tone levels (not the darkest one on the left) of the Gray scale test pattern. To adjust the 2nd tone on the left of the test pattern, use the equalizing adjustment bar “1”.</p> <p>The darkest tone on the left end of the test pattern cannot be controlled with any equalizing adjustment bar.</p> <ul style="list-style-type: none"> • Lines or other noise may appear on the screen when this feature is operated, but this is not a malfunction.

 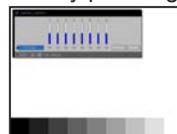 

(continued on next page)

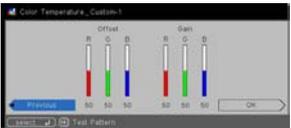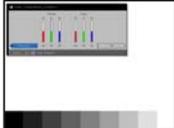Item	Description
<p>COLOR TEMPERATURE</p>	<p>Using the ▲/▼ buttons switches the color temperature mode.</p> <p>1 HIGH ⇔ 1 CUSTOM ⇔ 2 MID ⇔ 2 CUSTOM ⇕ 6 CUSTOM ⇕ 6 Hi-BRIGHT-3 ⇕ 5 CUSTOM ⇔ 5 Hi-BRIGHT-2 ⇔ 4 CUSTOM ⇔ 4 Hi-BRIGHT-1</p> <p style="text-align: right;">⇕ 3 LOW ⇕ 3 CUSTOM ⇕</p> <p>To adjust CUSTOM</p> <p>Highlighting a CUSTOM mode and then pressing the ► or the SELECT button will display a dialog to help you adjust the OFFSET and GAIN of the selected mode.</p>  <p>OFFSET adjustments change the color intensity of the test pattern's whole tones.</p> <p>GAIN adjustments mainly affect color intensity on the test pattern's brighter tones.</p> <p>Choose an item using the ◀/▶ buttons, and adjust the level using the ▲/▼ buttons.</p> <p>You can display a test pattern to check your adjustments by pressing the SELECT button.</p> <p>Each time you press the SELECT button, the pattern changes as below.</p> <p>No pattern ⇔ Gray scale of 9 steps ⇓ ⇑ ⇐ Ramp ⇔ Gray scale of 15 steps</p> <ul style="list-style-type: none"> • Lines or other noise may appear on the screen when this feature is operated, but this is not a malfunction. 
<p>COLOR</p>	<p>Using the ◀/▶ buttons adjusts the strength of whole color.</p> <p>Weak ⇔ Strong</p> <ul style="list-style-type: none"> • This item can only be selected for a video, S-video and component video signal. • For an HDMI™ signal, this item can also be selected if either (1) or (2) applies. <ol style="list-style-type: none"> (1) HDMI FORMAT has been set to VIDEO in the INPUT menu. (2) HDMI FORMAT has been set to AUTO in the INPUT menu, and the projector recognizes the HDMI™ video signal.
<p>TINT</p>	<p>Using the ◀/▶ buttons adjusts the tint.</p> <p>Reddish ⇔ Greenish</p> <ul style="list-style-type: none"> • This item can only be selected for a video, S-video and component video signal. • For an HDMI™ signal, this item can also be selected if either (1) or (2) applies. <ol style="list-style-type: none"> (1) HDMI FORMAT has been set to VIDEO in the INPUT menu. (2) HDMI FORMAT has been set to AUTO in the INPUT menu, and the projector recognizes the HDMI™ video signal.

 
Item	Description
<p>SHARPNESS</p>	<p>Using the ◀/▶ buttons adjusts the sharpness. Weak ⇔ Strong</p> <ul style="list-style-type: none"> • There may be some noise and/or the screen may flicker for a moment when an adjustment is made. This is not a malfunction.
<p>ACTIVE IRIS</p>	<p>Using the ▲/▼ cursor buttons changes the active iris control mode. PRESENTATION ⇔ FILM ⇔ OFF</p>  <p><u>PRESENTATION</u> : The active iris displays the best presentation image for both bright and dark scenes. <u>FILM</u> : The active iris displays the best film image for both bright and dark scenes. <u>OFF</u> : The active iris is always open.</p> <ul style="list-style-type: none"> • The screen may flicker when PRESENTATION or FILM modes are selected. If this occurs select OFF.
<p>USER PRESET</p>	<p>This projector has 4 options to save the user's custom Image menu settings. Highlight one of the options using the ▲/▼ buttons and press the ▶ or SELECT button to load/save the current user Image menu settings.</p>  <p><u>SAVE-1, SAVE-2, SAVE-3, SAVE-4</u> Performing a SAVE option saves the current Image menu settings into the option associated with the number included in the option's name.</p> <ul style="list-style-type: none"> • Remember the current settings being stored will override pre-existing settings in that SAVE option. <p><u>LOAD-1, LOAD-2, LOAD-3, LOAD-4</u> Performing a LOAD option loads the saved settings linked to the option associated with the number included in the option's name, and adjusts the image automatically based on the saved settings.</p> <ul style="list-style-type: none"> • LOAD options which have no saved settings are skipped. • Remember the current settings will be overridden by loading the new settings. If you want to save your current settings, please save them before performing a LOAD. • There may be some noise, and the screen may flicker for a moment when loading data. This is not malfunction. • You can perform a LOAD using CUSTOM KEY. Please see CUSTOM KEY item in OPTION menu (51).

IMAGE menu

From the IMAGE menu, the following items shown in the table below can be performed.

Highlight an item using the ▲/▼ cursor buttons, and press the ► cursor button or **SELECT** button to select the item. And then make changes per the following table.



Item	Description
ASPECT RATIO	<p>Using the ▲/▼ buttons switches the mode for aspect ratio.</p> <p>IN5122: AUTO ⇄ 16:10 ⇄ 16:9 ⇄ 4:3</p> <p style="text-align: center;">↑—————↑</p> <p>IN5124: AUTO ⇄ NATIVE ⇄ 16:10 ⇄ 16:9 ⇄ 4:3</p> <p style="text-align: center;">↑—————↑</p> <p>Note: For a LAN, USB TYPE A or USB TYPE B port input, or if there is no signal</p> <p>IN5122: 4:3 (fixed) IN5124: 16:10 (fixed)</p> <ul style="list-style-type: none"> • The AUTO mode keeps the original aspect ratio of the signal.
OVERSCAN	<p>Using the ◀/▶ buttons adjusts the overscan ratio.</p> <p>CROP ⇄ ZOOM ⇄ OFF</p> <ul style="list-style-type: none"> • This item can only be selected for a video, S-video and component video signal. • For an HDMI™ signal, this item can also be selected if either (1) or (2) applies. <ul style="list-style-type: none"> (1) HDMI FORMAT has been set to VIDEO in the INPUT menu. (2) HDMI FORMAT has been set to AUTO in the INPUT menu, and the projector recognizes the HDMI™ video signal.

(continued on next page)

Item	Description
VERTICAL POSITION	<p>Using the ◀/▶ buttons adjusts the vertical position. Down ⇔ Up</p> <ul style="list-style-type: none"> • Over-adjusting the vertical position may cause noise to appear on the screen. If this occurs, please reset the vertical position to its default setting. • When this feature is performed on a video signal or an S-video signal, the range of this adjustment depends on OVERSCAN (📖 33) setting. When OVERSCAN is set to 10, you cannot adjust this feature. • This feature is not available for LAN, USB TYPE A, USB TYPE B or HDMI port input signals.
HORIZONTAL POSITION	<p>Using the ◀/▶ buttons adjusts the horizontal position. Right ⇔ Left</p> <ul style="list-style-type: none"> • Over-adjusting the horizontal position may cause noise to appear on the screen. If this occurs, please reset the horizontal position to its default setting. • When this feature is performed on a video signal or an S-video signal, the range of this adjustment depends on OVERSCAN (📖 33) setting. When OVERSCAN is set to 10, you cannot adjust this feature. • This feature is not available for LAN, USB TYPE A, USB TYPE B or HDMI port input signals


(continued on next page)

Item	Description
PHASE	<p>Using the ◀/▶ buttons adjusts the horizontal phase to eliminate flicker. Right ⇔ Left</p> <ul style="list-style-type: none"> • This feature is only available for computer and component signals. It is not available for LAN, USB TYPE A, USB TYPE B or HDMI™ port signals..
TRACKING	<p>Using the ◀/▶ buttons adjusts the horizontal size. Small ⇔ Large</p> <ul style="list-style-type: none"> • This feature is only available for computer signals. It is not available for LAN, USB TYPE A, USB TYPE B or HDMI™ port signals. • When the adjustment is excessive, the image will not be displayed correctly. • Images may appear degraded when this feature is operated, but this is not a malfunction.
AUTO IMAGE	<p>Selecting this causes the projector to automatically adjust.</p> <p>For a computer signal The vertical position, the horizontal position and the horizontal phase will be automatically adjusted. Make sure that the application window is set to its maximum size before using this feature. A dark image may still be incorrectly adjusted. Use a bright image when adjusting.</p> <p>For a video signal and S-video signal The video standard best suited for the respective input signal will be selected automatically. This feature is available only when VIDEO STANDARD has been set to AUTO in the INPUT menu (p.37). The vertical position and horizontal position will be automatically set to the default.</p> <p>For a component video signal The vertical position and horizontal position will be automatically set to the default. The horizontal phase will be automatically adjusted.</p> <ul style="list-style-type: none"> • The automatic adjustment feature requires approx. 10 seconds. Also this feature may not function correctly with some inputs. • When this feature is performed for a video signal, an extra item such as a line may appear outside the image. • When this feature is performed for a computer signal, a black frame may be displayed on the edge of the screen, depending on the PC model. • The items adjusted by this feature may vary when AUTO IMAGE is set to FINE or DISABLE in the OPTION>SERVICE menu (p.52).

INPUT menu


From the INPUT menu, the items in the table below can be performed.

Highlight an item using the ▲/▼ cursor buttons, and press the ► cursor or **SELECT** button to select the item. Then make adjustments per the following table.

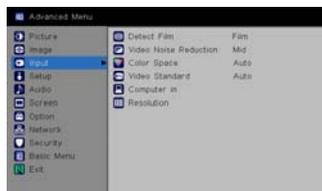

Item	Description
DETECT FILM	<p>Using the ▲/▼ buttons switches the progress mode. TV ⇄ FILM ⇄ OFF ↑—————↑</p> <ul style="list-style-type: none"> • This feature only works with video, S-video, component video (480i@60, 576i@50 or 1080i@50/60) and HDMI™ (480i@60, 576i@50 or 1080i@50/60) signals. • When TV or FILM is selected, the screen image will be sharp. FILM adapts to the 2-3 Pull-Down conversion system. But this may cause certain image defects (for example, jagged lines) when viewing quick moving objects. If that happens, please select OFF, even though the screen image may lose sharpness.
VIDEO NOISE REDUCTION	<p>Using the ▲/▼ buttons switches the noise reduction mode. HIGH ⇄ MID ⇄ LOW ↑—————↑</p> <ul style="list-style-type: none"> • This feature only works with video, S-video, component video (480i@60, 576i@50 or 1080i@50/60) and HDMI™ (480i@60, 576i@50 or 1080i@50/60) signals.
COLOR SPACE	<p>Using the ▲/▼ buttons switches the mode for color space. AUTO ⇄ RGB ⇄ REC709 ⇄ REC601 ⇄ RGB VIDEO ↑—————↑</p> <ul style="list-style-type: none"> • This feature can only be selected for computer signals (excluding LAN, USB TYPE A and USB TYPE B port signals) and component video signals. • The AUTO mode automatically selects the optimum mode. • The AUTO operation may not work well with some signals. If that happens, any option other than AUTO is recommended.

 (continued on next page)

Item	Description
<p style="text-align: center;">VIDEO STANDARD</p>	<p>The video standard for the S-video port and VIDEO port can be selected.</p> <p>(1) Use the ▲/▼ buttons to highlight the input port.</p> <p>(2) Using the ◀/▶ buttons switches the video standard mode.</p> <p style="text-align: center;">AUTO ⇄ NTSC ⇄ PAL ⇄ SECAM ⇄ N-PAL ⇄ M-PAL ⇄ NTSC4.43 ⇄</p> <p>• This feature is only for video signals from the VIDEO or S-video ports.</p> <p>• The AUTO mode automatically selects the optimum mode.</p> <p>• AUTO may not work well with some signals. If the image becomes unstable (e.g. an irregular image, lack of color), please select the mode appropriate for the input signal.</p> 
<p style="text-align: center;">COMPUTER IN</p>	<p>The computer input signal type for COMPUTER IN1 and IN2 ports can be selected.</p> <p>(1) Use the ▲/▼ buttons to highlight the desired COMPUTER IN port.</p> <p>(2) Use the ◀/▶ buttons to select the computer input signal type.</p> <p style="text-align: center;">AUTO ⇄ SYNC ON G OFF</p> <p>• Selecting AUTO allows you to input a sync on G signal or component video signal from the port.</p> <p>• In the AUTO mode, the image may be distorted with certain input signals. In this situation, remove the signal connector so that no signal is received and select the SYNC ON G OFF, and then reconnect the signal.</p> 
<p style="text-align: center;">RESOLUTION</p>	<p>The COMPUTER IN1 and COMPUTER IN2 input signal resolutions can be selected for this projector.</p> <p>(1) Highlight RESOLUTION from the INPUT menu using the ▲/▼ buttons and press the ▶ button. The RESOLUTION menu will be displayed.</p> <p>(2) In the RESOLUTION menu, highlight the resolution you wish to display using the ▲/▼ buttons. Selecting AUTO will set a resolution appropriate to the input signal.</p> <p>(3) Pressing the ▶ or SELECT button when selecting a STANDARD resolution will automatically adjust the horizontal and vertical positions, clock phase and horizontal size. The SOURCE_INFO dialog will display.</p> 

SETUP menu



From the SETUP menu, items shown in the table below can be performed.

Highlight an item using the ▲/▼ cursor buttons, and press the ► cursor button or **SELECT** button to select the item. Then make adjustments according to the table below.



Item	Description
<p>AUTO KEYSTONE</p>	<p>Selecting this feature performs automatic keystone distortion correction. The projector automatically corrects vertical keystone distortion due to the (forward/backward) setup angle by itself. This feature only executes once when selected in the menu. When the projector angle changes, select this feature again.</p> <ul style="list-style-type: none"> • The adjustable range of this feature will vary based on the input. For some inputs, this feature may not work well. • When CEILING or REAR is enabled in the SETUP menu and the projector screen is inclined or angled downward, this feature may not work correctly. • When the zoom adjustment is set to the TELE (telephoto focus), this feature may be excessive. This feature should be used when the zoom adjustment is set to full WIDE (wide-angle focus) whenever possible. • When the projector is placed on the level (about $\pm 4^\circ$), this feature may not work. • When the projector is inclined close to or greater than 30°, this feature may not work well. • This feature is unavailable when the TRANSITION DETECTOR (📖67) is ON or when the screen is adjusted by CORNER CORRECTION (📖24).
<p>KEYSTONE</p>	<p>Using the ◀/▶ buttons corrects the vertical keystone distortion.</p> <p>Shrink the bottom of the image ⇔ Shrink the top of the image</p> <ul style="list-style-type: none"> • The adjustable range of this feature will vary based on the input. For some inputs, this feature may not work well. • When the zoom adjustment is set to the TELE (telephoto focus), this feature may be excessive. This feature should be used when the zoom adjustment is set to the full WIDE (wide-angle focus) whenever possible. • This feature is unavailable when the TRANSITION DETECTOR (📖67) is ON or when the screen is adjusted by CORNER CORRECTION (📖24).

  (continued on next page)

Item	Description
 KEYSTONE	<p>Using the ◀/▶ buttons corrects the vertical keystone distortion. Shrink the right side of the image ⇔ Shrink the left side of the image.</p> <ul style="list-style-type: none"> • The adjustable range of this feature will vary based on the input. For some inputs, this feature may not work well. • When the horizontal lens shift is not set to the center, this feature may not work well. • This feature is unavailable when the TRANSITION DETECTOR (67) is ON or the screen is adjusted by CORNER CORRECTION (24).
<p>CORNER CORRECTION</p>	<p>Selecting this item displays the CORNER CORRECTION dialog. For details, refer to CORNER CORRECTION in Correcting the distortion (24).</p> <ul style="list-style-type: none"> • This feature is unavailable when the TRANSITION DETECTOR is ON (67).
<p>LOW POWER</p>	<p>Using the ▲/▼ buttons turns LOW POWER on and off. ENABLE ⇔ DISABLE</p> <ul style="list-style-type: none"> • When the ENABLE is selected, acoustic noise and screen brightness are reduced.
<p>CEILING</p>	<p>Using the ▲/▼ buttons switches the ceiling mode.</p> <div style="text-align: center;">  <p>ENABLE ⇔ DISABLE</p>  </div> <p>If the TRANSITION DETECTOR is ON and the CEILING status changes, the TRANSITION DETECTOR ON alarm (67) will display when projector is hard-powered off (AC power is turned off) and back on.</p>
<p>REAR</p>	<p>Using the ▲/▼ buttons switches the rear projection mode.</p> <div style="text-align: center;">  <p>ENABLE ⇔ DISABLE</p>  </div> <p>If the TRANSITION DETECTOR is ON and the REAR status changes, the TRANSITION DETECTOR ON alarm (67) will display when projector is hard-powered off (AC power is turned off) and back on.</p>

(continued on next page)

Item	Description
<p>POWER SAVING MODE</p>	<p>Using ▲/▼ buttons switches the power saving mode setting between ENABLE and DISABLE. ENABLE ⇔ DISABLE</p> <p>When ENABLE is selected, the power consumption in the power saving mode is lowered with some functional restrictions as per below:</p> <ul style="list-style-type: none"> • When ENABLE is selected and the projector is in power saving mode, all RS-232C communication control commands are disabled except for the projector's power on command. If COMMUNICATION TYPE is set to NETWORK BRIDGE in the COMMUNICATION menu, all of the RS-232C commands are disabled (453). • When ENABLE is selected and the projector is in power saving mode, the AUDIO SOURCE>STANDBY setting (47) is overridden, and no audio is output from AUDIO OUT port. • When ENABLE is selected and the projector is in power saving mode, the MONITOR OUT DEFAULT>STANDBY setting is overridden, and no signal is output from MONITOR OUT port.
<p>MONITOR OUT DEFAULT</p>	<p>When the image signal from the input port chosen in step (1) is projected, the image signal from the input port selected in step (2) is output to the MONITOR OUT port.</p> <p>(1) Choose an image input port using ▲/▼ buttons. Choose STANDBY to select the image output in the power saving mode.</p> <p>(2) Select one of the COMPUTER IN ports using ◀/▶ buttons. Select OFF to disable the MONITOR OUT port for the input port or power saving mode.</p> <p>• You cannot select COMPUTER IN1 and COMPUTER IN2 for step (1) and step (2) respectively (or vice versa).</p>  <p>The screenshot shows a menu titled 'Monitor Out Default' with two columns of options. The left column lists input ports: 'Computer in 1', 'Computer in 2', 'LAN', 'USB Type A', 'USB Type B', 'HDMI', 'Component', 'Video', and 'Standby'. The right column lists output ports: '1', '2', and 'Off'. Each option has a selection indicator (a circle with a dot or an empty circle). 'Computer in 1' and 'Computer in 2' are selected in the left column. '1' is selected in the right column. At the bottom, there are 'Previous' and 'Exit' buttons.</p>

AUDIO menu

From the AUDIO menu, items shown in the table below can be performed. Highlight an item using the ▲/▼ cursor buttons, and press the ► cursor or the **SELECT** button to select the item. Then make adjustments per the following table.



Item	Description
VOLUME	Using the ◀/▶ buttons adjusts the volume. LOW ⇔ HIGH
INTERNAL SPEAKERS	Using the ▲/▼ buttons turns the built-in speaker on and off. ENABLE ⇔ DISABLE When DISABLE is selected, the built-in speaker will not work.
AUDIO SOURCE	<p>When the image signal from the input port chosen in step (1) is projected, the audio signal from the input port selected in step (2) is output to both the AUDIO OUT port and built-in speaker of this projector. However, the built-in speaker does not work when INTERNAL SPEAKERS is set to OFF.</p> <p>(1) Choose an image input port using the ▲/▼ buttons. Choose STANDBY to select the sound output in the power saving mode.</p> <p>(2) Select one of the AUDIO IN ports using ◀/▶ buttons. Select ✕ to mute the sound from the input port or in the power saving mode chosen in step (1).</p> <p>• In the AUDIO SOURCE window, “H” symbolizes the audio signal from the HDMI port. It can only be selected for the image input from the HDMI port.</p> <p>• Even if the projector is in power saving mode, cooling fans may continue to operate and make noise when the built-in speakers are in operation.</p> <p>• CLOSED CAPTIONS is automatically activated when ✕ is selected and an input signal containing Closed Captioning is received. This feature is available only when the signal is NTSC for VIDEO or S-video, or 480i@60 for COMPONENT, COMPUTER IN1 or COMPUTER IN2, and when AUTO is selected for DISPLAY in the CLOSED CAPTIONS menu under the SCREEN menu (48).</p>



(continued on next page)

Item	Description
HDMI NOISE CANCEL	Using the ▲/▼ buttons switches the HDMI NOISE CANCEL mode. Select the best mode for your HDMI audio device. ENABLE ⇔ DISABLE
MIC LEVEL	Using the ▲/▼ buttons switches the input level to match that of the microphone connected to the MIC port. HIGH ⇔ LOW HIGH: for a microphone with an amplifier. LOW: for a microphone without an amplifier.
MIC VOLUME	Using the ◀/▶ buttons adjusts the volume of the microphone connected to the MIC port. LOW ⇔ HIGH

Item	Description
CAPTURE NEW	<p>This feature allows you to capture an image for use as a SNAPSHOT image which then can be used as both a BLANK screen and a START UP LOGO screen. Display the image you want to capture before executing the following procedure.</p> <ol style="list-style-type: none"> 1. Selecting this item displays a dialog called "CAPTURE NEW". It will ask you if are ready to start capturing an image from the current screen. <div data-bbox="729 371 1034 432" style="border: 1px solid black; padding: 2px;"> </div> <p>Please wait for the target image to be displayed, and press the SELECT button. The image will freeze and the frame for capturing will appear.</p> 2. Using the ▲/▼/◀/▶ buttons, adjust the frame position. <div data-bbox="804 517 986 660" style="border: 1px solid black; padding: 2px;"> </div> <p>Move the frame to the position of the image which you want to use. The frame may not move for some input signals. To start the capture, press the SELECT button on the remote control.</p> <div data-bbox="768 667 1034 719" style="border: 1px solid black; padding: 2px;"> </div> <p>The capturing process may take several minutes. When the capture process is completed, the captured screen and the following message is displayed for several seconds:</p> <p style="text-align: center;">"Capture success."</p> <p>If the capture failed, the following message is displayed:</p> <p style="text-align: center;">"A capturing error has occurred. Please try again."</p> <ul style="list-style-type: none"> • This feature cannot be selected if the CAPTURE LOCK is set to ON (45). • This feature cannot be selected if the SNAPSHOT PASSWORD is set to ON in the SECURITY menu (65). • This feature is unavailable for LAN, USB TYPE A, USB TYPE B and HDMI™ port signals.

(continued on next page)

Item	Description
CAPTURE LOCK	<p>Using the ▲/▼ buttons turns the CAPTURE LOCK feature on and off. ON ⇔ OFF</p> <p>When the ON is selected, the item SNAPSHOT is locked. Use this feature to protect the current SNAPSHOT.</p> <ul style="list-style-type: none"> • This feature cannot be selected if the SNAPSHOT PASSWORD is set to ON in SECURITY menu (65).
DISPLAY MESSAGES	<p>Using the ▲/▼ buttons turns the message feature on and off. ENABLE ⇔ DISABLE</p> <p>When ENABLE is selected, the following message feature works.</p> <p>“AUTO IN PROGRESS” when automatic adjustment is occurring “NO SOURCE IS DETECTED” “SYNC IS OUT OF RANGE” “INVALID SCAN FREQ.” “Searching....” when searching for the input “Detecting....” when an input signal is detected</p> <p>The input signal indicator is displayed when changing sources The aspect ratio indicator is displayed when changing formats The PRESETS indicator is displayed when changing modes The ACTIVE IRIS is indicator displayed when changing the iris The USER PRESETS is indicator displayed when changing USER PRESETS The RULED LINES indicator is displayed when changing patterns.</p>

(continued on next page)

Item	Description
<p>SOURCE NAME</p>	<p>Each input port's name can be customized on this projector.</p> <ol style="list-style-type: none"> (1) Use the ▲/▼ buttons on the SCREEN menu to highlight SOURCE NAME and press the ► or SELECT button. The SOURCE NAME menu will display. (2) Use the ▲/▼ buttons on the SOURCE NAME menu to highlight the port to be named and press the ► button. The SOURCE NAME dialog will display. The right side of the menu will be blank until a name is specified. (3) Select an icon you would like to assign to the port in the SOURCE NAME dialog. The name assigned to the port will automatically change based on your icon selection. Press the SELECT button to save your icon selection. (4) Select a number you would like to assign to the port along with the icon. You can choose 1, 2, 3, 4, or blank (no number will be assigned). Then press the SELECT button. (5) To modify the name assigned to the port, select CUSTOM NAME and press the SELECT button. <div style="display: flex; flex-direction: column; align-items: flex-end;">     </div>

(continued on next page)

Item	Description
<p>SOURCE NAME (Continued)</p>	<p>(6) The current name will display on the first line. Use the ▲/▼/◀/▶ buttons and the SELECT button to select and enter characters. To erase 1 character at a time, press the ◀ and SOURCE button simultaneously. You can also move the cursor to DELETE or ALL CLEAR and press the SELECT button to erase a single character or all characters. The name can be a maximum of 16 characters.</p>  <p>(7) To change an existing character, press the ▲ button to move the cursor to the first line, and use the ◀/▶ buttons to move the cursor onto the character to be changed. After pressing the SELECT button, the character is selected. Then, follow the same procedure as described in step (6) above.</p> <p>(8) To finish entering text, move the cursor to OK on the dialog and press the ▶, SELECT button. To revert to the previous name without saving changes, move the cursor to CANCEL and press the ◀, SELECT button.</p>
<p>RULED LINES</p>	<p>Using the ▲/▼ cursor buttons switches the pattern screen mode. Press the ▶ cursor (or the SELECT) button to display the selected pattern, and press the ◀ cursor button to close the displayed screen.</p> <p>→TEST PATTERN ⇔ STACK ⇔ MAP2 ⇔ MAP1⇔ CIRCLE ON BLACK ⇔ CIRCLE ON WHITE ⇔ GRID ON BLACK ⇔ GRID ON WHITE ⇔ LINES ON BLACK ⇔ LINES ON WHITE ←</p> <p>If CUSTOM KEY is set to RULED LINES, then the last selected pattern will be displayed when the CUSTOM KEY on the remote is pressed (📖51).</p>

(continued on next page)

Item	Description
<p>CLOSED CAPTIONS</p>	<p>Closed captioning displays a transcript or dialog of the audio portion of a video, files, presentation or other relevant sounds. An NTSC format video or a 480i@60 format component video source which supports closed captioning is required to use this feature.</p>  <p>Closed captioning may not work properly, depending on equipment or signal source. In this case, please turn CLOSED CAPTIONS off. Select the closed captioning DISPLAY from the following options using ▲/▼ buttons.</p> <p>CC1 ⇔ CC2 ⇔ OFF</p> <p style="text-align: center;">↑—————↑</p> <ul style="list-style-type: none"> • Closed captions are not displayed when the OSD menu is active. • Closed captioning displays the dialogue, narration, and / or sound effects of a television program or other video sources. Closed captioning availability depends upon the broadcaster and/or content.

OPTION menu



From the OPTION menu, items shown in the table below can be performed. Highlight an item using the ▲/▼ cursor buttons, and press the ► cursor or the **SELECT** button to select the item (except for **RESET LAMP HOURS** and **RESET FILTER HOURS**). Then make adjustments per the following table.

Item	Description
AUTOSOURCE	<p>Using the ▲/▼ buttons turns the automatic signal search feature on and off. ENABLE ⇔ DISABLE</p> <p>When ENABLE is selected and no signal is detected, this feature will automatically cycle through the input ports in the following order. The search starts from the current port. When an input is found, the projector will stop searching and display the image.</p> <p> </p> <ul style="list-style-type: none"> It may take several seconds to project images from the USB TYPE B port.
AUTO KEYSTONE	<p>Using the ▲/▼ buttons turns the automatic keystone feature on and off. ENABLE ⇔ DISABLE</p> <p>ENABLE : Automatic keystone distortion correction will be executed whenever the projector's slant is changed.</p> <p>DISABLE : This feature is disabled when OFF is selected. Select AUTO KEYSTONE (EXECUTE) in the SETUP menu for automatic keystone distortion correction.</p> <ul style="list-style-type: none"> When the projector is ceiling mounted, this feature will not function properly and therefore should be turned to DISABLE. This feature will be unavailable when the Transition Detector is on (67).
AC POWER ON	<p>Using the ▲/▼ buttons turns AC POWER ON on and off. ENABLE ⇔ DISABLE</p> <p>When set to ENABLE, the projector (and its lamp) will automatically turn on when power is supplied to the projector (17).</p> <ul style="list-style-type: none"> If the projector is turned on via AC POWER ON but has no signal input or user operation within approximately 30 minutes, the projector will be turned off regardless of whether the AUTO POWER feature (50) has been disabled.

(continued on next page)

Item	Description
AUTO POWER	<p>Automatically turns the projector off after no signals are detected for 30 minutes.</p> <p>Please refer to Turning off the power (17).</p>
USB TYPE B	<p>Using the ▲/▼ buttons selects the USB TYPE B port feature. To use this feature, you need to connect the USB TYPE B projector port and the type A USB port of a computer.</p> <p>MOUSE ⇔ USB DISPLAY</p> <p>MOUSE : The projector remote control will operate simple mouse and keyboard functions of the computer.</p> <p>USB DISPLAY : Image signals from a computer will be transmitted through the USB TYPE B port (79).</p> <ul style="list-style-type: none"> • It may take several seconds to project images from the USB TYPE B port. • In the following scenarios, a message will appear notifying you that USB TYPE B port is not available for image input (together with the USB TYPE B dialog): <ul style="list-style-type: none"> - The setting is switched to MOUSE when an image from the USB TYPE B port is projected. - The USB TYPE B port is selected for image input when this setting is set to MOUSE. Select USB DISPLAY in the dialog to project the image input to the USB TYPE B port. In this case, you cannot use the simple mouse and keyboard feature. Select another port for image input if mouse/keyboard functionality is desired.

(continued on next page)

Item	Description
CUSTOM KEY	<p>This item assigns one of the following features to CUSTOM on the remote control (Ⓜ6).</p> <p>(1) Use the ▲/▼ buttons on the CUSTOM KEY menu to select a CUSTOM KEY and press the ► or SELECT button to display the CUSTOM KEY setup dialog.</p> <p>(2) Then using the ▲/▼/◀/▶ buttons sets one of the following features to the chosen button. Press the SELECT button to save the setting.</p> <ul style="list-style-type: none"> • BLANK: Displays an empty screen. • MUTE Turns off all sound. • ASPECT RATIO: Sets the ratio of image width to image height. • SOURCE: Cycles through available sources. • AUTO IMAGE: Resynchronizes the projector to the source. • FREEZE: Pauses the projected image. • MAGNIFY: Magnifies the projected image. • SOURCE INFO: The default action. Shows the Source Info menu. • SERVICE INFO: Shows the Service Info menu. • AV MUTE: Turns the image and audio on and off. • RULED LINES: Makes the pattern selected in the RULED LINES item appear or disappear. • SLIDESHOW: Selects the USB TYPE A input, and starts a Slideshow. • MY IMAGE: Displays the MY IMAGE menu. • MESSENGER: Turns the messenger text displayed on the screen on and off (Ⓜ Messenger Feature in the Network Guide). <p>When there is no transferred text data to display, the message "NO MESSENGER DATA" appears.</p> <ul style="list-style-type: none"> • AUTO KEYSTONE: Performs automatic keystone distortion correction. • ACTIVE IRIS: Changes the active iris mode. • RESET FILTER HOURS: Displays the filter hours reset confirmation dialogue. • RESOLUTION: Turns the RESOLUTION dialog on and off. • MIC VOLUME: Turns the MIC VOLUME dialog on and off. • LOW POWER: Turns the LOW POWER dialog on and off.
SOURCES	Enables or disables Source Keys on the optional Commander-2 remote.
POWER-UP SOURCE	Determines which source the projector checks first for active video during power-up.

Item	Description
SERVICE (continued)	<p>FILTER MESSAGE</p> <p>Use the ▲/▼ button to set the timer which notifies users when it is time to replace the filter unit:</p> <p>100h ⇔ 200h ⇔ 500h ⇔ 1000h ⇔ 2000h ⇔ 5000h ⇔ OFF</p> <p>After choosing the desired hours parameter (excluding OFF), the message “REMINDER *** HRS PASSED” will appear after the timer reaches the interval time set by this feature (☞ 89).</p> <p>When OFF is chosen, the message will not appear. Use this feature to select an appropriate time parameter for your projector environment and to keep your filter clean.</p> <ul style="list-style-type: none"> • Monitor and clean the filter unit periodically, even if there is no message. If the air filter becomes blocked by dust or other matter, the internal temperature will rise, which can cause the projector to malfunction and reduce the projector's lifetime. • Take good care of the projector's operating environment and the filter unit.
	<p>KEY LOCK</p> <p>Use the ▲/▼ buttons to highlight the item you want to adjust.</p> <p>ENABLE ⇔ DISABLE</p>  <ul style="list-style-type: none"> • This feature can be used to prevent tampering or accidental operation.
<p>COMMUNICATION</p>	<p>Selecting this item displays the COMMUNICATION menu.</p> <p>In this menu, you can configure the projector's serial communication settings using the CONTROL port.</p>  <ul style="list-style-type: none"> • Highlight an item using the cursor buttons ▲/▼. Then press the ► button to open the submenu for the item you selected. Or, press the ◀ button to go to the previous menu without changing the setup. Each submenu can be operated as described above. • When COMMUNICATION TYPE (☞ 54) is set to OFF, all the other items in the COMMUNICATION menu are invalid. • For more information about serial communication, refer to the Network Guide.

Item	Description	
<p style="text-align: center;">SERVICE (continued)</p>	<p style="text-align: center;">COMMUNICATION (continued)</p>	<p>RESPONSE LIMIT TIME Select the desired wait time for response data from the external device communicating via the NETWORK BRIDGE and the HALF-DUPLEX mode through the CONTROL port.</p> <p style="text-align: center;">OFF ⇔ 1s ⇔ 2s ⇔ 3s </p> <p>OFF: Select OFF when it is not necessary to check for responses from the external device that the projector is sending data to. In this mode, the projector can send data from the computer out continuously.</p> <p>1s /2s /3s: Select the time period the projector needs to wait for responses from the external device that it is sending data to. The projector cannot send data from its CONTROL port to the external device when it is waiting for responses from the external device.</p> <ul style="list-style-type: none"> • This menu is available only when the COMMUNICATION TYPE is set to NETWORK BRIDGE and the TRANSMISSION METHOD is set to HALF-DUPLEX (📖 54). • OFF is the default setting.
		<p>SERIAL PORT ECHO</p> <p>Controls whether the serial port echoes characters.</p>
		<p>STACK</p> <p>Selecting this item displays the STACK menu. For more information, please see Instant Stack Guide.</p>


Item	Description
SERVICE (continued)	<p>SOURCE INFO A read-only display of current source settings.</p>  <ul style="list-style-type: none"> • This item cannot be selected when there is no signal or sync out. • When MY TEXT DISPLAY is set to ON, MY TEXT is displayed together with the input information in the SOURCE_INFO box (📖 76).
	<p>SERVICE INFO A read-only display of current projector settings.</p>
	<p>FACTORY RESET Selecting OK using the ► button performs a factory reset. All the menu items will be returned to their initial settings, except for RESET LAMP HOURS, RESET FILTER HOURS, LANGUAGE, FILTER MESSAGE, NETWORK and SECURITY. CANCEL ⇨ OK</p>
	<p>SERVICE CODE Only used by authorized service personnel.</p>

NETWORK menu

Remember that incorrect network settings on this projector may create problems on your network. Be sure to consult with your network administrator before connecting to an existing access point on your network. Select "NETWORK" from the main menu to access the following features.

Highlight an item using the ▲/▼ cursor buttons on the projector or remote control, and press the ► cursor button on the projector or remote control, or **SELECT** button on the remote control to select the item. Then make adjustments per the following table.

Refer to the **Network Guide** for NETWORK operation details.

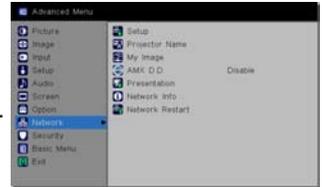

NOTE

- If you are not utilizing SNTP ([Date/Time Settings](#) in the **Network Guide**), then you must set the DATE AND TIME during initial installation.
- If POWER SAVING MODE is set to ENABLE in the SETUP menu, network communication control will be disabled when the projector is in power saving mode. To avoid this, set the POWER SAVING MODE to DISABLE ([40](#)) before setting up network communication control.

Item	Description	
<p>SETUP</p>	<p>Selecting this item displays the SETUP menu for the network. Use the ▲/▼ buttons to highlight an item, and the ► or SELECT button on the remote control to select the item.</p> 	
	<p>DHCP (Dynamic Host Configuration Protocol)</p>	<p>Use the ▲/▼ buttons to turn DHCP on and off. ENABLE ⇔ DISABLE</p> <p>Select DISABLE when the network is not DHCP enabled.</p> <ul style="list-style-type: none"> • When "DHCP" is set to "ENABLE", it takes a little time to obtain an IP address from the DHCP server. • The Auto IP feature will assign an IP address if the projector cannot obtain an IP address from the server (even if DHCP is "ENABLE").

(continued on next page)

Item	Description	
SETUP (continued)	IP ADDRESS	<p>Use the ▲/▼/◀/▶ buttons to enter the IP ADDRESS. This feature can only be used when DHCP is set to OFF.</p> <ul style="list-style-type: none"> • The IP ADDRESS is the number that identifies this projector on the network. You cannot have two devices with the same IP ADDRESS on the same network. • The IP ADDRESS “0.0.0.0” is prevented.
	SUBNET MASK	<p>Use the ▲/▼/◀/▶ buttons to enter the same SUBNET MASK used by your computer. This feature can only be used when DHCP is set to OFF.</p> <ul style="list-style-type: none"> • The SUBNET MASK “0.0.0.0” is prevented.
	DEFAULT GATEWAY	<p>Use the ▲/▼/◀/▶ buttons to enter the DEFAULT GATEWAY (a node on a computer network that serves as an access point to another network) address. This feature can only be used when DHCP is set to OFF.</p>
	DNS SERVER	<p>Use the ▲/▼/◀/▶ buttons to input the DNS server address. The DNS server is a system to control domain names and IP addresses on the Network.</p>
	TIME DIFFERENCE	<p>Use the ▲/▼ buttons to enter the TIME DIFFERENCE. Set the same TIME DIFFERENCE as the one set on your computer. If you are unsure of this setting, consult your IT manager. Use the ▶ button to return to the menu after setting the TIME DIFFERENCE.</p>
	DATE AND TIME	<p>Use the ▲/▼/◀/▶ buttons to enter the Year (last two digits), Month, Date, Hour and Minute.</p> <ul style="list-style-type: none"> • The projector will override this setting and retrieve DATE AND TIME information from the Time server when SNTP is enabled. (📖 Date/Time Settings in the Network Guide)

(continued on next page)

Item	Description
<p>PROJECTOR NAME</p>	<p>(1) Use the ▲/▼ buttons on the NETWORK menu to select the PROJECTOR NAME and press the ► button. The PROJECTOR NAME dialog will display.</p>  <p>(2) The current PROJECTOR NAME will display on the first 3 lines. A particular projector name is pre-assigned by default. Use the ▲/▼/◀/▶ buttons and the SELECT button to select and enter characters. To erase 1 character at one time, press the ◀ and SOURCE buttons simultaneously. Also if you move the cursor on the screen to DELETE or ALL CLEAR and push the SELECT button, a single character or all characters will be erased. The PROJECTOR NAME can have up to 64 characters.</p> <p>(3) To change an already inserted character, press the ▲/▼ buttons to move the cursor to one of the first 3 lines, and use the ◀/▶ buttons to move the cursor on the character to be changed. After pressing the SELECT button, the character is selected. Then, follow the same procedure as described in step (2) above.</p> <p>(4) To finish entering the text, move the cursor on the screen to OK and press the ► and the SELECT button. To revert to the previous PROJECTOR NAME without saving changes, move the cursor to CANCEL and press the ◀ and the SELECT button.</p>

(continued on next page)


Item	Description
<p>MY IMAGE</p>	<p>Selecting this item displays the MY IMAGE menu.</p> <p>To store images in the projector, the application software PJimg/Projector Image Tool is required (this can be downloaded from our website).</p> <p>Use the ▲/▼ buttons to select a saved MY IMAGE image (📖 My Image Feature in the Network Guide) and the ► or SELECT button to display the selected image.</p> <ul style="list-style-type: none"> • If an image is not stored, nothing can be selected. • Each image name will be displayed using a maximum of 16 characters. <p>To switch the image displayed Use the ▲/▼ buttons.</p> <p>To return to the menu Press the ◀ button on the remote control.</p> <p>To erase the displayed image and its source file in the projector.</p> <p>(1) Press the SELECT button on the remote control when displaying an image to display the MY IMAGE DELETE menu.</p> <p>(2) Press the ► button to perform an erase. To stop erasing, press the ◀ button.</p> 
<p>AMX D.D. (AMX Device Discovery)</p>	<p>Use the ▲/▼ buttons to turn AMX Device Discovery on and off.</p> <p>ENABLE ⇔ DISABLE</p> <p>When ENABLE is selected, the projector can be detected by AMX controllers connected to the same network. For the AMX Device Discovery details, visit the AMX website.</p> <p><u>URL: http://www.amx.com/</u> (as of Aug. 2010)</p>

(continued on next page)



Item	Description	
PRESENTATION	<p>Selecting this item displays the PRESENTATION menu. Use the ▲/▼ buttons to select one of the following items, then press ► or SELECT button to use the feature.</p>	
	QUIT PRESENTER MODE	<p>If you set a computer to Presenter mode and its image is projected by the projector, all other computers are blocked from presenting. Use this feature to exit the Presenter mode and allow other computers to access the projector. Select this item to display a dialog. Press ► button to choose OK in the dialog. Presenter mode will be cancelled and a message will appear confirming this.</p> <ul style="list-style-type: none"> • To use the Presenter mode feature, use “LiveViewer”. For details, refer to Presenter mode in the Network Guide.
	MULTI PC MODE	<p>If you set one or more computers to the Multi PC mode on “LiveViewer” and send their images to the projector, you can select the display mode on the projector from two options below.</p> <ul style="list-style-type: none"> - Single PC mode: displays the selected computer's image in full screen. - Multi PC mode: displays up to four computer images simultaneously in four different screen quadrants. <p>Select this item to display a dialog. Use the dialog to change the display mode as explained below.</p>

(continued on next page)

Item	Description	
<p>PRESENTATION (continued)</p>	<p>MULTI PC MODE (continued)</p>	<ul style="list-style-type: none"> • To change from Multi PC mode to Single PC mode, select one of the computers in the dialog using the ▲/▼/◀/▶ buttons and press the SELECT button. Press the ► button to choose OK, and then press SELECT again. The image for the selected computer is displayed in full screen. • To change from Single PC mode to Multi PC mode, press ► button to choose OK in the dialog and press the SELECT button. <p>The display mode is changed.</p> <ul style="list-style-type: none"> • For details on how to switch the display mode to Multi PC mode on your computer, refer to Switching the display mode in the Network Guide. • The Presenter mode settings of the selected computer become valid when the display mode is changed to Single PC mode. The Presenter mode settings become invalid when the display mode is changed to Multi PC mode, regardless of the settings on the computers. <p>For details, refer to Presenter mode in the Network Guide.</p>
	<p>DISPLAY USER NAME</p>	<p>Selecting this will display the user name. This feature helps you identify which computer image is currently being displayed.</p> <ul style="list-style-type: none"> • You can set user names for each computer on “LiveViewer”. <p>For details, refer to Display User Name in the Network Guide.</p>

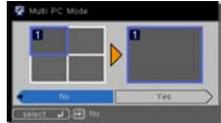

(continued on next page)

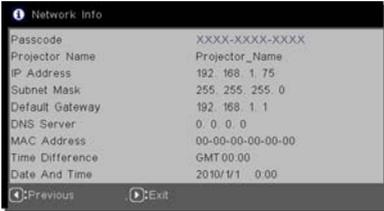 Item	Description
<p>NETWORK INFO</p>	<p>Selecting this displays the NETWORK_INFO dialog to confirm network settings.</p>  <ul style="list-style-type: none"> • For the PASSCODE details, refer to Selecting the network connection method in the Network Guide. • Only the first 16 characters of the projector name are displayed. • IP ADDRESS, SUBNET MASK and DEFAULT GATEWAY indicate “0.0.0.0” when DHCP is ON and the DHCP server has not provided address information to the projector.
<p>NETWORK RESTART</p>	<p>Executing this item restarts and initializes the network features. Choose the RESTART EXECUTE using the ► button.</p>  <p>Then use the ► button to execute.</p>  <p>Network communication will be cut off once restart is chosen. If DHCP is ON, the IP address may be change. After selecting RESTART EXECUTE, the NETWORK menu may need up to 30 seconds to be refreshed.</p>

SECURITY menu

This projector is equipped with security features. From the SECURITY menu, items shown in the table below can be performed.

To use the SECURITY menu, the user must use a password first.

Enter the SECURITY menu

1. Press the ► button. The SELECT PASSWORD box will display.
2. Use the ▲/▼/◀/▶ buttons to enter the correct password. The factory default password is as follows.

IN5122: 4102

IN5124: 2502

This password can be changed (see below). Move the cursor to the right side of the SELECT PASSWORD box and press the ► button to display the SECURITY menu.

- It is highly recommended that the factory default password be changed as soon as possible.
- If an incorrect password is input, the SELECT PASSWORD box will display again. If the password is incorrectly input 3 times, the projector will turn off. After that, the projector will turn off every time an incorrect password is input.

 
3. Items shown in the table below can be performed.

If you have forgotten your password


- (1) When the SELECT PASSWORD box is displayed, press and hold the **SOURCE** button for 3 seconds when pressing the ► button on the projector.
- (2) A 10 digit Inquiring Code will display. Contact your dealer with the 10 digit Inquiring Code. Your password will be sent after your user registration information is confirmed.

- If the Inquiring Code is displayed and there is no key input within approximately 55 seconds, the menu will close. If necessary, repeat the process from step (1) above.



Item	Description
<p>SECURITY PASSWORD CHANGE</p>	<ol style="list-style-type: none"> (1) Use the ▲/▼ buttons on the SECURITY menu to select SECURITY PASSWORD CHANGE and press the ► button to display the ENTER NEW PASSWORD box.  (2) Use the ▲/▼/◀/▶ buttons to enter the new password. (3) Move the cursor to the right side of the ENTER NEW PASSWORD box and press the ► button to display the NEW PASSWORD AGAIN box, re-enter the same password.  (4) Move the cursor to the right side of the NEW PASSWORD AGAIN box and press the ► button and the NOTE NEW PASSWORD box will display for about 30 seconds. Write the password down at this time.  <p>Pressing the SELECT button on the remote control or ► button on the projector will close the NOTE NEW PASSWORD message.</p> <ul style="list-style-type: none"> • Please do not forget your password.

Item	Description
<p>SNAPSHOT PASSWORD</p>	<p>The SNAPSHOT PASSWORD feature can be used to prevent access to the CAPTURE NEW feature and prevent the currently saved SNAPSHOT image from being overwritten.</p> <p>1 Turning on the SNAPSHOT PASSWORD</p> <p>1-1 Use the ▲/▼ buttons on the SECURITY menu to select SNAPSHOT PASSWORD and press the ► button to display the SNAPSHOT PASSWORD on and off menu.</p> <p>1-2 Use the ▲/▼ buttons on the SNAPSHOT PASSWORD on and off menu to select ON. The ENTER NEW PASSWORD box (small) will display.</p> <p>1-3 Use the ▲/▼/◀/▶ buttons to enter the password. Move the cursor to the right side of the ENTER NEW PASSWORD box (small) and press the ► button to display the NEW PASSWORD AGAIN box, re-enter the same password.</p> <p>1-4 Move the cursor to the right side of the NEW PASSWORD AGAIN box and press the ► button to display the NOTE NEW PASSWORD box for about 30 seconds. Please note the password at this time. Pressing the SELECT button on the remote control or ► button on the projector will return to the SNAPSHOT PASSWORD on and off menu.</p> <p>When a password is set for SNAPSHOT:</p> <ul style="list-style-type: none"> • The CAPTURE NEW feature (and menu) will be unavailable. • The CAPTURE LOCK menu will be unavailable. • The START UP LOGO setting will be locked on SNAPSHOT (and the menu will be unavailable). <p>Turning the SNAPSHOT PASSWORD off will allow normal operation of these features.</p> <ul style="list-style-type: none"> • Please do not forget your SNAPSHOT PASSWORD. <p>2 Turning off the SNAPSHOT PASSWORD</p> <p>2-1 Follow the procedure in 1-1 to display the SNAPSHOT PASSWORD on and off menu.</p> <p>2-2 Select OFF to display the SELECT PASSWORD box (large). Enter the saved password and the screen will return to the SNAPSHOT PASSWORD on and off menu.</p> <p>If an incorrect PASSWORD is input, the menu will close. If necessary, repeat steps 2-1 and 2-2.</p> <p>3 If you forget your password</p> <p>3-1 Follow the procedure in 1-1 to display the SNAPSHOT PASSWORD on and off menu.</p> <p>3-2 Select OFF to display the SELECT PASSWORD box (large). The 10 digit Inquiring Code will be displayed inside the box.</p> <p>3-3 Contact your dealer with the 10 digit Inquiring Code. Your password will be sent after your user registration information is confirmed.</p>

 

ENTER NEW PASSWORD box (small)



SELECT PASSWORD box (large)

Item	Description
PIN LOCK	<p>PIN LOCK is a feature which prevents the projector from being used unless a saved password is input.</p> <p>1 Turning on the PIN LOCK</p> <p>1-1 Use the ▲/▼ buttons on the SECURITY menu to select PIN LOCK and press the ► button or the SELECT button to display the PIN LOCK on and off menu.</p>  <p>1-2 Use the ▲/▼ buttons on the PIN LOCK on and off menu to select ON and the ENTER PIN CODE box will display.</p>  <p>1-3 Input a 4 part PIN code using the ▲/▼/◀/▶, SOURCE button.</p> <p>The PIN Code box will appear again. Re-enter the same PIN code. This will save the PIN code</p> <ul style="list-style-type: none"> • If the ENTER PIN CODE (or PIN Code again) box is displayed and there is no key input within 55 seconds, the menu will close. If necessary, repeat the process from 1-1. <p>Afterwards, anytime the projector is hard-powered off and then on, the ENTER PIN CODE box will display. Enter the saved PIN code. The projector can be used after entering the saved PIN code. If an incorrect PIN code is input, the ENTER PIN CODE box will display again. If the PIN code is incorrectly input 3 times, the projector will turn off. Afterwards the projector will turn off every time an incorrect PIN code is input. The projector will also turn off when the ENTER PIN CODE box is displayed and there is no key input for about 5 minutes.</p> <p>This feature will activate only when the projector has been hard-powered off and back on (AC power is turned off and on).</p> <ul style="list-style-type: none"> • Please do not forget your PIN code. <p>2 Turning off the PIN LOCK</p> <p>2-1 Follow step 1-1 to display the PIN LOCK on and off menu.</p> <p>2-2 Use the ▲/▼ buttons to select OFF and the ENTER PIN CODE box will display.</p> <p>Enter the saved PIN code to turn the PIN LOCK feature off.</p> <p>If the PIN code is incorrectly input 3 times, the projector will turn off.</p> <p>3 If you have forgotten your PIN code</p> <p>3-1 When the ENTER PIN CODE box is displayed, press and hold the SELECT button on the remote for three seconds or press and hold the SOURCE button for 3 seconds when pressing the ► button on the projector. A 10 digit Inquiring Code will display.</p>  <ul style="list-style-type: none"> • If the Inquiring Code is displayed and there is no key input within approx. 5 minutes, the projector will turn off. <p>3-2 Contact your dealer with the 10 digit Inquiring Code. Your PIN code will be sent after your user registration information is confirmed.</p>

Item	Description
TRANSITION DETECTOR	<p>If the projector's vertical angle or CEILING/REAR settings change and this feature is set ON, the projector will not display an input signal. In addition, if the projector is powered off and moved, the TRANSITION DETECTOR ON alarm will display.</p> <ul style="list-style-type: none"> To display an input signal again, set this feature OFF. After displaying the TRANSITION DETECTOR ON alarm for about 5 minutes, the lamp will turn off. The keystone adjustment feature will be disabled when the Transition Detector feature is on. <p>1 Turning on the TRANSITION DETECTOR</p> <p>1-1 Use the ▲/▼ buttons on the SECURITY menu to select TRANSITION DETECTOR and press the ► or the SELECT button to display the TRANSITION DETECTOR on and off menu.</p> <p>1-2 Use the ▲/▼ buttons on the TRANSITION DETECTOR on and off menu to select ON. Select ON and the current angle and CEILING and REAR settings will be recorded. The ENTER NEW PASSWORD box (small) will display.</p> <p>1-3 Use the ▲/▼/◀/▶ buttons to enter a password. Move the cursor to the right side of the ENTER NEW PASSWORD box (small) and press the ► button to display the NEW PASSWORD AGAIN box, re-enter the same password.</p> <p>1-4 Move the cursor to the right side of the NEW PASSWORD AGAIN box and press the ► button to display the NOTE NEW PASSWORD box for about 30 seconds. Write the password down at this time. Pressing the SELECT button on the remote control or the ► button on the projector will return to the TRANSITION DETECTOR on and off menu.</p> <ul style="list-style-type: none"> Please do not forget your TRANSITION DETECTOR password. This feature will only activate when the projector has been hard-powered off and on. This feature may not function properly if the projector is not in a stable position when ON is selected. <p>2 Turning off the TRANSITION DETECTOR</p> <p>2-1 Follow the procedure in 1-1 to display the TRANSITION DETECTOR on and off menu.</p> <p>2-2 Select OFF to display the SELECT PASSWORD box (large). Enter the saved password and the screen will return to the TRANSITION DETECTOR on and off menu.</p> <p>If an incorrect password is input, the menu will close. If necessary, repeat the process from 2-1.</p> <p>3 If you have forgotten your password</p> <p>3-1 Follow the procedure in 1-1 to display the TRANSITION DETECTOR on and off menu.</p> <p>3-2 Select OFF to display the SELECT PASSWORD box (large). The 10 digit Inquiring Code will display inside the box.</p> <p>3-3 Contact your dealer with the 10 digit Inquiring Code. Your password will be sent after your user registration information is confirmed.</p>
	<div data-bbox="848 180 1031 300" style="border: 1px solid red; padding: 5px; margin-bottom: 10px;"> <p style="text-align: center;">-<TRANSITION DETECTOR On-></p> <p style="text-align: center; font-size: small;">The projector has been transferred from previously installed position.</p> <p style="text-align: center; font-size: x-small;">If you wish to have a square image on screen again, disable Transition Detector on Menu.</p> </div> <div data-bbox="837 464 1031 539" style="border: 1px solid gray; padding: 5px; margin-bottom: 10px;"> <p style="font-size: x-small;">Transition Detector</p> <p style="text-align: center;">Enable</p> <p style="text-align: center;">◀ Previous Next ▶</p> </div> <div data-bbox="788 584 1031 651" style="border: 1px solid gray; padding: 5px; margin-bottom: 10px;"> <p style="font-size: x-small;">Transition Detector</p> <p style="font-size: x-small;">Enter New Password</p> <p style="text-align: center;">◀ Previous 0 0 0 0 Next ▶</p> </div> <p style="text-align: center; margin-left: 100px;">ENTER NEW PASSWORD box (small)</p> <div data-bbox="788 751 1031 818" style="border: 1px solid gray; padding: 5px; margin-bottom: 10px;"> <p style="font-size: x-small;">Transition Detector</p> <p style="font-size: x-small;">New Password Again</p> <p style="text-align: center;">◀ Previous 0 0 0 0 Next ▶</p> </div> <div data-bbox="788 842 1031 909" style="border: 1px solid gray; padding: 5px; margin-bottom: 10px;"> <p style="font-size: x-small;">Transition Detector</p> <p style="font-size: x-small;">Note New Password</p> <p style="text-align: center;">0 0 0 0 Next ▶</p> </div> <div data-bbox="788 1209 1031 1294" style="border: 1px solid gray; padding: 5px;"> <p style="font-size: x-small;">Transition Detector</p> <p style="font-size: x-small;">Enter Password</p> <p style="font-size: x-small;">Inquiring Code 01 2345 6789</p> <p style="text-align: center;">◀ Previous 0 0 0 0 Next ▶</p> </div> <p style="text-align: center; margin-left: 100px;">SELECT PASSWORD box (large)</p>

Item	Description
<p>MY TEXT PASSWORD</p>	<p>The MY TEXT PASSWORD feature can prevent the MY TEXT from being overwritten. When the password is set for MY TEXT;</p> <ul style="list-style-type: none"> • The MY TEXT DISPLAY menu will be unavailable, and can prevent DISPLAY settings from being changed. • The MY TEXT WRITING menu will be unavailable, and can prevent MY TEXT from being overwritten. <p>1 Turning on MY TEXT PASSWORD</p> <p>1-1 Use the ▲/▼ buttons on the SECURITY menu to select MY TEXT PASSWORD and press the ► button to display the MY TEXT PASSWORD on and off menu.</p>  <p>1-2 Use the ▲/▼ buttons to select ON on the MY TEXT PASSWORD on and off menu. The ENTER NEW PASSWORD box (small) will display.</p>  <p>1-3 Use the ▲/▼/◀/▶ buttons to enter the password. Move the cursor to the right side of the ENTER NEW PASSWORD box (small) and press the ► button to display the NEW PASSWORD AGAIN box, and then re-enter the same password.</p> <p>ENTER NEW PASSWORD box (small)</p>  <p>1-4 Move the cursor to the right side of the NEW PASSWORD AGAIN box and press ► button to display the NOTE NEW PASSWORD box for about 30 seconds. Write down your password at this time.</p>  <p>Pressing the SELECT button on the remote control or ► button on the projector will return to the MY TEXT PASSWORD on and off menu.</p> <p>2 Turning off the MY TEXT PASSWORD</p> <p>2-1 Follow the procedure in 1-1 to display the MY TEXT PASSWORD on and off menu.</p> <p>2-2 Select OFF to display the SELECT PASSWORD box (large). Enter the saved password and the screen will return to the MY TEXT PASSWORD on and off menu.</p>  <p>SELECT PASSWORD box (large)</p> <p>If an incorrect password is input, the menu will close. If necessary, repeat the process from 2-1</p> <p>3 If you have forgotten your password</p> <p>3-1 Follow the procedure in 1-1 to display the MY TEXT PASSWORD on and off menu.</p> <p>3-2 Select OFF to display the SELECT PASSWORD box (large). The 10 digit inquiring code will display inside the box.</p> <p>3-3 Contact your dealer with the 10 digit inquiring code. Your password will be sent after your user registration information is confirmed.</p>

(continued on next page)

Item	Description
<p>MY TEXT DISPLAY</p>	<p>(1) Use the ▲/▼ buttons on the SECURITY menu to select the MY TEXT DISPLAY and press the ► or SELECT button to display the MY TEXT DISPLAY on and off menu.</p> <p>(2) Use the ▲/▼ buttons on the MY TEXT DISPLAY on and off menu to select on or off. ON ⇔ OFF</p> <p>When ON is selected, MY TEXT will display on the START UP LOGO screen and on the SOURCE_INFO screen.</p> <ul style="list-style-type: none"> • This feature is available only when MY TEXT PASSWORD is set to OFF.  
<p>MY TEXT WRITING</p>	<p>(1) Use the ▲/▼ buttons on the SECURITY menu to select MY TEXT WRITING and press the ► button. The MY TEXT WRITING dialog will display.</p> <p>(2) The current MY TEXT will display on the first 3 lines. If MY TEXT has never been written, the lines will be blank. Use the ▲/▼/◀/▶ buttons and the SELECT button to select and enter characters. To erase 1 character at one time, press the ◀ and SOURCE button simultaneously. You can also move the cursor to DELETE or ALL CLEAR and press the SELECT button, a single character or all the characters will be erased. Up to 24 characters can be input for each line of MY TEXT.</p> <p>(3) To change an existing character, press the ▲/▼ buttons to move the cursor to one of the first 3 lines, and use the ◀/▶ buttons to highlight the character which needs to be changed. After pressing the SELECT-button, the character will be selected. Then, follow the same procedure as described in step (2) above.</p> <p>(4) To finish entering the text, move the cursor to OK on the screen and press the ►, SELECT button. To revert to the previous MY TEXT without saving any changes, move the cursor to CANCEL and press the ◀, SELECT-button.</p> <ul style="list-style-type: none"> • The MY TEXT WRITING feature is available only when MY TEXT PASSWORD is set to OFF. 
<p>SECURITY INDICATOR</p>	<p>Selecting this displays the SECURITY INDICATOR dialog. Use the ▲/▼ buttons to select ON or OFF. ON ⇔ OFF</p> <p>When the projector is in power saving mode and both the SECURITY INDICATOR and PIN LOCK (or both the SECURITY INDICATOR and TRANSITION DETECTOR) are ON, the SECURITY indicator will blink (🔒69).</p>
<p>STACK LOCK</p>	<p>Selecting this displays the STACK LOCK dialog. For more information, please see Instant Stack Guide.</p>

Presentation tools

The projector has two convenient tools for easy and quick on-screen presentations:

- PC-LESS Presentation ( *below*)
- USB Display ( 79)

PC-LESS Presentation

PC-LESS Presentation reads images from a USB storage device inserted into the **USB TYPE A** port and displays the image in the following modes.

Select the **USB TYPE A** port as the input source in order to start PC-LESS Presentation.

This feature allows you to make your presentations without using your computer.

- Thumbnail mode ( 71)
- Full Screen mode ( 75)
- Slideshow mode ( 76)

[Supported storage media]

- USB memory (USB memory type, USB hard disk and USB card reader type)

NOTE • USB readers (adapters) that have more than one USB slot may not work (the projector may think multiple devices are connected).

- USB hubs may not work.
- USB devices with security software may not work.
- Be careful when inserting or removing a USB device. ( 11, 73)

[Supported formats]

- FAT12, FAT16 and FAT32

NOTE • NTFS is not supported.

[Supported file formats]

- JPEG (.jpeg, .jpg) - *Progressive is not supported.*
- Bitmap (.bmp) - *16bit mode and compressed bitmap are not supported.*
- PNG (.png) - *Interlace PNG is not supported.*
- GIF (.gif)

NOTE • Files with resolutions larger than the following are not supported.

IN5122: 1024X768

IN5124: 1280 x 800

(* Some computers may not support 1280 x 800.)

- Files with a resolution smaller than 36x36 are not supported.
- Files with a resolution smaller than 100x100 may not be displayed.
- Some supported files may not be displayed.
- Only a frame appears when the image data content cannot be displayed in the Thumbnail mode.

PC-LESS Presentation (continued)

Thumbnail mode

The Thumbnail mode displays the images stored in a USB storage device on the Thumbnail screen. A maximum of 20 images will be displayed on the screen. If you wish, you can jump into Full Screen or Slideshow mode, after you select an image in the Thumbnail mode. PC-LESS Presentation will open in Thumbnail mode when the **USB TYPE A** port is selected as the input source.



PC-LESS Presentation (continued)**Operating by buttons or keys**

You can control the images in the Thumbnail screen with the remote control, projector keypad or using web browser software. The following features are supported when the Thumbnail mode is displayed.

Button operation			Features
The remote control	The projector keypad	Web Remote in web browser software.	
▲/▼/◀/▶	▲/▼/◀/▶	▲/▼/◀/▶	Move cursor
PAGE UP PAGE DOWN	-	PAGE UP PAGE DOWN	Switches pages
SELECT	SOURCE	SELECT	<ul style="list-style-type: none"> • Displays the selected image in Full Screen mode when the cursor is on the thumbnail image. • Displays the SETUP menu (📖next) for the selected image when the cursor is on the thumbnail image number.

The SETUP menu for the selected image

Item	Features
SETUP	Use the ◀/▶ cursor buttons to switch modes or use the ▶ cursor button to execute the features as follows.
RETURN	Press the ▶ cursor button or SELECT to return to the Thumbnail screen.
START	Switch ON to choose the selected image as the SlideShow's starting point. The setting information will be saved in the "playlist.txt" file (📖78).
STOP	Switch ON to choose the selected image as the Slideshow's ending point. This setting information will be saved in the "playlist.txt" file (📖78).
SKIP	Switch ON to skip the selected image in the Slideshow. This setting information will be saved in the "playlist.txt" file (📖78).
ROTATE	Press the ▶ cursor button or SELECT to rotate the selected image 90 degrees clockwise. This setting information will be saved in the "playlist.txt" file (📖78).

PC-LESS Presentation (continued)

Operating the menu on the Thumbnail screen

You can also control the images using the menu on the Thumbnail screen.

Item	Features
	Moves to an upper folder.
SORT	Allows you to sort files and folders as per the following.
RETURN	Press the ► cursor button or SELECT to return to the Thumbnail screen.
NAME UP	Sorts in ascending order by file name.
NAME DOWN	Sorts in descending order by file name.
DATE UP	Sorts in ascending order by file date.
DATE DOWN	Sorts in descending order by file date.
▲ / ▼	Go to previous / next page.
SLIDESHOW	Configures and starts the Slideshow ( 76).
RETURN	Press the ► cursor button or SELECT to return to the Thumbnail screen.
PLAY	Press the ► cursor button or SELECT to start the Slideshow.
START	Sets the beginning number of the Slideshow.
STOP	Sets the end number of the Slideshow.
INTERVAL	Sets the interval time of the Slideshow.
PLAY MODE	Selects the Slideshow mode.
SOURCE	Switches the input port.
MENU	Displays the menu.
REMOVE USB	Be sure to use this feature before removing the USB storage device from the projector. After that, the projector will not recognize a USB storage device until you insert it again into the USB TYPE A input port.

PC-LESS Presentation (continued)

- NOTE • These options are not available when the projector OSD is displayed.
- The Thumbnail mode shows 20 images maximum per page.
 - You cannot change input ports using the **SOURCE** button when the Thumbnail screen, Slideshow, or Full Screen is displayed.
 - Some error icons will display in the Thumbnail.



————— This file is corrupt or not a supported format.



} A file that cannot be displayed on the thumbnail screen is indicated by a file format icon.



PC-LESS Presentation (continued)

Full Screen Mode

The Full Screen mode shows a full display image. To display in Full Screen mode, select an image in the Thumbnail screen. Then press the **SELECT** button on the remote control or the **SOURCE** button on the keypad, or click **[SELECT]** on the Web Remote Control.



} Full screen display

The following features can be supported in the Full Screen mode.


Button operation			Features
The remote control	The keypad on the projector	Web Remote in web browser software.	
▼ ▶ or PAGE DOWN	▼ or ▶	▼, ▶ or PAGE DOWN	Shows the next image.
▲ ◀ or PAGE UP	▲ or ◀	▲, ◀ or PAGE UP	Shows the previous image.
SELECT	SOURCE	SELECT	Displays the Thumbnail.

NOTE • These options are not available when the projector OSD is displayed.
• You cannot change input ports using the **SOURCE** button when the Thumbnail screen, Slideshow, or Full Screen is displayed.

PC-LESS Presentation (continued)

Slideshow mode

The Slideshow mode displays images in full screen and switches the images at intervals set in INTERVAL on the Thumbnail screen menu (71).

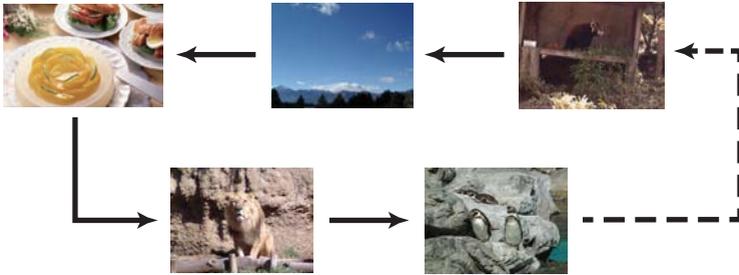

You can start this feature from the Slideshow menu. To display the Slideshow menu, select the SLIDESHOW button in the Thumbnail mode and press the SELECT button on the remote control or projector's SOURCE button.

The following options can be available when the Slideshow is displayed.

Button operation			Features
The remote control	The keypad on the projector	Web Remote in web browser software.	
SELECT	SOURCE	SELECT	Displays thumbnail


* These options are not available when the projector OSD is displayed.

NOTE • You cannot change the input ports using the **SOURCE** button when the Thumbnail screen, Slideshow, or Full Screen is displayed.
 • When the Slideshow mode is set to ONE TIME, the last slide of the presentation will stay on the screen until the **SELECT** button on the remote control or Web Remote Control, or the projector's SOURCE button is pushed.

PC-LESS Presentation (continued)

You can play the Slideshow with your desired configuration.
Configure the Slideshow items in the Thumbnail.

- 1) RETURN : Returns to the thumbnail mode.
- 2) PLAY : Play the Slideshow.
- 3) START : Set the beginning number of the Slideshow.
- 4) STOP : Set the end number of the Slideshow.
- 5) INTERVAL : Set the interval time of the Slideshow.
Do not set the interval time too short (such as a few seconds), because it may take more than few seconds to read and display the image file if it is stored deep in a directory structure or is there are many files stored in the same directory.
- 6) PLAY MODE : Select the Slideshow mode.
ONE TIME : Play the Slideshow one time.
ENDLESS : Play the Slideshow repeatedly.

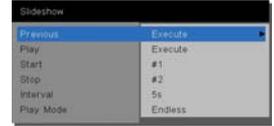

NOTE • The Slideshow settings are saved to the “**playlist.txt**” file that is stored in the storage media. If the file does not exist, it is generated automatically.
• The settings for the START, STOP, INTERVAL, and PLAY MODE are saved to the Playlist.
• If the storage media is write protected or the “**playlist.txt**” is a read-only type file, it is impossible to change the Slideshow settings.

PC-LESS Presentation (continued)

Playlist

The Playlist is a DOS format text file, which determines the image file order in the Thumbnail or Slideshow view.

The playlist file name is “playlist.txt” and it can be edited on a computer. It is created in the same folder which contains your selected image files when PC-LESS Presentation is started or Slideshow is configured.

[Example of “playlist.txt” files]

START setting : STOP setting : INTERVAL setting : PLAY MODE setting :
img001.jpg: : : :
img002.jpg:600: : :
img003.jpg:700:rot1: :
img004.jpg: : :SKIP:
img005.jpg:1000:rot2:SKIP:

The “playlist.txt” file contains the following information.

Each piece of information must be separated by “:”, and “.” at the end of each line.

1st line: START, STOP, INTERVAL and PLAY MODE settings (📖 78).

2nd and subsequent lines: file name, interval time, rotation setting and skip setting.

interval time: Can be set 0 to 999900 (ms) with an increment of 100 (ms).

rotation setting: “rot1” means a rotation at 90 degrees clockwise; “rot2” and “rot3” increase another 90 degrees in order.

skip setting: “SKIP” means that the image will not be displayed in the Slideshow.

NOTE

- The maximum line length in the “playlist.txt” file is 255 characters including linefeed. If any line exceeds the limit, the “playlist.txt” file becomes invalid.
- Up to 999 files can be saved to the Playlist. However, if folders exist in the same directory, the limit number is decreased by the number of folders.

Any files over the limit will not be shown in the Slideshow.

- If the storage device is protected or does not have sufficient space, the “playlist.txt” file cannot be created.

- For the Slideshow settings, refer to the section **Slideshow mode** (📖 76).

USB Display

The projector can display images transferred from a computer via an USB cable (📁10).

Hardware and software requirements for computer

- **OS:** One of the following. (32 bit version only)
Windows[®] XP Home Edition /Professional Edition
Windows Vista[®] Home Basic /Home Premium /Business /Ultimate /Enterprise
Windows[®] 7 Starter /Home Basic /Home Premium /Professional / Ultimate /Enterprise
- **CPU:** Pentium 4 (2.8 GHz or higher)
- **Graphic card:** 16 bit, XGA or higher
- **Memory:** 512 MB or higher
- **Hard disk space:** 30 MB or higher
- **USB Port**
- **USB cable** : 1 piece

In the OPTION menu, choose USB DISPLAY for the USB TYPE B item. When you connect your computer to the **USB TYPE B** port on the projector using a USB cable, the projector will be recognized as a CD-ROM drive on your computer. Then, the projector software, "LiveViewerLiteUSB.exe", will run automatically and the application, "LiveViewer Lite for USB", will be available on your computer for USB Display. The application, "LiveViewer Lite for USB", will automatically close when the USB cable is unplugged.

NOTE • If the software does not start automatically (this is typically because CD-ROM autorun is disabled on your OS), follow the instructions below.

- (1) Click the [Start] button on the toolbar and select "Run"
- (2) Enter F:\LiveViewerLiteUSB.exe and then press the [OK]

⤴ If your CD-ROM drive is not drive F on your computer, you will need to replace F with the correct drive letter assigned to your CD-ROM drive.

- CD-ROM autorun is disabled when the screen saver is running.
- The image transmission from the computer is suspended when the password-protected screen saver is running. To resume the transmission, exit the screen saver.
- Check our website (www.infocus.com/support) for the latest version of the software and its manual. Follow the upgrade instructions on the website.

This application will appear in the Windows notification area once it starts. You can exit the application from your computer by selecting "Quit" on the menu.



NOTE • "LiveViewer" (refer to the **Network Guide**) and this application cannot be used simultaneously. If you connect your computer to the projector using a USB cable when "LiveViewer" is running, the following message will display.



- If any application software has a firewall on your computer, disable the firewall feature (refer to the user's manual).
- Some security software may block image transmission. Please change the security software setting to allow the use of "LiveViewer Lite for USB".

USB Display (continued)

Right-Click menu

The menu shown in the right will display when you right-click the application icon in the Windows notification area.




Display : The Floating menu is displayed, and the icon disappears from the Windows notification area.

Quit : The application is closed, and the icon disappears from the Windows notification area.

NOTE • If you wish to restart the application, you need to unplug the USB cable and plug it again.

Floating menu

If you select “Display” on the Right-Click menu, the Floating menu shown in the right will appear on your computer screen.

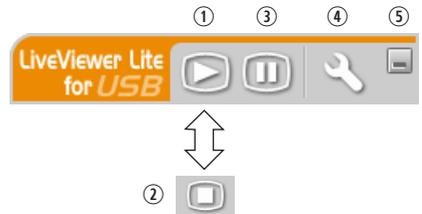

① **Start capture button**

The transmission to the projector will start and the images will display.

② **Stop button**

The image transmission will stop.

③ **Hold button**

The image on the projector’s screen will temporarily freeze. The last image before the button is clicked will remain on the screen. You can revise the image data on your computer without showing it on the projector’s screen.

④ **Option button**

The Options window is displayed.

⑤ **Minimize button**


The Floating menu is closed, and the icon reappears in the Windows notification area.

NOTE • If you click the Start Capture button and/or Stop button repeatedly, images may not be displayed on the screen.

USB Display (continued)

Options window

If you select the Option button on the Floating menu, the Options window is displayed.

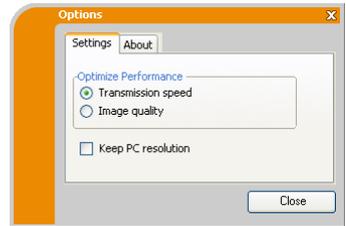

Optimize Performance

“LiveViewer Lite for USB” captures JPEG screenshots and sends them to the projector. “LiveViewer Lite for USB” has two JPEG compression options.

Transmission speed

Speed takes priority over Image quality.

The JPEG compression rate is higher.

The screen on the projector is rewritten quicker (because the transferred data is smaller), but the image quality will be lower.

Image quality

Image quality takes priority over Speed.

The JPEG compression rate is lower.

The screen on the projector is rewritten more slowly (because the transferred data is larger), but the image quality will be higher.

Keep PC resolution

If you remove the check mark from the **[Keep PC resolution]** box, your computer's screen resolution will change per below, and the display speed may be faster.

IN5122: 1024X768 (XGA)

IN5124: 1280 x 800 (WXGA)

If your computer does not support the display resolutions specified above, the closest smaller supported resolution will be selected.

NOTE • When the resolution is changed, the icon arrangement on the computer desktop screen may change.

About

The version information of the “LiveViewer Lite for USB”.

Maintenance

Replacing the lamp


Be sure to use the InFocus lamp module designed for this projector. You can order new lamps from www.infocus.com (in select areas), your retailer or your dealer. Only genuine InFocus lamps are tested for use in this projector. Use of non InFocus lamps may cause electrical shock and fire, and may void the projector warranty. InFocus is not liable for the performance, safety or certification of any other lamps.

WARNING: Hg – Lamp contains mercury. Manage in accordance with local disposal laws. See www.lamprecycle.org.




Part number : SP-LAMP-064

Replacing the lamp

1. Turn the projector off, and unplug the power cord. Allow the projector to cool for at least 45 minutes.
2. Loosen the screw (marked by arrow) of the lamp cover and then slide and lift the lamp cover to the side to remove it.
3. Loosen the 3 screws (marked by arrow) of the lamp, and slowly pick up the lamp by the handles. Never loosen any other screws.
4. Insert the new lamp, and retighten firmly the 3 screws of the lamp that are loosened in the previous process to lock it in place.
5. Slide the lamp cover back in place. Then firmly fasten the screw of the lamp cover.
6. Turn the projector on and reset the lamp hours using RESET LAMP HOURS in the SERVICE menu.
 - (1) Press the **MENU** button to display a menu.
 - (2) Highlight the ADVANCED MENU in the menu using the ▼/▲ button, then press the ► button.
 - (3) Highlight OPTION in the left column of the menu using the ▼/▲ button, then press the ► button.
 - (4) Highlight SERVICE in the menu using the ▼/▲ button, then press the ► button.
 - (5) Highlight the RESET LAMP HOURS using the ▼/▲ button, then press the ► button. A dialog will appear.
 - (6) Press the ► button to select “OK” on the dialog. It performs resetting the lamp hours.

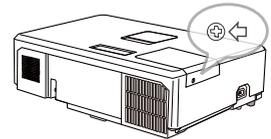

lamp cover

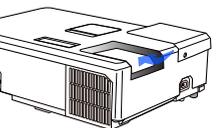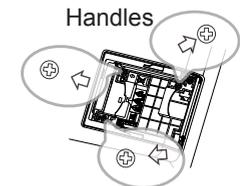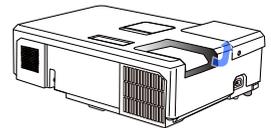

⚠ CAUTION ► Do not touch anywhere inside of the area where the lamp was removed from the projector.

Replacing the lamp (continued)

Lamp warning

 **HIGH VOLTAGE**  **HIGH TEMPERATURE**  **HIGH PRESSURE**

⚠ WARNING ► The projector uses a high-pressure mercury glass lamp. The lamp can break with a loud bang, or burn out, if jolted or scratched, handled when hot, or worn over time. Note that each lamp has a different lifetime, and some may burst or burn out soon after you start using them. In addition, if the bulb bursts, it is possible for shards of glass to fly into the lamp housing, and for gas containing mercury and dust containing fine particles of glass to escape from the projector's vent holes.

► **About disposal of a lamp:** This product contains a mercury lamp; do not put it in the trash. Dispose of it in accordance with environmental laws.

- For lamp recycling, go to www.lamprecycle.org (in the US).
- For product disposal, consult your local government agency or www.eiae.org (in the US) or www.epsc.ca (in Canada).

For more information, call your dealer.



Disconnect the plug from the power outlet

- If the lamp should break, unplug the power cord from the outlet, and make sure to request a replacement lamp from your local dealer. Note that shards of glass could damage the projector's internals, or cause injury during handling, so please do not try to clean the projector or replace the lamp yourself.
- If the lamp should break, ventilate the room well, and make sure not to inhale the gas or fine particles that come out from the projector's vent holes, and not to get them into your eyes or mouth.
- Before replacing the lamp, turn the projector off and unplug the power cord, then wait at least 45 minutes for the lamp to cool sufficiently. Handling the lamp when hot can cause burns, as well as damaging the lamp.



- Never unscrew except the appointed (marked by an arrow) screws.
- Do not open the lamp cover when the projector is suspended from a ceiling. This is dangerous, since if the lamp's bulb has broken, the shards will fall out when the cover is opened. In addition, working in high places is dangerous, so ask your local dealer to have the lamp replaced even if the bulb is not broken.
- Do not use the projector with the lamp cover removed. When replacing the lamp, make sure that the screws are screwed in firmly. Loose screws could result in damage or injury.



- Use only the lamp of the specified type. Use of a lamp that does not meet the lamp specifications for this model could cause a fire, damage or shorten the life of this product.
- If the lamp breaks soon after the first time it is used, it is possible that there are electrical problems with the projector. If this happens, consult your local dealer or a service representative.
- Handle with care: jolting or scratching could cause the lamp bulb to burst during use.
- Using the lamp for long periods of time can cause it to darken, not to light up or to burst. When the images appear dark, or when the color tone is poor, please replace the lamp as soon as possible. Do not use old (used) lamps; this can cause breakage.

Cleaning and replacing the air filter

Please check and clean the air filter periodically. When the indicators or a message prompts you to clean the air filter, comply with it as soon as possible. This projector's air filter consists of a filter cover and a filter unit with two types of filter. If one or both of the filters are damaged or heavily soiled, replace the filter unit with a new one.


Use the following part number when purchasing a new filter unit from your dealer.

Part number : MU06641 (Filter unit)

A filter unit also ships with replacement lamps. Replace the filter unit when you replace the lamp.

1. Turn the projector off, and unplug the power cord. Allow the projector to sufficiently cool down.
2. Use a vacuum cleaner on and around the filter cover.
3. Grab and pull up on the filter cover knobs to take the cover off.
4. Press the knobs on the bottom of the filter unit up slightly to unlock the bottom side of the filter unit. Pull the center knob to remove the filter unit.
5. Use a vacuum cleaner on the projector's filter vent and the outside of the filter unit.
6. The filter unit consists of two parts. Press down around the interlocking parts to unlock them and separate the two parts.
7. Use a vacuum cleaner on the inner side of each filter unit part to clean them. If the filters are damaged or heavily soiled, replace them with new ones.
8. Combine the two parts to reassemble the filter unit.
9. Put the filter unit back into the projector.

(continued on next page)

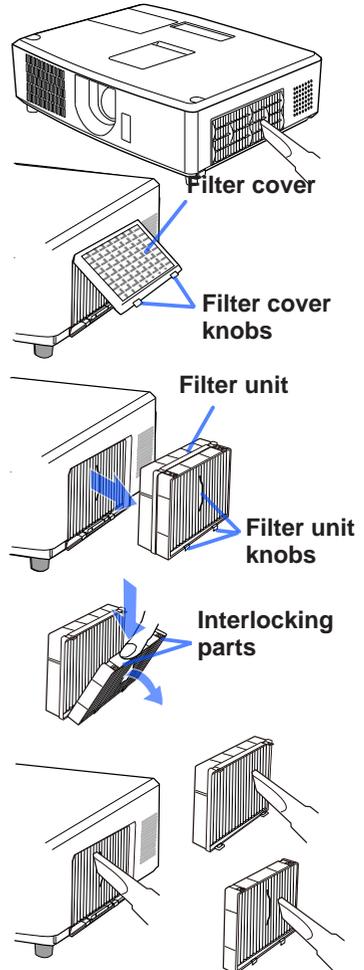

Cleaning and replacing the air filter (continued)

10. Put the filter cover back into place.
11. Turn the projector on and reset the filter hours using the RESET FILTER HOURS item in the BASIC MENU.
 - (1) Press the MENU button to display the menu.
 - (2) Highlight RESET FILTER HOURS using the ▲/▼ cursor buttons, then press the ► cursor (or the **SELECT**) button. A dialog will appear.
 - (3) Press the ► cursor button to select the “OK”. This resets the filter hours.

⚠ WARNING ► Before maintaining the air filter, make sure the power cable is unplugged, and allow the projector to cool sufficiently.

► Only use specified air filters. Do not use the projector without the air filter or the filter cover. This can result in a fire or projector malfunction.

► Clean the air filter periodically. If the air filter becomes clogged by dust or the like, internal temperatures rise and could cause a fire, a burn or projector malfunction.

NOTE • Only reset the filter hours when you have cleaned or replaced the air filter to ensure filter hour accuracy.

• The projector may display a message such as “CHECK THE AIR FLOW” or turn off the projector, to prevent internal temperatures from rising.

Other care

Inside the projector

In order to ensure the safe use of your projector, please have it cleaned and inspected by your dealer every year.

Caring for the lens

If the lens is flawed, soiled or fogged, it could cause display quality deterioration. Please take good care of the lens and handle cautiously.

1. Turn the projector off and unplug the power cord. Allow the projector to cool sufficiently.
2. After making sure that the projector is cooled adequately, lightly wipe the lens with a commercially available lens-cleaning wipe. Do not touch the lens directly with your hand.

Caring for the cabinet and remote control

Incorrect care could cause adverse issues such as discoloration, peeling paint, etc.

1. Turn the projector off, and unplug the power cord. Allow the projector to cool sufficiently.
2. After making sure that the projector is cooled adequately, lightly wipe with gauze or a soft cloth.
If the projector is extremely dirty, dip soft cloth in water or a neutral cleaner diluted in water, wring well and wipe lightly. Then, wipe lightly with a soft, dry cloth.

⚠ WARNING ▶ Before maintaining, make sure the power cord is unplugged, and then allow the projector to cool sufficiently. Maintaining the projector when its internal temperature is high could cause a burn and/or projector malfunction.

▶ Never try to care for the inside of the projector personally. Doing so is dangerous.

▶ Avoid getting the projector wet or inserting liquids in the projector. It could result in a fire, electrical shock, and/or projector malfunction.

- Do not put anything containing water, cleaners or chemicals near the projector.
- Do not use aerosols or sprays.

⚠ CAUTION ▶ Please maintain the projector properly according to the following. Incorrect maintenance could cause not only an injury but adverse issues such as discoloration, peeling paint, etc.

- ▶ Do not use cleaners or chemicals other than those specified in this manual.
- ▶ Do not polish or wipe with hard objects.

NOTICE ▶ Do not directly touch the lens surface with hands.

Troubleshooting

If the projector is operating abnormally, stop using the projector immediately.

⚠ WARNING ▶ Never use the projector if abnormal conditions occur such as smoke, strange odors, excessive sounds, damaged casing, elements or cables, penetration by liquids or foreign matter, etc. In this situation, immediately disconnect the power plug from the power outlet. After making sure that the smoke or odors have stopped, contact your dealer or service company.

Otherwise if a problem occurs with the projector, the following troubleshooting steps are recommended before requesting repair. If these do not resolve the problem, please contact your dealer or service company. They will tell you if the projector repair will be covered by warranty.

Related messages

When a message appears, follow the instructions per the following table. Although these messages will automatically disappear after several minutes, they will reappear every time the power is turned on.

Message	Description
	There is no input signal. Please confirm the signal input connection, and the status of the signal source.
	Although an image input source is plugged into the USB TYPE B port, USB TYPE B (🖱️50) is set to MOUSE. Change USB TYPE B to USB DISPLAY in order to project the image input to the USB TYPE B port. (You will not be able to use the simple mouse and keyboard feature in this case.) Otherwise select another port for image input.
	The projector is waiting for an image file. Check the hardware connection, projector settings and network-related settings.
	The computer-projector network connection might be disconnected. Please re-connect using “Connect button” of the “LiveViewer”. (📘Using the “LiveViewer” in the Network Guide)
	The horizontal or vertical frequency of the input signal is not within the specified range. Please confirm your projector's specifications and the signal source specifications.
	The input signal is not supported. Please confirm your projector's specification and the signal source specifications.

(continued on next page)

Related messages (continued)

Message	Description
 <p>CHECK THE AIR FLOW</p>	<p>The internal temperature is rising. Please turn the power off, and allow the projector to cool down at least 20 minutes. After having confirmed the following items, please turn the power ON again.</p> <ul style="list-style-type: none"> • Is anything blocking the air vents? • Is the air filter dirty? • Is the room temperature higher than 95°F (35°C)? <p>If the same indicator re-appears after fixing the above, please review FAN SPEED HIGH in the OPTION>SERVICE menu (📖 52).</p>
 <p>REMINDER 4000 HRS PASSED AFTER THE LAST FILTER CHECK.</p> <p>FILTER MAINTENANCE IS ESSENTIAL. TO REMOVE WARNING MESSAGE, RESET FILTER TIME.</p> <p>SEE MANUAL FOR FURTHER INFO.</p>	<p>A cautionary note when cleaning the air filter. Please turn the power off immediately, and clean or change the air filter (refer to the Cleaning and replacing the air filter section of this manual). After you have cleaned or changed the air filter, please be sure to reset the filter hours (📖 52).</p>
<p>Not Available</p>	<p>The button operation is not available.</p>

Regarding the indicator lamps

When the **LAMP**, **TEMP** and **POWER** indicator operate differently than usual, follow the instructions below in the following table.

For the **SECURITY** indicator, see SECURITY INDICATOR in the SECURITY menu.

POWER indicator	LAMP indicator	TEMP indicator	Description
Solid Orange	Turned off	Turned off	The projector is in a standby state. Please refer to the section "Power on and off".
<i>Blinking</i> Green	Turned off	Turned off	The projector is warming up. Please wait.
Solid Green	Turned off	Turned off	The projector is in an on state. Ordinary functions can be performed.
<i>Blinking</i> Orange	Turned off	Turned off	The projector is cooling down. Please wait.
<i>Blinking</i> Red	(discretionary)	(discretionary)	The projector is cooling down. An error has been detected. Please wait until POWER indicator finishes blinking, and then follow the associated instructions below.
<i>Blinking</i> Red or Solid Red	Solid Red	Turned off	The lamp will not light, and the projector may be overheating. Please turn the power off, and allow the projector to cool down at least 20 minutes. After the projector has sufficiently cooled down, please confirm the following items, and then turn the power on again. <ul style="list-style-type: none"> • Are the air vents blocked? • Is the air filter dirty? • Is the room temperature higher than 95°F (35°C)? If the same indicator re-appears after fixing the above, please change the lamp referring to the section Replacing the lamp .
<i>Blinking</i> Red or Solid Red	<i>Blinking</i> In Red	Turned off	The lamp cover has not been properly fixed. Please turn the power off, and allow the projector to cool down at least 45 minutes. After the projector has sufficiently cooled down, please verify that the lamp cover is securely and properly fastened. After performing any needed maintenance, turn the power on again. If the same indicator re-appears after fixing the above, please contact your dealer or service company.
<i>Blinking</i> Red or Solid Red	Turned off	<i>Blinking</i> Red	The cooling fan is not operating. Please turn the power off, and allow the projector to cool down at least 20 minutes. After the projector has sufficiently cooled down, please confirm that no foreign matter has become caught in the fan, etc., and then turn the power on again. If the same indicator re-appears after fixing the above, please contact your dealer or service company.

Regarding the indicator lamps (continued)

POWER indicator	LAMP indicator	TEMP indicator	Description
Blinking Red or Solid Red	Turned off	Solid Red	<p>There is a possibility that the projector has overheated. Please turn the power off, and allow the projector to cool down at least 20 minutes. After the projector has sufficiently cooled down, please check the following items, and then turn the power on again.</p> <ul style="list-style-type: none"> • Is there blockage of the air passage aperture? • Is the air filter dirty? • Does the peripheral temperature exceed 35°C? <p>If the same indicator re-appears after fixing the above, please review FAN SPEED HIGH in the OPTION>SERVICE menu (52).</p>
Solid Green	Simultaneously blinking in Red		<p>It is time to clean the air filter. Please immediately turn the power off, and clean or change the air filter referring to the section Cleaning and replacing the air filter. After cleaning or changing the air filter, please be sure to reset the filter hours. After the remedy, reset the power to ON.</p>
Solid Green	Alternatively blinking Red		<p>There is a possibility that the interior portion has become overcooled. Please use the unit within the usage temperature parameters (5°C to 35°C). After the treatment, reset the power to ON.</p>
Blinking Green for approx. 3 seconds.	Turned off	Turned off	<p>At least 1 Power ON schedule is saved to the projector. Please refer to Schedule Settings in the Network Guide.</p>

NOTE • For safety purposes, the projector will automatically shut down (and the indicator lamps will turn off) when the projector becomes overheated. In this situation, disconnect the power cord, and wait at least 45 minutes. After the projector has sufficiently cooled down, please confirm that the lamp and lamp cover are securely and properly fastened, and then turn the power on again.

Resetting all settings

When you cannot easily correct the projector settings, you can use the **FACTORY RESET** feature in the **OPTION>SERVICE** menu (56) to reset the all the projector settings (except for: **LANGUAGE**, **RESET LAMP HOURS**, **RESET FILTER HOURS**, **FILTER MESSAGE**, **SECURITY** and **NETWORK**) to factory default.

Situations that can be easily mistaken as a projector defect

The following situations can be misinterpreted as a projector defect. Review the following table before arranging for a repair.

Phenomenon	Situations not caused by a projector defect	Reference page
Power does not come on.	The electrical power cord is unplugged. Correctly connect the power cord.	14
	The main power source has been interrupted during operation such as by a power outage (blackout), etc. Please disconnect the power plug from the power outlet, and allow the projector to cool down at least 10 minutes, then turn the power on again.	14
	Either there is no lamp and/or lamp cover, or either of these has not been properly fixed. Please turn the power off and disconnect the power plug from the power outlet, and allow the projector to cool down at least 45 minutes. After the projector has sufficiently cooled down, please confirm that the lamp and lamp cover are properly attached, and then turn the power on again.	82
Neither sounds nor images are outputted.	The signal cables are not connected correctly. Correctly connect the connection cables.	9 ~ 13
	Signal source does not correctly work. Correctly set up the signal source device by referring to the manual of the source device.	–
	The input changeover settings are mismatched. Select the input signal, and correct the settings.	18
	The BLANK feature for images and the MUTE feature for sounds are working. AV MUTE may be active. Refer to the item “Sound does not come out” and “No images are displayed” on the next page to turn off the MUTE and BLANK features.	51, 92

(Continued on next page)

Situations that can be easily mistaken as a projector defect (continued)

Phenomenon	Situations not caused by a projector defect	Reference page
No sound can be heard.	<p>The signal cables are not connected correctly. Correctly connect the audio cables.</p>	9 ~ 13
	<p>MUTE is on. Restore sound by pressing MUTE or the VOLUME +/- button on the remote control.</p>	18
	<p>The volume is adjusted too low. Adjust the volume to a higher level using the menu feature or the remote control.</p>	18, 41, 42
	<p>The AUDIO SOURCE>INTERNAL SPEAKERS setting is not correct. Correct the AUDIO SOURCE>INTERNAL SPEAKERS setting in the AUDIO menu.</p>	41
	<p>The selected HDMI NOISE CANCEL mode is not correct. Check each mode and select the correct one for your HDMI™ audio device.</p>	42
No images are displayed.	<p>The lens cover is attached. Remove the lens cover.</p>	4, 17
	<p>The signal cables are not connected correctly. Correctly connect the connection cables.</p>	9 ~ 13
	<p>Brightness is adjusted too low. Adjust BRIGHTNESS to a higher level using the menu feature.</p>	30
	<p>The computer cannot detect the projector as a plug and play monitor. Make sure that the computer can detect a plug and play monitor using another plug and play monitor.</p>	9
	<p>The BLANK screen is displayed. Press BLANK button on the remote control.</p>	25
	<p>Although an image input source is plugged into the USB TYPE B port, USB TYPE B is set to MOUSE. Change USB TYPE B to USB DISPLAY in order to project the image input to the USB TYPE B port. (You will not be able to use the simple mouse and keyboard feature in this case.) Otherwise select another port for image input.</p>	50
	<p>The projector does not recognize the USB storage device inserted into USB TYPE A port. Use the REMOVE USB feature first, then remove the USB storage device, and re-insert it into the port. Before removing the USB storage device, be sure to use the REMOVE USB feature on the thumbnail screen, which appears when the USB TYPE A port is selected as the input source.</p>	11, 73

Situations that can be easily mistaken a projector defect (continued)

Phenomenon	Situations not caused by a projector defect	Reference page
<p>Colors look faded- out or Color tone is poor.</p>	<p>Color settings are not correctly adjusted. Perform image adjustments by changing the COLOR TEMPERATURE, COLOR, TINT and/or COLOR SPACE settings, using the menu features.</p>	<p>31, 36</p>
	<p>The COLOR SPACE setting is not correct. Change the COLOR SPACE setting to AUTO, RGB, SMPTE240, REC709 or REC601.</p>	<p>36</p>
<p>Images are too dark.</p>	<p>The brightness and/or contrast are adjusted to an extremely low level. Adjust BRIGHTNESS and/or CONTRAST settings to a higher level using the menu feature.</p>	<p>30</p>
	<p>The projector is in Low Power mode. Set LOW POWER to DISABLE in the SETUP menu.</p>	<p>39</p>
	<p>The lamp is approaching the end of its product lifetime. Replace the lamp.</p>	<p>82 ~ 83</p>
<p>Images are blurry.</p>	<p>Either the focus and/or the horizontal phase settings are not adjusted properly. Adjust the focus using the focus ring, and/or PHASE using the menu feature.</p>	<p>21, 35</p>
	<p>The lens is dirty or misty. Clean the lens referring to the section Caring for the lens.</p>	<p>86</p>
<p>The image is degraded (e.g. flickering or stripes) on the screen.</p>	<p>When the projector is operating in Low Power mode, flickering may appear on screen. Set LOW POWER to DISABLE in the SETUP menu.</p>	<p>39</p>
	<p>The OVERSCAN ratio is too big. Adjust OVERSCAN smaller in the IMAGE menu.</p>	<p>33</p>
	<p>Excessive VIDEO NOISE REDUCTION. Change the setting of VIDEO NOISE REDUCTION in the INPUT menu.</p>	<p>36</p>

(continued on next page)

Situations that can be easily mistaken for a projector defect (continued)

Phenomenon	Situations not caused by a projector defect	Reference page
The computer connected to the USB TYPE B projector port does not start up.	The computer cannot start up in the current hardware configuration. Disconnect the USB cable from the computer, then reconnect it after starting up the computer.	11
RS-232C does not work.	The SAVING feature is on. Select DISABLE for POWER SAVING MODE item in the SETUP menu.	40
	The COMMUNICATION TYPE for the CONTROL port is set to NETWORK BRIDGE. Change COMMUNICATION TYPE to OFF in the OPTION>SERVICE>COMMUNICATION menu.	54
Networking does not work	The SAVING feature is on. Select DISABLE for POWER SAVING MODE item in the SETUP menu.	40
NETWORK BRIDGE does not work	The NETWORK BRIDGE feature is turned off. Change COMMUNICATION TYPE to NETWORK BRIDGE in the OPTION>SERVICE>COMMUNICATION menu.	54
The schedule feature does not work	The SAVING feature is on. Select DISABLE for POWER SAVING MODE item in the SETUP menu.	40
When the projector is connected to the network, it powers off and on as described below. Powers off ← ↓ POWER indicator blinks in orange a few times ↓ Goes into power saving mode	Disconnect the LAN cable and check that the projector is working properly. If this phenomenon occurs after connecting to the network, there may be a loop between two Ethernet switching hubs within the network, as explained below. - There are two or more Ethernet switching hubs in a network. - Two of the hubs are doubly connected by LAN cables. - This double connection forms a loop between the two hubs. Such a loop may have an adverse effect on the projector as well as the other network devices. Check the network connection and remove the loop by disconnecting the LAN cables such that there is only one connecting cable between two hubs.	-
Video files are not playing properly on the "LiveViewer" computer.	"LiveViewer" has been intentionally or accidentally shut down. DirectDraw® or Direct3D® has been disabled on your Windows®. Please refer to the Microsoft® Help and Support home page on how to enable DirectDraw® or Direct3D®.	-

NOTE • Although bright spots or dark spots may appear on the screen, this is a unique characteristic of liquid crystal displays, and it does not constitute or imply a projector defect.

Specifications

Please see the **Specifications** in the **Quick Start Guide**.

End User License Agreement for the Projector Software

- Software in this projector consists of multiple independent software modules and there are existing copyrights or/and third party copyrights for each of these software modules.
- Be sure to read “End User License Agreement for the Projector Software” which is a separate document.