

IN514x-series IR Code Table

KEY NO	KEY NAME	IR FORMAT	CUSTOMER	HEX DATA
K01	STANDBY	NEC	4E87	39
K02	ON	NEC	4E87	3A
K03	ID 1	NEC	4E87	6A
K04	ID 2	NEC	4E87	6B
K05	ID 3	NEC	4E87	6C
K06	ID 4	NEC	4E87	6D
K07	COMPUTER IN 1	NEC	4E87	2D
K08	COMPUTER IN 2	NEC	4E87	2E
K09	COMPUTER IN 3	NEC	4E87	2F
K10	LAN	NEC	4E87	30
K11	USB TYPE A	NEC	4E87	54
K12	USB TYPE B	NEC	4E87	55
K13	COMPONENT	NEC	4E87	56
K14	S-VIDEO	NEC	4E87	57
K15	VIDEO	NEC	4E87	58
K16	HDMI 1	NEC	4E87	5F
K17	HDMI 2	NEC	4E87	60
K18	DIGITAL	NEC	4E87	61
K19	PAGE UP	NEC	4E87	25
K20	MAGNIFY ON	NEC	4E87	52
K21	VOLUME +	NEC	4E87	08
K22	MAGNIFY OFF	NEC	4E87	53
K23	PAGE DOWN	NEC	4E87	24
K24	VOLUME -	NEC	4E87	04
K25	FREEZE	NEC	4E87	0E
K26	F5	NEC	4E87	65
K27	AV MUTE	NEC	4E87	51
K28	UP	NEC	4E87	13
K29	LEFT	NEC	4E87	11
K30	ENTER	NEC	4E87	32
K31	RIGHT	NEC	4E87	12
K32	DOWN	NEC	4E87	14
K33	RESET	NEC	4E87	6E
K34	MENU	NEC	4E87	02
K35	ESC	NEC	4E87	50
K36	PbyP	NEC	4E87	66
K37	ASPECT	NEC	4E87	34
K38	AUTO	NEC	4E87	33
K39	MY BUTTON 1	NEC	4E87	2B
K40	MY BUTTON 2	NEC	4E87	67
K41	MY BUTTON 3	NEC	4E87	68
K42	MY BUTTON 4	NEC	4E87	69
K43	POSITION	NEC	4E87	6F
K44	LENS SHIFT	NEC	4E87	4E
K45	FOCUS +	NEC	4E87	49
K46	ZOOM +	NEC	4E87	4A
K47	KEYSTONE	NEC	4E87	20
K48	LENS MEMORY	NEC	4E87	70
K49	FOCUS -	NEC	4E87	48
K50	ZOOM -	NEC	4E87	4B

