


Remote IR Information

Standard consumer IR (NEC framing) Device ID:0x4E87

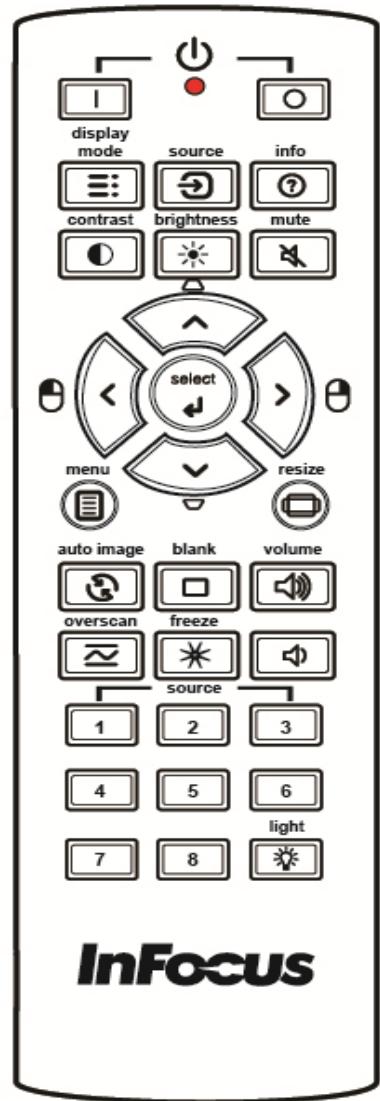

Code Table (InFocus RC)

Key No.	Description	Data Code
1 Power On	Turns the projector on.	3Ah
2 Power Off	Turns the projector off.	39h
3 Display Mode	Choose a suitable preset mode for usage environment	2Ch
4 Source	Toggles between the available sources.	10h
5 Info	Brings up a read-only projector information menu.	5Eh
6 Contrast	Adjusts contrast.	36h
7 Brightness	Adjusts brightness.	03h
8 Mute	Mutes audio.	59h
9 Select	When the OSD menu is on, acts as a selection/enter key. When the OSD menu is off, adjusts keystone +.	32h
10 ^	When the OSD menu is on, acts as an up arrow key. When the OSD menu is off, adjusts keystone +.	13h
11 v	When the OSD menu is on, acts as a down arrow key. When the OSD menu is off, adjusts keystone -.	14h
12 <	When the OSD menu is on, acts as a left arrow key. When the OSD menu is off, acts as an HD mouse left button.	11h
13 >	When the OSD menu is on, acts as a right arrow key. When the OSD menu is off, acts as an HD mouse right button.	12h
14 Menu	Brings up the OSD menu.	02h
15 Resize	Toggles through available aspect ratios.	34h
16 Auto Image	Resynchronizes the PC/VGA image.	33h
17 Blank	Displays a blank screen.	31h
18 Volume+	Increases volume.	08h
19 Overscan	Adjusts overscan.	35h
20 Freeze	Freezes/Unfreezes the source image.	0Eh
21 Volume-	Decreases volume.	04h
22 Source 1	Displays the VGA 1 source image.	2Dh
23 Source 2	Displays the VGA 2 source image.	2Eh
24 Source 3	Displays the HDMI source image.	2Fh
25 Source 4	Displays the DVI source image.	30h
26 Source 5	Displays the RGBHV video source image.	54h
27 Source 6	Displays the component video source image.	55h
28 Source 7	Displays the S-video source image.	56h
29 Source 8	Displays the composite video source image.	57h
30 Light	Turns on remote backlight	n/a