



720p LENS CHANGE INSTRUCTIONS

Follow these steps to remove the lens from the preshow projector. Installation of the lens is just the reverse order.


Tools required: 1) Philips Head Screw Driver 2) 3mm size, 4inch long, Allen 'Key' Wrench

Using a Philips Head Screw Driver:


REMOVE FACE PLATE SCREWS AND CAREFULLY LAY FACE PLATE DOWN IN FRONT OF PROJECTOR. WIRES TO IR DETECTOR BOARD WILL STILL BE ATTACHED SO CARE SHOULD BE TAKEN NOT TO DAMAGE CONNECTION.

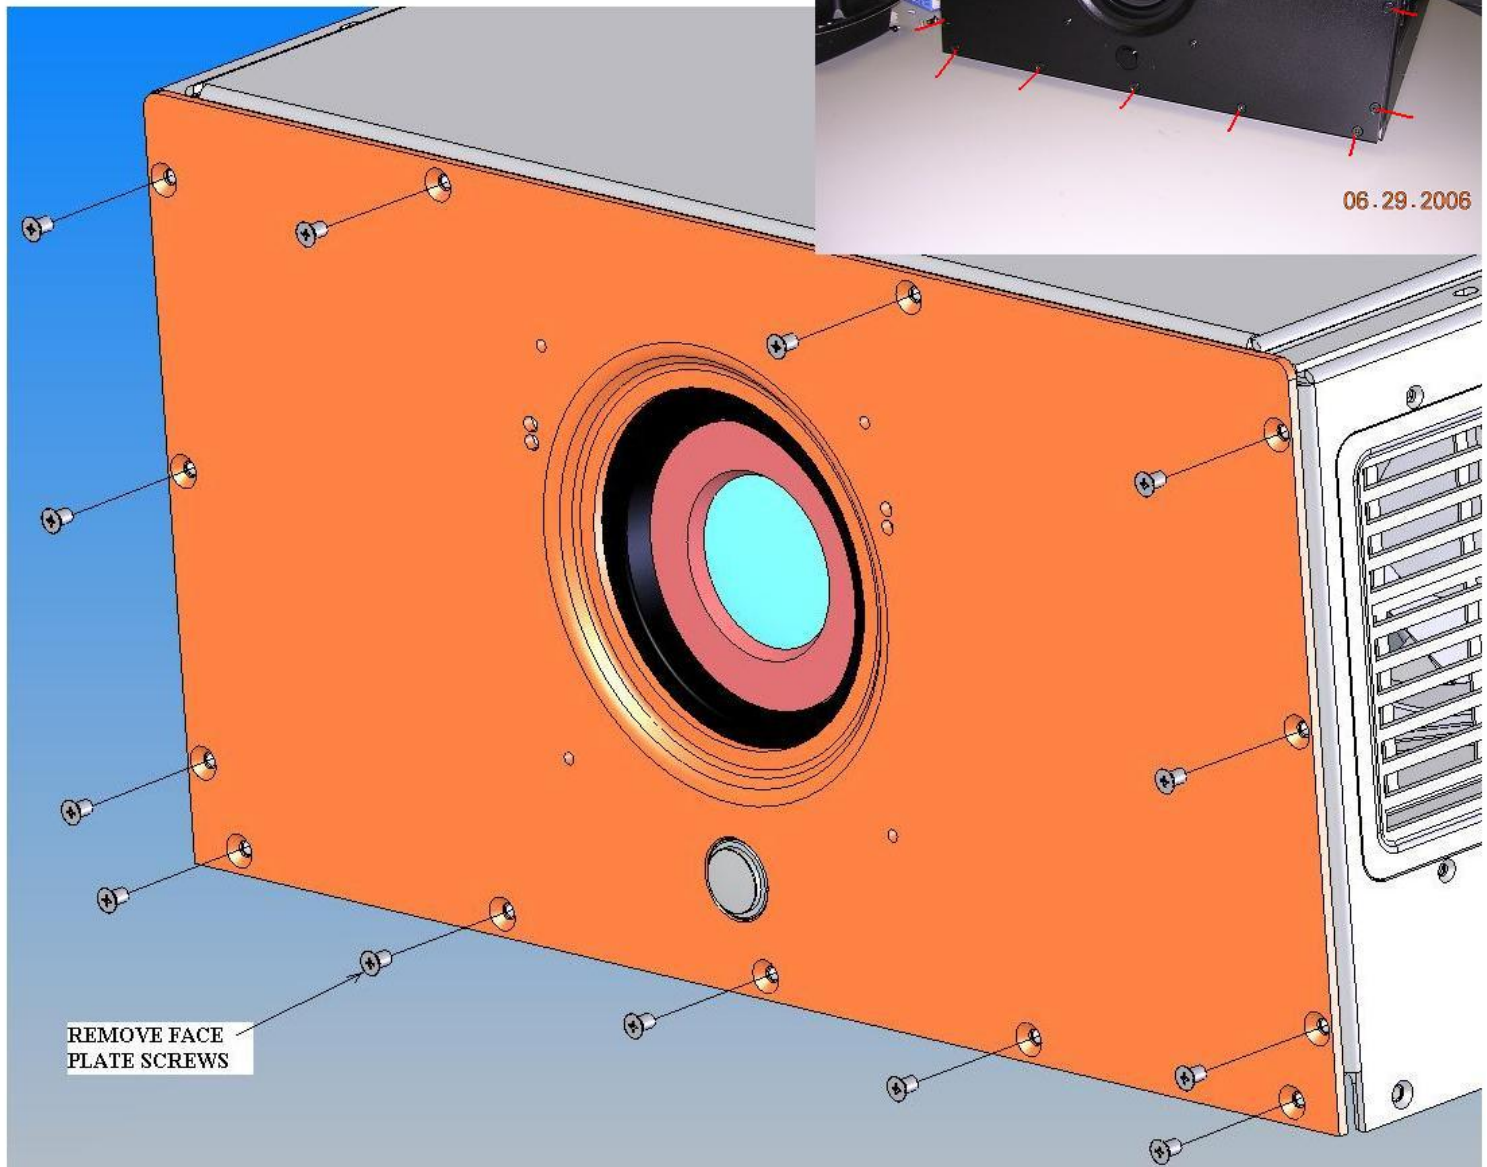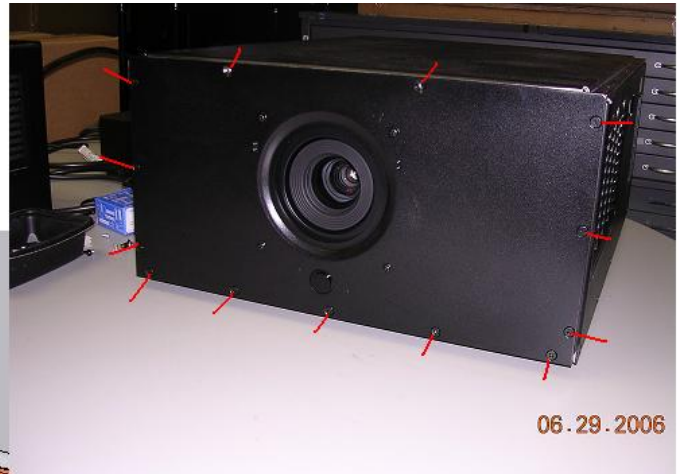

720p LENS CHANGE INSTRUCTIONS

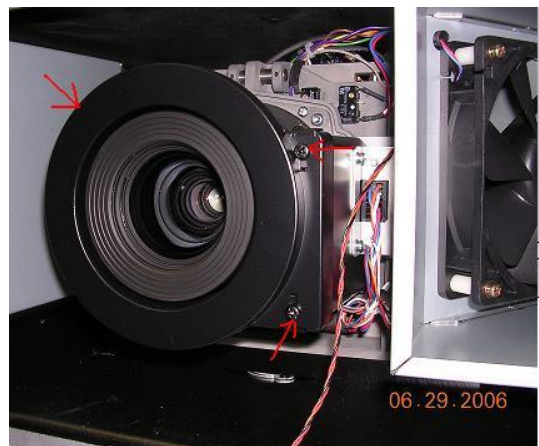

REMOVE SCREWS AND RETAINER CLIPS THAT HOLD THE LENS COLLAR IN PLACE. NOTE THAT THE CLIPS ENGAGE INTO THE SLOT IN THE LENS MOTOR HOUSING.

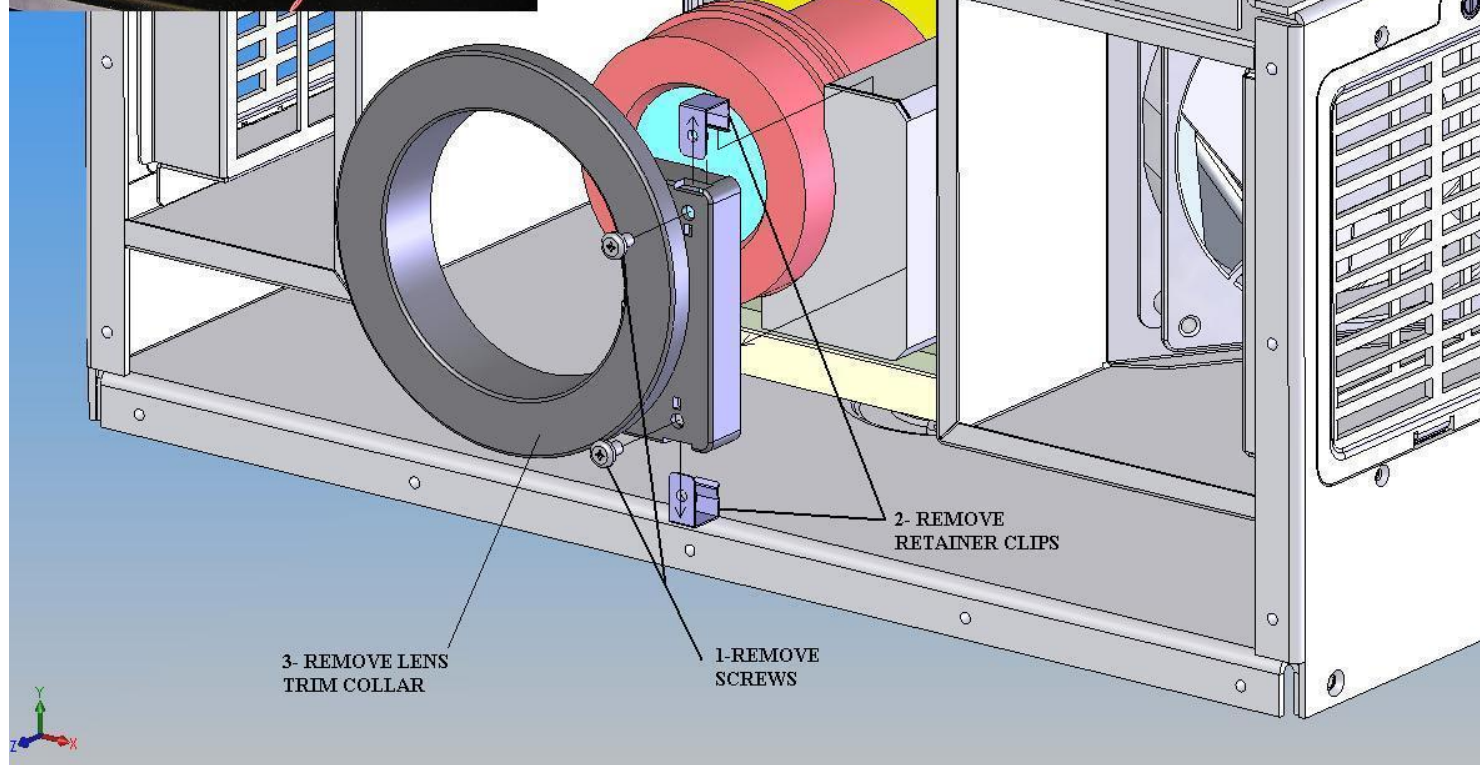

720p LENS CHANGE INSTRUCTIONS

Using a 3mm size, 4inch long, Allen ‘Key’ Wrench:

