


ProjectoWrite3 Series



Projector

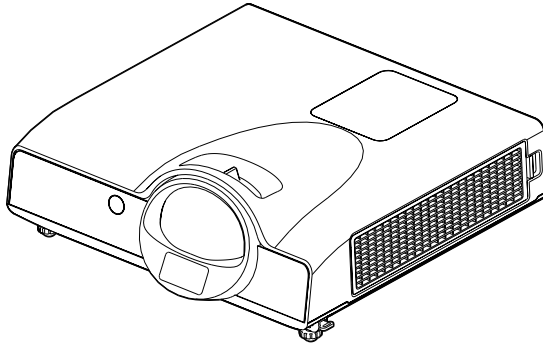

About the Owner's Manual

Please read the owner's manual thoroughly to ensure correct usage of the projector and its features.

After reading, store the owner's manual in a safe place for future reference.

Features

1. Dress up Design
2. Designed for tough environment
3. Side change lamp
4. Side change filter
5. Quick off
6. Advanced Anti-theft features
7. Five auto features (Auto Search, Auto Sync, Auto Ceiling, Auto Keystone and Auto Filter Alert)
8. Seven display modes (Natural, Cinema, Daylight, Green board, White Board, Black Board and User)
9. Built-in 8W speaker
10. Logo capture
11. Image freeze function
12. Digital zoom adjustment

The content of this manual is subject to change without previous notice.

All rights reserved.

Issue of edition 1002.05_01

Contents

About Owner's Manual

Contents	1
Contents of Your Box	3-A
Safety Instructions	4
Safety Labels.....	5
Part Names	6
Projector.....	6
Control Panel	7
Rear.....	8
Setting Up	9
Arrangement	9
Power ON / OFF.....	10
Setting Up The Projector	11
Ceiling Mounted Installation Guide	12
Adjusting The Projector's Elevation	13
How To Connect	14
Remote Control	16
Remote Control (Optional)	19
Menu Operation.....	23
How To Operate On-Screen Display	23
MENU (PC Mode).....	24
Picture Menu (PC Mode).....	24
Audio Menu (PC Mode)	25
Setting Menu (PC Mode).....	26
MENU (Video Mode)	27
Picture Menu (Video Mode).....	27
Audio Menu (Video Mode)	28
Setting Menu (Video Mode).....	29


MENU	30
Advanced Menu.....	30
Presentation Menu	33
Security Menu.....	35
PIN Key In Operation.....	38
Network Control Software Application	39
Before Use	40
Before To Use Network Control Software	40
Projector Auto Search.....	41
Modify the Projector Setting	44
Registering And Configuring the Projector.....	45
Delete.....	45
Projector Setting	46
System Setting / Monitor / Default Setting / Auto Detect Optimal Setting.....	48
Link.....	49
Control Panel Window Introduction.....	50
Power Control / Input Source / Function Key	50
Function Key / Projector Status.....	51
Network Control Window Introduction.....	52
Maintenance Of Projector	53
Air Filter / Replacing the Air Filter	53
Lamp / Replacing New Lamp.....	54
Other Care / Cleaning the Lens	56
Troubleshooting.....	57
Indicator.....	57
Error For Machine Defects	58
List of Supported Monitor Displays	60
Appendix	
Interactive Function Operation(Optional)	

Contents of Your Box


Check-list of your accessories

Please make sure that following items are included in the box, along with the main.
If any items missing, contact your dealer.


1. Projector

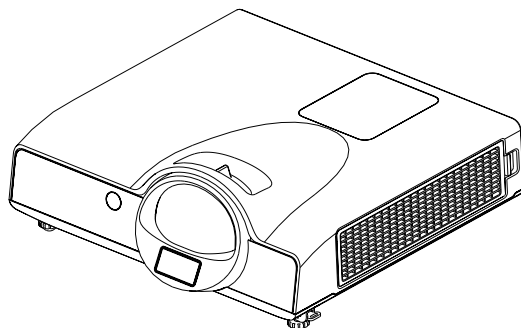

2. Quick Start Guide

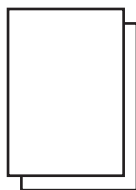

 
3. Owner's Manual CD




4.Remote control




4. Power cord

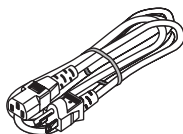

5. Computer cable

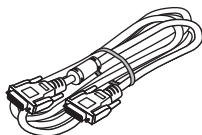

☐ USB Cable (Optional)

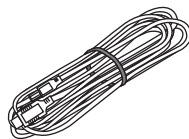

Safety Instructions

The projector is designed and tested to meet the latest standards for safety of information technology equipment. However, to ensure safe use of this product, it is important that you follow the instructions mentioned in this manual and marked on the product.



WARNING / CAUTION

1. If a problem occurs
 - If smoke or strange odors arise, continued use could result in fire or electrical shock.
 - If there is no image or sound, or the sound is distorted in the projector. In some cases, immediately remove the power cable from the power outlet. After making sure that the unit has stopped, contact your dealer for repairs. Never attempt to repair by yourself because this is dangerous.
2. Do....
 - Place the projector in a stable horizontal position.
 - Put the projector in a cool place, and ensure that there is sufficient ventilation.
 - To consult with your dealer before a special installation such as suspending from a ceiling.
3. Do not....
 - Do not place the projector on an unstable, slanted or vibrating surface such as a wobbly or inclined stand.
 - Do not cover the projector's vents. Keep a space of 20 cm or more between the projector and other objects such as walls.
 - Do not place the projector on metallic goods.
 - Do not place the projector on carpet, cushions or bedding. Do not place the projector in direct sunlight or near hot objects such as heaters.
 - Do not place anything near the projector lens or vents, or on top of the projector.
 - Do not place anything that may be sucked into or stick to the vents beside of the projector.
 - Do not use this projector if there is no image or sound, or if the sound is distorted.
 - Do not place this projector in a container containing liquid.
4. While connecting, make sure that the shape of the cable's connector fits the port to connect with. Be sure to tighten the screws on connectors with screws.
5. Do not disassemble or modify the projector and accessories.
6. Be careful not to damage the cables, and do not use damaged cables.
7. Use appropriate accessories or otherwise designed cables. Ask your dealer about non-accessory cables that may have other lengths.
8. Make sure that devices are connected to the correct ports. An incorrect connection may result in malfunction or damage to the device and the projector.
9. Do not look through the lens when the lamp is on.

Do not look through the lens when the lamp is on. The powerful light could adversely affect vision. Use special caution in households where children are present.
10. A strong light is emitted when the projector's power on. Do not look into the lens of the projector or look inside of the projector.



Do not place the projector upon either side to project an image.


NO SIDEWARD

Safety Labels

Safety labels are used on or within the projector to alert you to items or areas requiring your attention.

WARNING LABEL

<p>WARNING</p> <ul style="list-style-type: none"> • BEFORE OPERATING, PLEASE READ USER'S MANUAL. • BEFORE REMOVING SCREWS, DISCONNECT POWER CABLE. • DO NOT BLOCK VENTING OPENINGS. 	<p>WARNUNG</p> <ul style="list-style-type: none"> • VOR DEM EINSATZ DIE BETRIEBUNGSANLEITUNG LESEN. • VOR DEM ENTFERNEN DER SCHRAUBEN DAS NETZKABEL ABTRENNEIN. • LÜFTUNGSÖFFNUNGEN NICHT BLOCKIEREN. 	<p>AVIS</p> <ul style="list-style-type: none"> • VUEILÉZ LIRE LE MODE D'EMPLOI AVANT L'USAGE. • DÉBRANCHEZ LE CÂBLE D'ALIMENTATION AVANT DE RETIRER LES VIS. • NE BOCUEZ PAS LES ORIFICES DE VENTILATION.
<p>警告</p> <ul style="list-style-type: none"> • 使用前に必ず、取扱説明書をお読みください。 • 工具を取り除く前に、必ず電源プラグをコンセントから抜いてください。 	<p>警告</p> <ul style="list-style-type: none"> • 動作時、冷却ファン騒音が発生します。 • 電源ケーブル、電源プラグを電源コンセントから抜く前に、必ず電源プラグをコンセントから抜いてください。 • 冷却ファン騒音、冷却ファン騒音発生時の騒音レベルは、製品仕様書に記載されています。 	<p>警告</p> <ul style="list-style-type: none"> • 動作時、冷却ファン騒音が発生します。 • 電源ケーブル、電源プラグを電源コンセントから抜く前に、必ず電源プラグをコンセントから抜いてください。 • 冷却ファン騒音、冷却ファン騒音発生時の騒音レベルは、製品仕様書に記載されています。

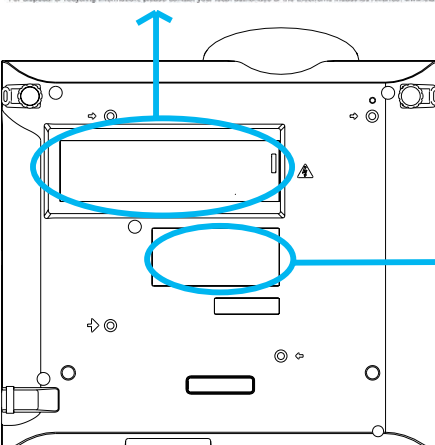


EMI LABEL




LAMP DOOR WARNING LABEL

<p>CAUTION HOT</p> <p>TURN THE POWER OFF AND WAIT 1 HOUR BEFORE CHANGING THE LAMP.</p> <p>WARNUNG HEISS!</p> <p>SCHALTEN SIE DAS GERÄT AUS UND WARTEN SIE 1 STUNDE BEI DER LAMPENWECHSELUNG.</p>	<p>ATTENTION CHAUD</p> <p>COUPER L'ALIMENTATION ET ATTENDRE 1 HEURE AVANT DE CHANGER LA LAMPE.</p> <p>高温注意</p> <p>ランプ交換時、電源を切った後、1時間待ってから行ってください。</p> <p>交換後、必ず電源プラグをコンセントから抜いてください。</p>
<p>CAUTION</p> <p>HIGH-PRESSURE LAMP MAY EXPLODE IF IMPROPERLY HANDLED.</p> <p>DO NOT CLEAN THE AIR FILTER WITH WATER OR ANY LIQUID.</p> <p>DO NOT OPERATE THE PROJECTOR WITHOUT THE AIR FILTER.</p> <p>VORSICHT!</p> <p>Hochdrucklampe kann bei falscher Handhabung explodieren.</p> <p>Nur mit einer Lampe des gleichen Typs austauschen.</p> <p>Verwenden Sie niemals Wasser oder andere Flüssigkeiten.</p> <p>Benutzen Sie keine Projektoren ohne den Luftfilter.</p>	<p>ATTENTION</p> <p>LA LAMPE À HAUTE PRESSION POUR EXPLOSER SI ELLE EST MANUVERÉE INCORRECTEMENT.</p> <p>NE PAS NETTOYER L'ÉCRAN AVEC UN LIQUIDE.</p> <p>NE PAS UTILISER LA LAMPES AVEC UN FILTRE À AIR LIQUIDE POUR NETTOYER LE FILTRE À AIR.</p> <p>NE PAS FONCTIONNER VOTRE PROJECTEUR SANS LE FILTRE À AIR.</p> <p>注意</p> <p>ランプは、高圧タイプのものと交換してください。</p> <p>高圧タイプのランプを交換するときは、必ず電源プラグをコンセントから抜いてください。</p> <p>高圧タイプのランプを交換するときは、必ず電源プラグをコンセントから抜いてください。</p> <p>高圧タイプのランプを交換するときは、必ず電源プラグをコンセントから抜いてください。</p>

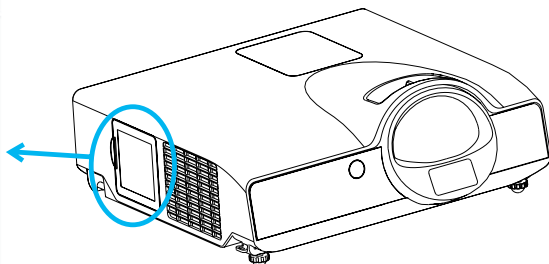

Projector

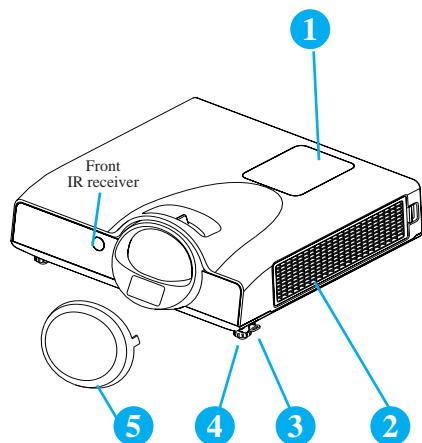

1 Touch Keypad

Operating system.

2 Filter cover

Prevents dust and other foreign particles from being drawn into projector.

Remove the filter cover to clean the air filter.

3 Foot adjust button

Lock / unlock the adjustable foot.

4 Front adjustable foot

Extend and retract to adjust the projection angle.

5 Lens Cover

Attach when not using to protect the lens from becoming dirty or damaged.


6 Focus ring

Use the focus ring to focus the projector image.


Rotate the focus ring until the image is clear.

7 Lamp door

The lamp unit is inside

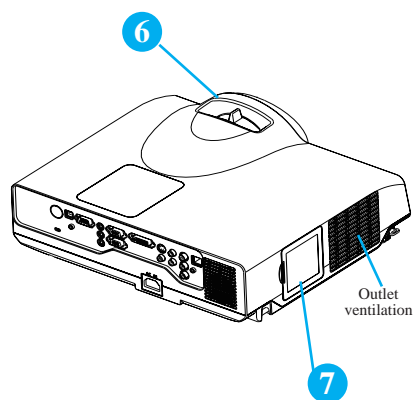

Touch Keypad

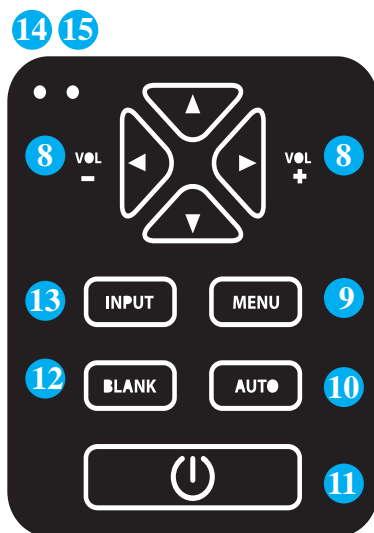

8 VOLUME + / -

Sound louder or lower.

9 MENU

Display or hide the OSD main menu

10 AUTO

Automatically adjust the setting to match the current input.

11 (POWER)

Power On / Off.

12 BLANK

Blank the projected image. The time of Blank mode can be set in 15 minutes, 30 minutes or 60 minutes. The projector will shut down automatically after passing each set time.

13 INPUT

Select input source:



Note :

If the projector can not be captured the signals within 15 minutes, it will be shut down automatically.


14 POWER INDICATOR

Light on or flash to indicate the operating status of the projector.

15 LAMP INDICATOR

Indicate a status in the projector.

Rear

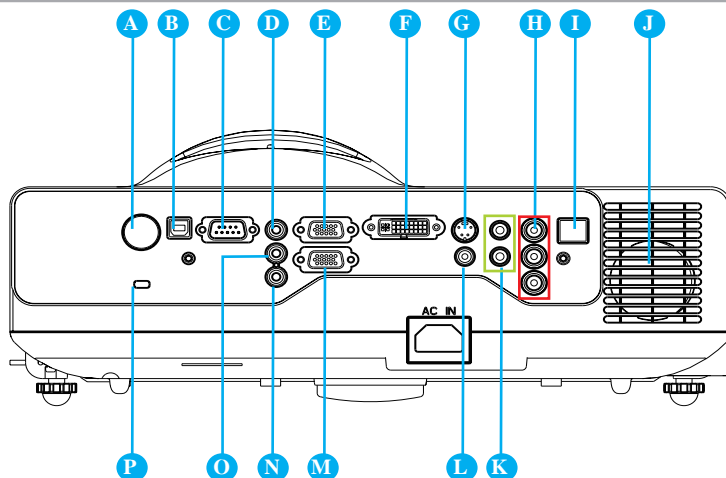

A REAR IR RECEIVER

B USB

Connect a USB mouse cable to a computer to control computer mouse functions.

C RS232

Serial data port for controlling the projector with a computer or other RS-232 control device.

D AUDIO IN 1 & O AUDIO IN 2

Mini jack port corresponds to computer input. (RGB IN→AUDIO IN 1, DVI-1 IN→AUDIO IN 2)

E RGB IN

Input analog RGB signal from a computer.

F DVI-I IN

Input digital DVI-I signal from a computer.

G S-VIDEO

S-Video signal from a video source.

H AUDIO IN 3, R / L

RCA type corresponds to video input.

I LAN

Please see page 37 Network Control Application for details.

J SPEAKER

K COMPONENT (Y, Pb, Pr / Y, Cb, Cr)

Input Component signal from a DVD player.

L VIDEO

Composite video signal from a video source.

M RGB OUT

Connect an external monitor to this connection to view the “RGB IN” input.

N AUDIO OUT

This jack outputs the audio signal from computer signal to external audio equipment.

P Slot for Kensington Micro Saver Security System

Built-in Security Slot

This security slot supports the MicroSaver® Security System. MicroSaver® is a registered trademark of Kensington Microware Inc.

The logo is trademarked and owned by

Kensington Microware Inc.

Setting Up

Arrangement

- 1. Before installation, make sure that the projector is turned off and the power cord is disconnected.
- 2. Do not set up and move the projector, while it is hot.
- 3. The distance between the projector and screen determines the actual image size. Refer to the table below to determine the screen size at a given distance.


Note: The dimensions in the table below are approximate.

4:3

Image size (inch)	Distance (cm)	Offset(cm)
52	63.6	7.9
60	74.0	9.1
70	87.0	10.6
80	100.0	12.2
90	113.0	13.7
100	126.0	15.2

16:10



Image size (inch)	Distance (cm)	Offset(cm)
49	63.6	20.8
60	78.7	25.4
70	92.5	29.7
80	106.2	33.9
90	120.0	38.2
94.3	126.0	40.0

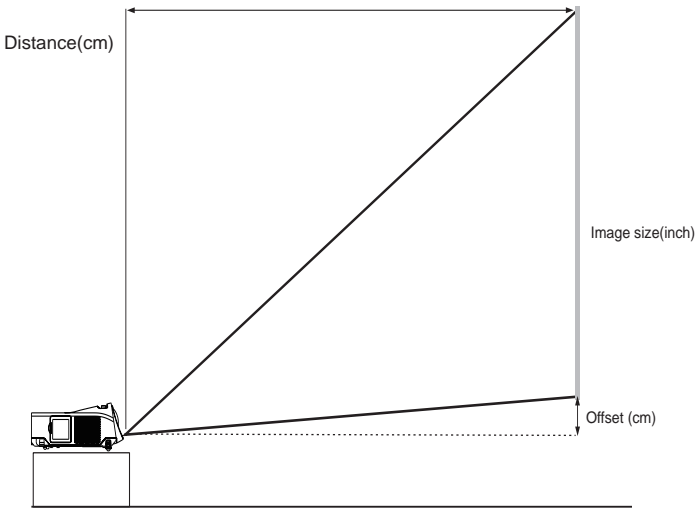

When installed against a wall, leave about 20cm (7.9in.) between the projector and the wall.

Setting Up

Power ON / OFF

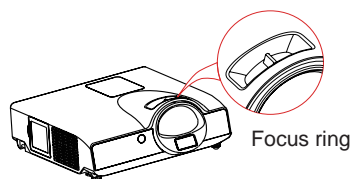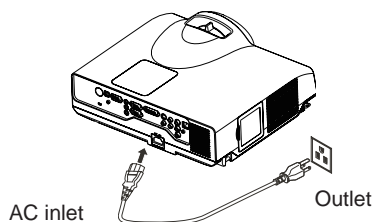


Turning on the power

1. Make sure that power cord is firmly and correctly connected to the projector.
2. Remove the lens cover, and the POWER indicator will light up in green.
3. Press POWER button on the control panel or the remote control to turn on the projector.
4. Rotate the focus ring to adjust the focus.

WARNING

- ★ A strong light is emitted when the projector's power is on. Do not look into the lens of the projector or look inside of the projector through any of the projector's openings.

1.

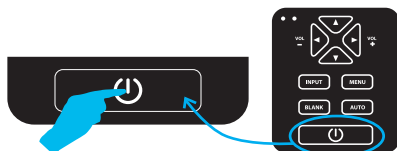


2.



3.~4.



5.

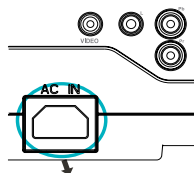

Turning off the power

1. Press the POWER button on the control panel or the remote control. The "power off" confirmation message appears.
2. Press the POWER button again while the message appears.
3. When the projector enters "Standby" mode, the POWER indicator will light up in green.
4. If you don't use the projector, remove power cord.

WARNING

- ★ Do not touch around the lamp cover and the exhaust vents during use or just after use, since it is too hot.
- ★ An apparatus with CLASS I construction shall be connected to a MAINS socket outlet with a protective earthing connection.
- ★ The MAINS plug or an appliance coupler shall remain readily operable.

CAUTION


- ★ Do not turn off the AC power for 60 seconds after the lamp is turned on. Doing so could cause premature lamp failure.

Setting Up


Setting Up The Projector

The projector supports the following four different projection methods.


1. Front projection

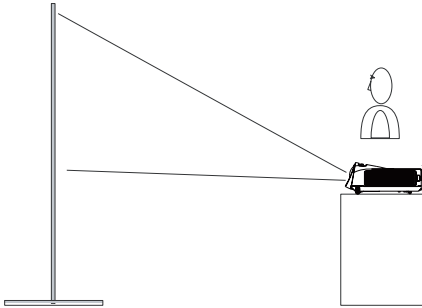


3. Rear ceiling projection

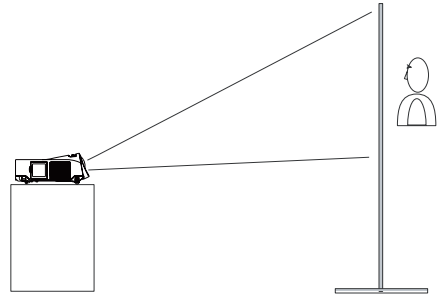

2. Rear projection

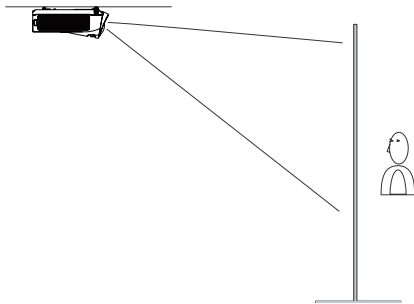

4. Front ceiling

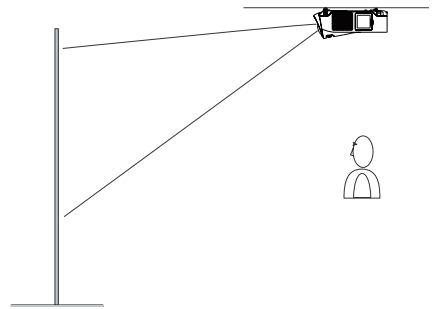


projection

Special installation is required in order to suspend the projector from the ceiling. Please ask your dealer for details.

Ceiling Mounted Installation Guide

Attach ceiling mount at four-suspension bracket fixing points when suspending from a ceiling. Special installation is required in order to suspend the projector from the ceiling. Please ask your dealer for details.

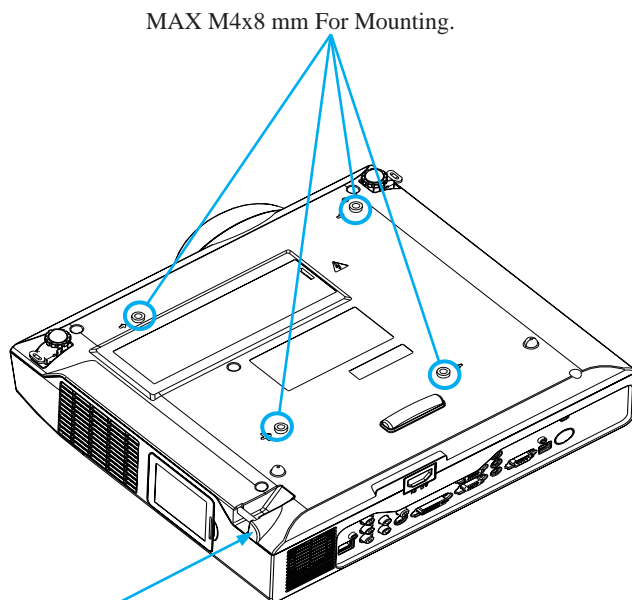

Security Anchor

The product is equipped with security anchor and PIN LOCK functions to help prevent unauthorized removal projector.

WARNING

- ▶ Do not grasp the security anchor to carry projector, since it is not designed for it.
- ▶ The security anchor is not for comprehensive theft prevention measures. It is intended to be used as supplemental theft prevention measure.

Adjusting The Projector's Elevation


Use the adjustable foot at the front of the projector to set the image height.

- 1** Holding the projector, push the foot adjust buttons to loosen the front adjustable foot.
- 2** Position the front side of the projector to the desired height.
- 3** Release the foot adjust buttons in order to lock the front adjustable feet.
- 4** After making sure that the front adjustable feet are locked, put the projector gently atop.



CAUTION

- * The adjustment range of front adjustable foot is 0 to 8.5 degrees.
- * When the foot is adjusted, it may cause the shape of the projected image to become distorted. Use the keystone correction function to correct this distortion.

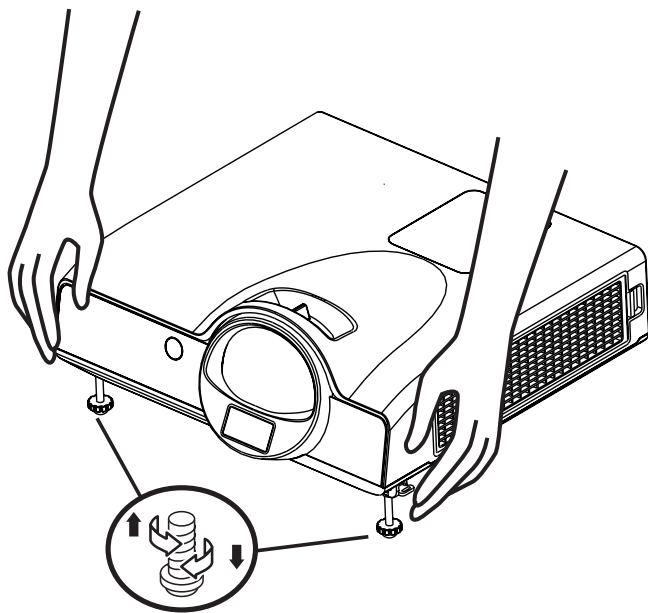


Setting Up

How To Connect

(Please click [here](#) if your projector is with high efficiency filter.)

Laptop or desktop computer

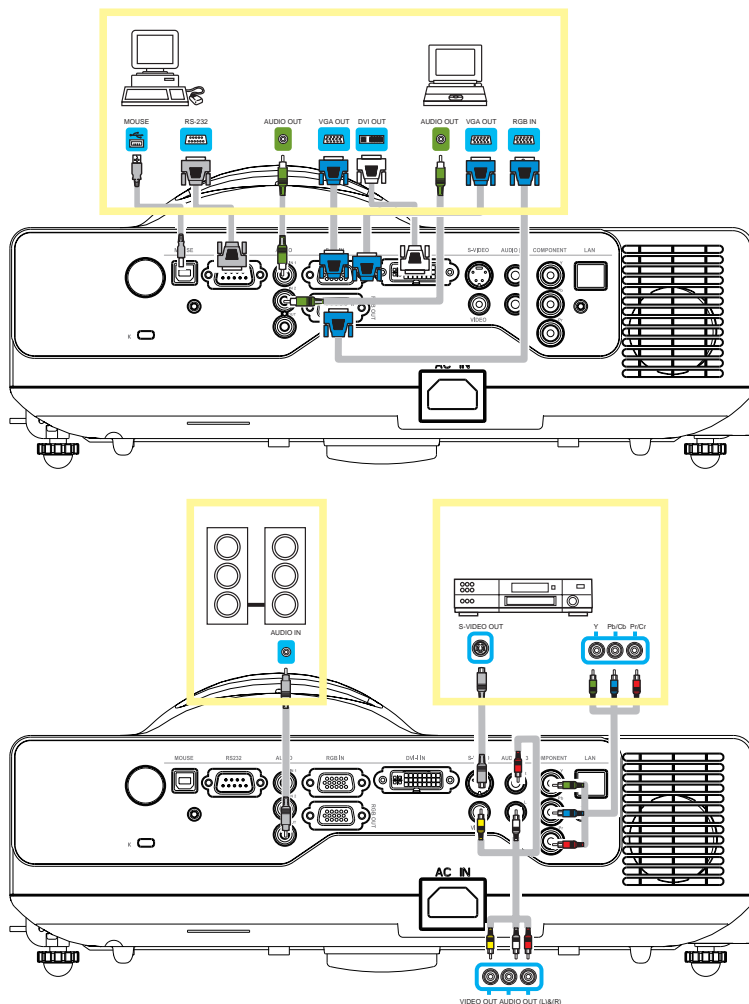

Before starting, make sure that the projector and computer are both turned off.

Connect the computer cable

Connect the computer cable from the computer to the projector's RGB IN or DVI-I IN. If needed, connect the MONITOR OUT to a monitor to view input from RGB IN or DVI-I IN. Tighten the screw on all connectors.

How To Connect

Laptop or desktop computer


Connect the audio cable if necessary


1. Please connect the audio cable to the AUDIO IN 1 if the computer cable connected to the projector's RGB IN.
2. Please connect the audio cable to the AUDIO IN 2 if the computer cable connected to the projector's DVI-I IN.
3. Please connect the audio cable to the AUDIO IN 3 if the video cables are connected to the VEDIO / S-VIDEO / Y,Pb,Pr port of the projector.

Connect USB Mouse

USB mouse compatible MS-Windows 98/ 2000/ NT/ XP/ Me, Macintosh :OS8.6~10.1, and a Microsoft Mouse driver installed.

1. Insert the end of the USB Cable (B-Type) to the projector's USB port.
2. Connect the end of the USB Cable (A-type) to the computer's USB port.
3. When the projector and computer are turned on, the appropriate drivers should load automatically.


 If the selected video image is not displayed after the projector is turned on and the correct video source has been selected, please check that the video source device is turned on and operating correctly. Also check that the signal cables have been connected correctly.

 Many laptops do not turn on their external video ports when connected to a projector. Usually a key combination like Fn + F3 or CRT/LCD key turns the external display on / off. Locate a function key labeled CRT/LCD or a function key with a monitor symbol on the laptop. Press Fn and the labeled function key simultaneously. Refer to your laptop's documentation to discover your laptop's key combination.

Remote Control

Remote Control Batteries Installation

1. Remove the battery cover.
2. Load the batteries.
Make sure the poles are correctly oriented.
3. Close the battery cover.

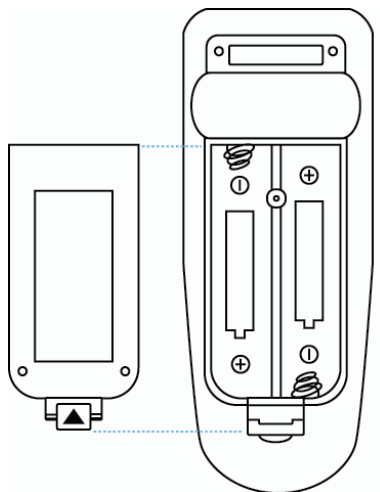

Caution

- ▶ Avoid excessive heat and humidity.
- ▶ Do not drop the remote control.
- ▶ If the remote control will not be used for an extended period, remove the batteries.
- ▶ Do not expose the remote control to water or moisture. This could result in malfunction.
- ▶ Replace the battery when remote control operation becomes sluggish or unresponsive.
- ▶ Do not place the remote control close to the cooling fan of the projector.
- ▶ Do not use batteries of different types at the same time.
- ▶ Do not mix a new battery with used one. Make sure the plus and terminals are correctly aligned when loading batteries.
- ▶ Dispose of batteries in accordance with environmental laws.
- ▶ Do not disassemble the remote control. If the remote control needs service, please contact your dealer.
- ▶ The batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

Remote Control

POWER

Power on / operation mode, Standby mode, Cool down mode.

INPUT

Select input source :



MENU

Display or hide the On-Screen Display main menu page.



Press or to select On-Screen Display menu item.



Press or to select and adjust the function of On-Screen Display menu item or value.

LASER

Aim the remote control at the screen, press and hold button to activate the laser pointer.

MUTE

Mute audio.

AUTO

Refresh the current image.

BLANK

Hide the current image, become black color on the screen.




Press / / / button to move arrow direction of window.

MOUSE-L / MOUSE-R

The function is like mouse of desktop/ notebook.


Remote control's mouse functions only will work if the USB cable is connected (see page 15 for instructions)

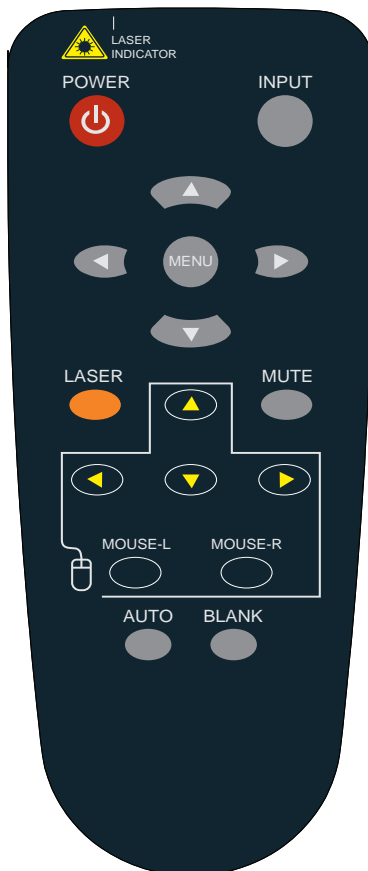

Remote Control (Optional)

Remote Control Batteries Installation

1. Remove the battery cover.
2. Loading the batteries.
Make sure the plus and minus poles are correctly oriented.
3. Close the battery cover.

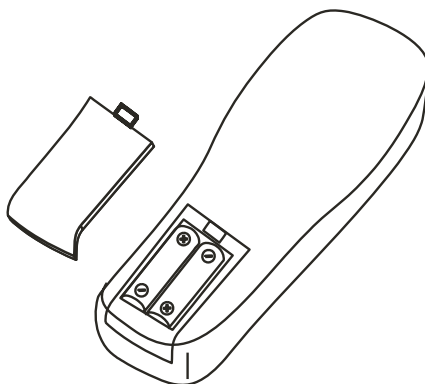

Caution

1. Avoid excessive heat and humidity.
2. Do not drop the remote control.
3. Do not expose the remote control to water or moisture, this could result in malfunction.
4. When the remote control will not be used for an extended period, remove the batteries.
5. Replace the batteries when remote control operation becomes sluggish or unresponsive.
6. Do not place the remote control close to the cooling fan of the projector.
7. Do not disassemble the remote control. If the remote control needs service. Please bring it to the service station.
8. The batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

Remote Control (Optional)

Power

Power on / operation mode, Standby mode, Cooling-down mode.

ESC

Press "ESC" button, it will close "Menu" picture.

Vol +/-

Sound louder or lower.

Menu

Display or hide the OSD main menu page.

Keystone +/-

Adjusts the vertical keystone function.

Still

Keep the current image on the Screen.

Blank

Hide the current image, become black color on the screen.

Auto

 
Refresh the current image.

Menu up/down, Menu left/right

Selecting and adjusting the function of OSD.

INPUT source

Select input source:



Mouse

Select an item or adjust value in the On-Screen Menu.

Zoom in / Zoom out


Zoom in or zoom out.

Mute

Mute audio.

Laser pointer


Use laser pointer from remote control.

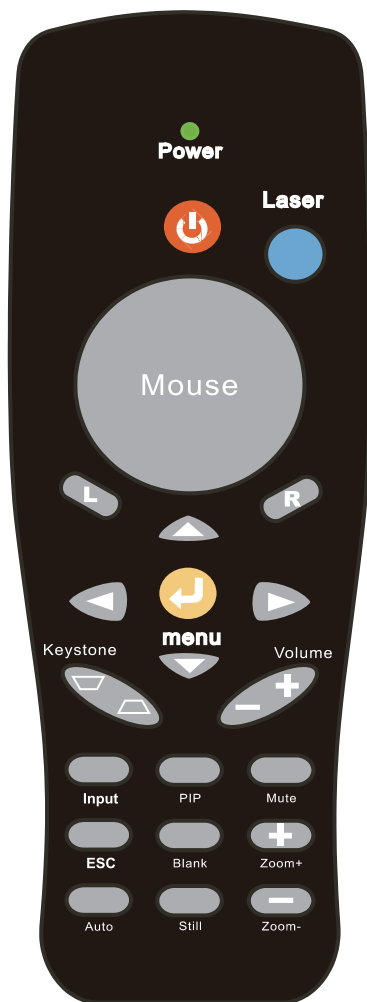

Menu Operation

How To Operate On-Screen Display


1. You could press "Menu" button. It will be shown blue main menu. The first main menu is " PICTURE" menu.
2. Choose which item you want to enter, you could press up / down /left/ right button of control panel or remote control to adjust item or value.

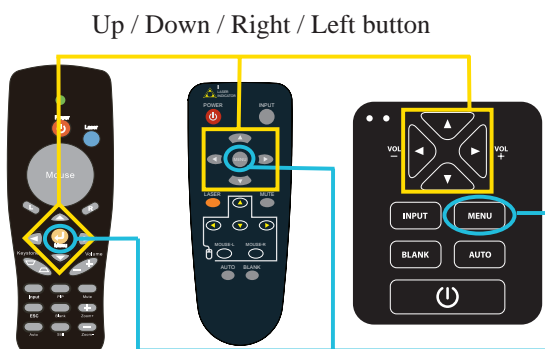

Menu button

MENU (PC Mode)

Picture Menu

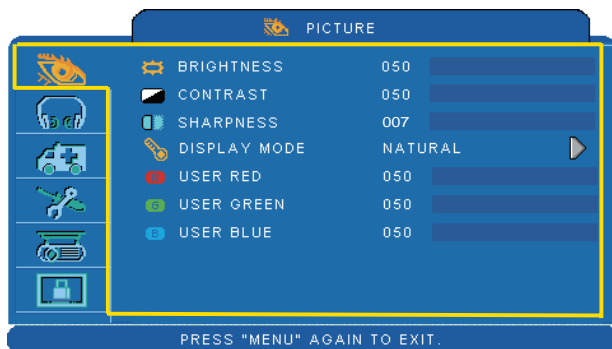


Step:

1. Use the ▲ / ▼ buttons to select an item.
2. Use the ◀ / ▶ cursor buttons to select an item or adjust the value.

Item	Selection	Description
BRIGHTNESS	000/100	Adjust the image brightness level.
CONTRAST	000/100	Adjust the image contrast level.
SHARPNESS	000/015	Adjusts the image sharpness.
DISPLAY MODE	NATURAL	Natural color.
	CINEMA	Enhance contrast ratio when displaying DVD contents.
	DAYLIGHT	Suitable when ambient light is strong.
	GREEN BOARD WHITE BOARD BLACK BOARD	Adjust the color settings to make the projected image on a (green, white, black) board more visible.
	USER	User Red 000/100 User Green 000/100 User Blue 000/100

Audio Menu

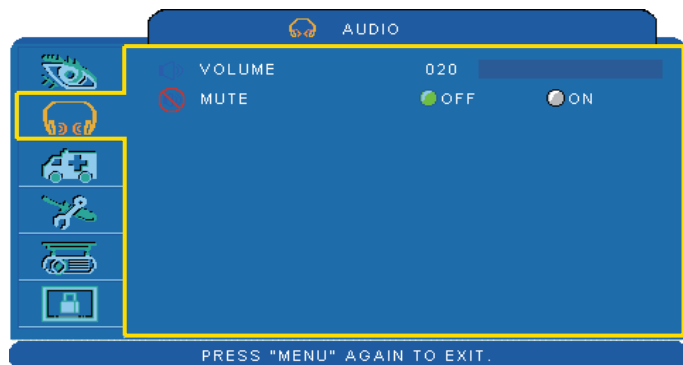

Step:

1. Use the ▲ / ▼ buttons to select an item.
2. Use the ◀ / ▶ buttons to select an item or adjust the value.

Item	Selection	Description
VOLUME	00/40	Adjust the volume.
MUTE	OFF/ON	Mute the volume OFF / ON.

Setting Menu



Step:


1. Use the ▲ / ▼ buttons to select an item.
2. Use the ◀ / ▶ buttons to select an item or adjust the value.

Item	Selection	Description
H POSITION	000/100	Move the image position horizontally. This function is only selected for computer signal.
V POSITION	000/100	Move the image position vertically. This function is only selected for computer signal.
PHASE	000/100	Adjust the image sharpness.
FREQUENCY	000/200	Set the horizontal scanning frequency.
AUTO KEYSTONE	OFF/ON	Correct keystone distortion in image automatically.
KEYSTONE V	-70/+70	Correct vertical keystone distortion in image manually.
AUTO SYNC	EXECUTE	Set all of the above setting automatically.
AUTO SEARCH	OFF/ON	Search signal source manually or automatically.
KEYPAD BEEP	OFF/ON	Turn the Beep of Keypad OFF / ON.

*DVI doesn't support H POSITION, V POSITION, PHASE, FREQUENCY and AUTO SYNC.

MENU (Video Mode)

Picture Menu

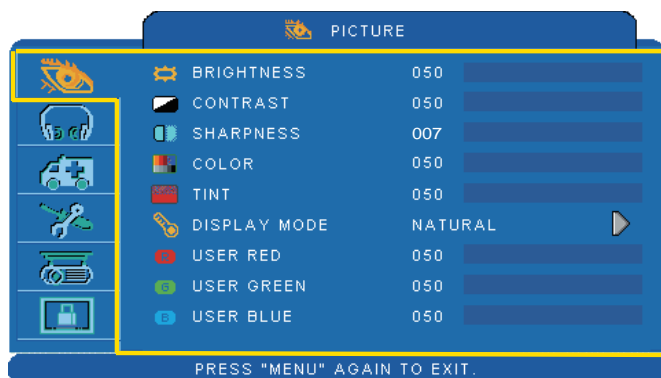


Step:

1. Use the ▲ / ▼ buttons to select an item.
2. Use the ◀ / ▶ cursor buttons to select an item or adjust the value.

Item	Selection	Description
BRIGHTNESS	000/100	Adjust the image brightness level.
CONTRAST	000/100	Adjust the image contrast level.
SHARPNESS	000/015	Adjusts the image sharpness.
COLOR	000/100	Adjust the strength of whole color. This function can be used under video signal, S-Video signal, or component video signal input only.
TINT	000/100	Adjust the image tint. This function can be used under video signal, S-Video signal, or component video signal.
DISPLAY MODE	NATURAL	Natural color.
	CINEMA	Enhance contrast ratio when displaying DVD contents.
	DAYLIGHT	Suitable when ambient light is strong.
	GREEN BOARD WHITE BOARD BLACK BOARD	Adjust the color settings to make the projected image on a (green, white, black) board more visible.
	USER	User Red 000/100 User Green 000/100 User Blue 000/100

Audio Menu

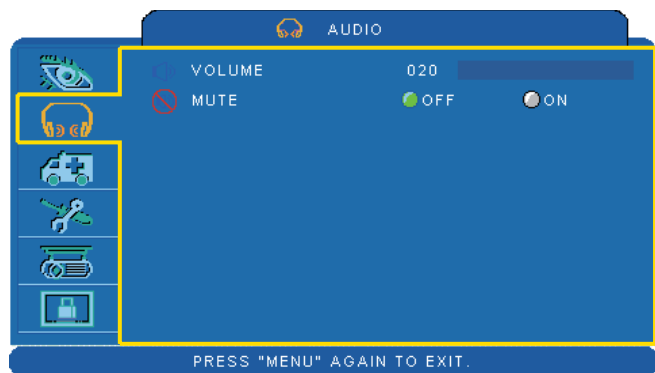**Step:**

1. Use the ▲ / ▼ buttons to select an item.
2. Use the ◀ / ▶ buttons to select an item or adjust the value.

Item	Selection	Description
VOLUME	00/40	Adjust the volume.
MUTE	OFF/ON	Mute the volume OFF / ON.

Setting Menu




Step:

1. Use the ▲ / ▼ buttons to select an item.
2. Use the ◀ / ▶ buttons to select an item or adjust the value.

Item	Selection	Description
AUTO KEYSTONE	OFF/ON	Automatically Correct keystone distortion in image.
KEYSTONE V	-70/+70	Correct vertical keystone distortion in image manually.
AUTO SEARCH	OFF/ON	Search signal source manually or automatically.
KEYPAD BEEP	OFF/ON	Turn the Beep of Keypad OFF / ON.

Advanced Menu

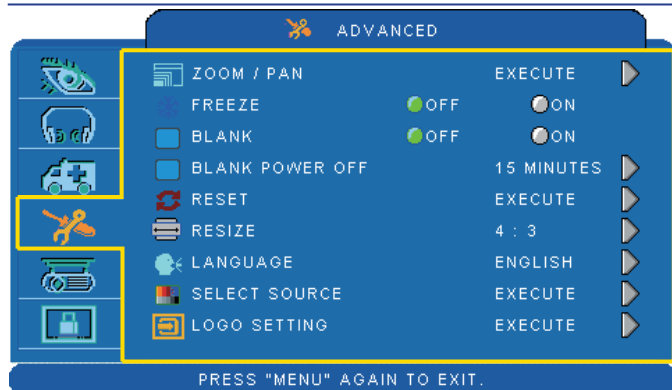

Step:

1. Use the ▲ / ▼ buttons to select an item.
2. Use the ◀ / ▶ buttons to select an item or adjust the value.

Item	Selection	Description
ZOOM / PAN	EXECUTE	Execute digital zoom and pan function.
FREEZE	OFF/ON	Freeze the current image on the screen.
BLANK	OFF/ON	Hide the image, display a black screen.
BLANK POWER OFF	15/30/60 Minute	Set power off time after blank.
RESET	EXECUTE	Reset all menu function to their factory default values.
RESIZE		4:3, 16:9, 1:1
LANGUAGE	ENGLISH	Select the language that the menu and on screen message is display in English → 繁體中文 → 简体中文 → 日本語 Deutsch ← Français ← Nederlands ← 한국어 Italiano → Polski → Português → Русский Suomi ← ไทย ← Українська ← Svenska ← Español
SELECT SOURCE	EXECUTE	Select the input source from: RGB 1 → RGB 2 → DVI-I S-Video ← Video ← Y,Pb,Pr The search is started from the current port. Then when an input is found, the projector will stop searching and display the image.
LOGO SETTING	EXECUTE	Customize the start-up logo.

Advanced Menu



LOGO SETTING

This function allows you to customize the start-up logo.

IMPORTANT:

To implement Logo setting function, please enter PIN code first. Without inputting the PIN code, you cannot modify Logo setting function.

Item	Selection	Description
LOGO MODE	DEFAULT USER OFF	Select Mode(► cursor button)
		The factory logo. The image you captured. The blank image. You can select color with background function.
LOGO CAPTURE	EXECUTE	Start to capture the image.(PC mode only)
BACKGROUND	BLACK BLUE WHITE	Set background color.
LOGO SIZE	ORIGINAL FULL	Display the captured image in original size and put in the center of the screen. Expend the image to full screen.


Advanced Menu

Logo Capture


How to use this function?

- 1 Select Logo Capture item in the logo setting menu, and press ► button.
- 2 You can see the red frame to select captured area.
- 3 Use 4 direction buttons to adjust the position of the frame.
- 4 Press “MENU” to start capturing and display a dialog.

2

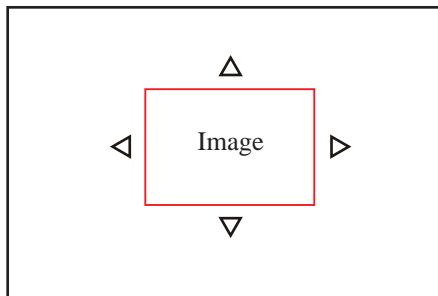


4

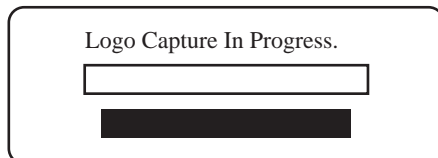

NOTE ► To capture an image is available only in computer mode.
► The area that can be captured is 512 x 384 dots.

Presentation Menu

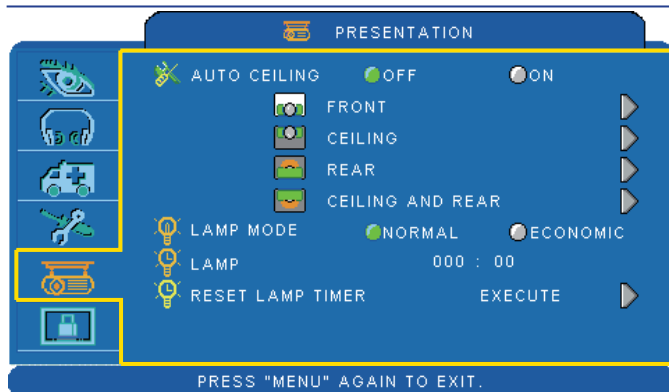

Step:

1. Use the ▲ / ▼ buttons to select an item.
2. Use the ◀ / ▶ buttons to select an item or adjust the value.


Item	Selection	Description
AUTO CEILING	OFF / ON	Automatically invert the image when the projector is turned upside down, i.e. when the projector is mounted on the ceiling.
FRONT	EXECUTE	Normal projection mode.
CEILING	EXECUTE	Mirror the image vertically, only for the projector mounted upside down.
REAR	EXECUTE	Mirror the image horizontally, only for projecting onto rear projection screen.
CEILING AND REAR	EXECUTE	Mirror the image horizontally and vertically. Projecting onto a rear projection screen while projector is upside down.
LAMP MODE	NORMAL / ECONOMIC	Switch lamp mode between normal or ECO mode.
LAMP		Show lamp use time.
RESET LAMP TIMER	EXECUTE	After changing a new lamp, execute this function to reset the lamp timer.

Presentation Menu

Reset Lamp Timer

The lamp timer is the time counted after the last resetting. The usage time of the lamp is shown in the PRESENTATION Menu. Pressing the RESET button or the ► button displays a dialog.

To reset the lamp time, select the RESET using the ► button.

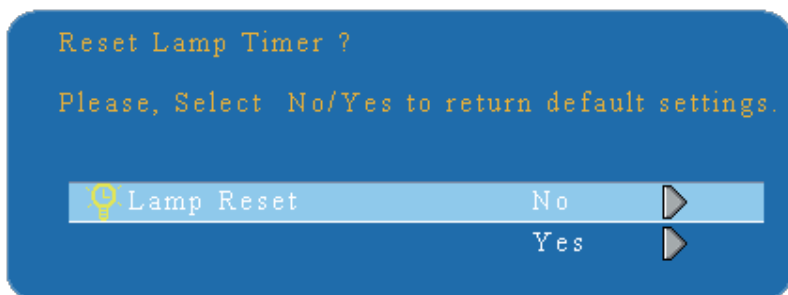

NOTE

- The replacement warning message is set to appear after about 2000 hours of lamp use in order to maintain the initial brightness. When replacement message appears, replace the lamp with a new one as soon as possible, even if the lamp is still workable.

Security Menu



Step:

1. Use the ▲ / ▼ buttons to select an item.
2. Use the ◀ / ▶ buttons to select an item or adjust the value.

Item	Selection	Description
PIN LOCK PROTECTION	OFF ON 1 ON 2	<p>OFF: Turn off PIN lock protection.</p> <p>ON 1: After plugging in AC power, you need to key in PIN code at the first time of use. If the AC power stays unplugged, you do not need to key in PIN code next time when you use the projector.</p> <p>ON 2: You need to key in PIN code every time when you turn on the projector.</p> <div style="border: 1px solid black; padding: 5px;"> <p>⚠ CAUTION:</p> <p>Once the PIN code had been set, the projector cannot be used unless you enter the correct PIN code.</p> </div>
MODIFY PIN	EXECUTE	<ol style="list-style-type: none"> 1. Press “ MENU ” on the projector or remote control. 2. Use the ▶ button to select the MODIFY PIN item of the SECURITY category. 3. Press the ▶ button to change PIN LOCK PROTECTION mode. 4. Please enter the original PIN code. <ol style="list-style-type: none"> (a) If the PIN is correct, system will allow you to change a new PIN code. (b) If the PIN is incorrect, a “ Code Error ” message will appear. 5. Please enter a new PIN code. And then enter again to confirm. <div style="border: 1px solid black; padding: 5px;"> <p>NOTE:</p> <p>(1) To change the PIN lock protection state, you must enter the PIN code first.</p> <p>(2) Please enter: 0000 for first-time use.</p> <p>(3) To avoid unnecessary trouble, if you activate the [PIN Lock Protection], it is highly recommended that you write down the PIN code and store it in a safe place.</p> </div>

Security Menu




Step:

1. Use the ▲ / ▼ buttons to select an item.
2. Use the ◀ / ▶ buttons to select an item or adjust the value.

Item	Selection	Description
FILTER TIMER		Show the filter use hour.
RESET FILTER TIMER	EXECUTE	Reset the filter timer after cleaning / changing filter.
FILTER COUNTER	500 hours 800 hours 1000 hours	Select (500 / 800 / 1000 hours) depending on the environment.(default : 500 hours). Please see as below.
MAC ADDR.		If purchasing LAN control module, "MAC ADDR." will be shown in "Security" Menu. MAC address stands for unique Media Access Control address of LAN control module and displays with six groups of two hexadecimal digits.
CLOSED CAPTION	OFF(Default) C.C1 C.C2 C.C3 C.C4 T1 T2 T3 T4	The Closed Caption function intimates the sound effects, dialogue, and narration in the content of the television program or video source. Caption (C.C1~C.C4) : Display closed caption Text (T1~T4) : Display text data, which is for additional information such as news reports or a TV program guide. NOTE : This function is available only in video / S-Video source.
LAN MODULE	OFF ON	If purchasing LAN control module, "LAN MODULE" will be shown in "Security" Menu. Select ON/OFF to turn on/off LAN control feature.

Auto Filter Alert

Auto Filter Alert is in SECURITY category to show the air filter use time and alert user to change filter. Pressing ► cursor button will display a dialog. When the operating time reaches the set time, a warning message will appear on the screen to remind user of filter cleaning / replacing.

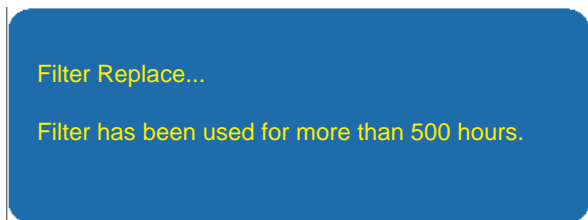

NOTE

► Please reset the Filter time only when you replace the filter.



PIN Key In Operation

When the projector is turned on and the PIN LOCK PROTECTION is set to [ON], the image will show as on the right side.

1. Press the MENU button on the projector or remote control. Enter PIN code by keypad or remote control.

2. How to enter a PIN code?

You can use control panel or remote control.

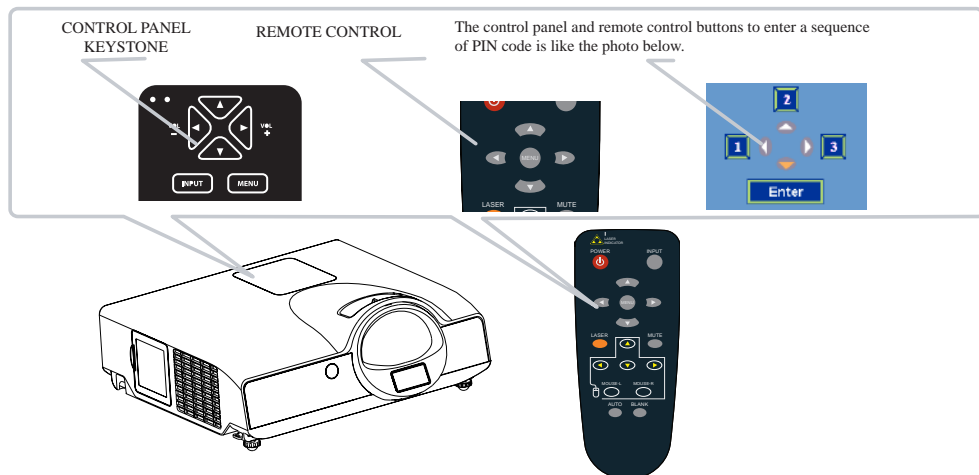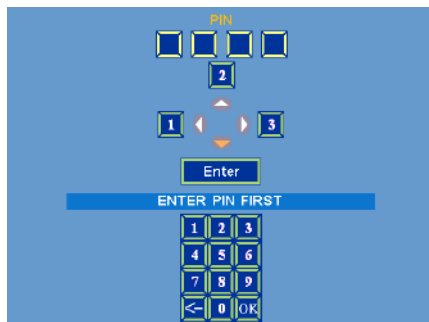


- (1) Press ◀ button: Select the [1]
- (2) Press ▲ button: Select the [2]
- (3) Press ▶ button: Select the [3]
- (4) Press ▼ button: Select the [Enter] move to next row.(4~6,7~9, [↩]~OK)
- (5) Press [↩] (backspace) item:
In case you enter a wrong digit, select [↩] to delete the wrong digit you entered.
- (6) Press [OK] item:
Once all four digits of the PIN are entered, select [OK] to confirm.

NOTE

If the PIN is incorrect, a 'Enter new code' message will be shown. Please try again. If the PIN code input is incorrect for three times, a warning message will show up and the projector will shut itself down in 30 seconds.

If you have no idea about the PIN, please contact your dealer for help.

Network Control Software Application

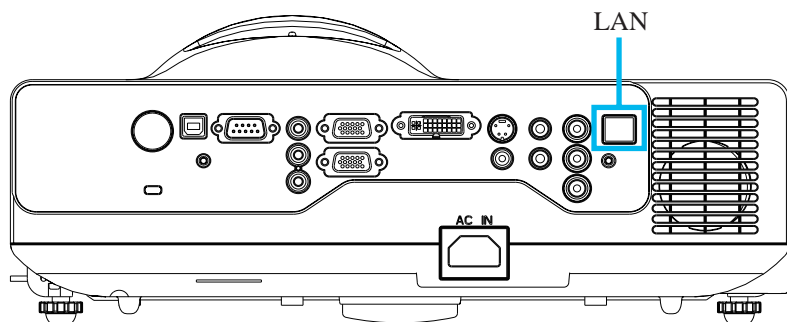

NOTE: This Network Control Software Application is an optional function and support model with RJ45 LAN port only.

- ❶ Register the projector(s) which needs to be controlled.
" Auto search " can help you to seek the projector(s) source easily.
After registering in the work group, you can start to control the projector.
- ❷ Group the projector(s) into different sections.
You can monitor the status easily by the sort of group name function in the network.
- ❸ Monitor the status for each projector.
 - a. You can manage and change the monitoring content by System Parameter Setting.
 - b. The Lamp timer, filter working time or system warning feedback etc. can be known by checking the status for projector(s).
- ❹ Control the booked projector(s).
The status can be refreshed and acquired by monitoring functions; you can also operate the function easily by Network Control.

NOTE

To monitor and control the projector(including stand-by mode), the following conditions need to be ready:

- (1) Projector should already be powered on.
- (2) Projector is connected to network.
- (3) LED light of the projector network port shows normal. (Green light on, Orange twinkle)

* Stand-by mode indicator: Green LED (Power) on the projector's control panel flashes.

Before Use

Before To Use Network Control Software


- ❶ If the system is Windows 2000, NT 4.0 ,XP ,Vista or Windows 7, the PC should be started by the Administrator.
- ❷ Before starting the Network Control software, please check the following.
 - (1) The computer must have Network Control software installed.
 - (2) The projector should be powered on and the LAN wire is well connected to projector.
 - (3)The LAN module ON/OFF item in SECURITY menu of OSD should be setting ON.
 - (4) Make sure the computer and projector can connect to network. Network Control software needs to arrange in TCP/IP network communication and the network cable.

Open Network Control Software

- ❶ Click Network control software icon.



- ❷ Monitor window will show as Graph 1.

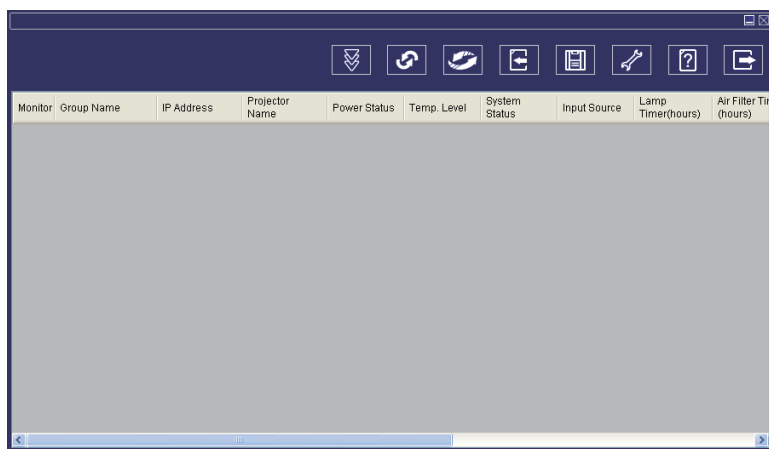

<Graph 1>

Network Control Software Application

Network Control is provided in visual interface, it can help user to monitor and manage the projector(s) status in the local area network.

1. Register the projector(s) which needs to be controlled.
" Auto search " can help you to seek the projector(s) source easily.
After registering in the work group, you can start to control the projector.
2. Group the projector(s) into different sections.
You can monitor the status easily by the sort of group name function in the network.
3. Monitor the status for each projector.
 - a. You can manage and change the monitoring content by System Parameter Setting.
 - b. The Lamp timer, filter working time or system warning feedback etc. can be known by checking the status for projector(s).
4. Control the booked projector(s).
The status can be refreshed and acquired by monitoring functions; you can also operate the function easily by Network Control.

NOTE:

To monitor and control the projector(including stand-by mode), the following conditions need to be ready:

- (1) Projector should already be powered on.
 - (2) Projector is connected to network.
 - (3) LED light of the projector network port shows normal. (Green light on, Orange twinkle)
- * Stand-by mode indicator: Green LED (Power) on the projector's control panel flashes.

Before To Use Network Control Software

1. If the system is Windows 2000, XP or Vista, the PC should be started by the Administrator.
2. Before starting the Network Control software, please check the following.
 - (2-1) The computer must have Network Control software installed.
 - (2-2) The projector should be powered on and the LAN wire is well connected to projector.
 - (2-3) The LAN module ON/OFF item in SECURITY menu of OSD should be setting ON.
 - (2-4) Make sure the computer and projector can connect to network. Network Control software needs to arrange in TCP/IP network communication and the network cable.

NOTE:


IE8 browser & 1024x768 viewing resolution is recommended.

Network Control Software Application

There are two ways to connect to the network control:

Auto IP address setting (DHCP setting is "ON"):

- (1) Enable DHCP from the projector on-screen-display menu, under "SECURITY \ LAN SETTING".
- (2) Please wait for the PC server to release IP address to the projector.
- (3) Enter "Given IP address (For example <http://192.168.1.176/>)" into the address bar of the web browser and press "Enter" key or click "Go" button.

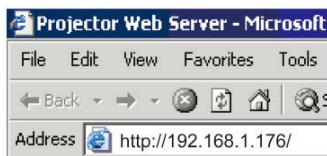

PROJECTOR NETWORK CONTROL				
status	control	network	alert	schedule
STATUS				
IP Address :	192.168.1.147			
System Status :	Standby			
Projector Name :	Projector			
Group Name :	Group			
Lamp Hours :	0 hrs			
Filter Hours :	0 hrs			
Input Status :	Inactive			
Data (ym/d) :	10/20/01			
Time :	01:02			
MAC address :	00:26:47:1b:60:d1			

Network Control Software Application

Item Setting description:

ITEM SETTING	DESCRIPTION
Status	Show current projector status and network configuration settings.
Control	Select projector's detailed setting from this page.
Network	Set up network configuration and password from this page.
Alert	Show and setup Alert configurations.
Schedule	Show and set up Schedule, including Weekly Schedule and Specific Day.

If the Administrative & User password is enabled, select your User Name and enter password to login.



ADMINISTRATOR MODE

adminstrator name: admin
default password: 0000

USER MODE

user name: user
default password: 1234

Network Control Software Application

Status :

Show current projector status and network configuration settings.

PROJECTOR NETWORK CONTROL				
status	control	network	alert	schedule
STATUS				
IP Address	192.168.1.147			
System Status	Standby			
Projector Name	Projector			
Group Name	Group			
Lamp Hours	0 hrs			
Filter Hours	0 hrs			
Input Status	Inactive			
Date (y/m/d)	10/30/01			
Time	03:02			
MAC address	00:20:47:1b:00:d1			

ITEM SETTING	DESCRIPTION
IP Address	Show current IP address.
System Status	Show if projector is Power On or Inactive *.
Projector Name	Show projector name.
Group Name	Show group name.
Lamp Hours	Show lamp used hours on current projector.
Filter Hours	Show filter used hours on current projector.
Input Source	Show current input source.
Date(y/m/d)	Show date set on current projector.
Time	Show time set on current projector.
MAC Address	Show current MAC Address.

* When system status shows "Inactive", it could either mean the projector is "Stand By Mode".

Network Control Software Application

Control:

Select projector's detailed setting from this page.

CONTROL

BASIC	PICTURE	SETTING
<ul style="list-style-type: none"> ■ Projector Name : Projector ■ System Status : Standby ■ Power Switch : Power On ■ Input Source : ▼ 	<ul style="list-style-type: none"> ■ Brightness : 00 -- ■ Contrast : 00 -- ■ Sharpness : 00 -- ■ Color : 00 -- ■ Tint : 00 -- ■ Display Mode : ▼ 	<ul style="list-style-type: none"> ■ Keystone : 00 -- ■ Auto Search : ▼ ■ Auto Sync : EXECUTE
ADVANCED		
<ul style="list-style-type: none"> ■ Freeze : ▼ ■ Resize : ▼ ■ Reset : EXECUTE 		
AUDIO		
<ul style="list-style-type: none"> ■ Volume : 00 -- ■ Mute : ▼ 		
PRESENTATION		
<ul style="list-style-type: none"> ■ Projection : ▼ ■ Lamp Mode : ▼ 		

ITEM SETTING	DESCRIPTION
Basic	
Projector Name	Show projector name on the current projector.
System Status	how if projector is Power On or Inactive .
Power Switch	Power On or Power Off the projector via network.
Input Source	Select input source.
Date Setting	Update date setting on the projector. Click "Submit" button to update the settings.
Time Setting	Update time setting on the projector. Click "Submit" button to update the settings.
Picture	
Brightness	Adjust the image brightness level.
Contrast	Adjust the image contrast level.
Sharpness	Adjust the image sharpness.
Color	Adjust the strength of whole color. This function can only be used under Video signal, S-Video signal, or component video signal input.
Tint	Adjust the image tint. This function can be used under Video signal, S-Video signal, or component video signal.
Display Mode	Adjust Natural/Cinema/Daylight/Green Board/White Board/Black/User Mode.
Audio	
Volume	Adjust the volume.
Mute	Mute the volume OFF / ON.
Setting	
V Keystone	Manually correct vertical keystone distortion in image.
Auto Sync	Set all of the above setting automatically. (This function can only be used under PC mode)
Auto Search	Search signal source manually or automatically.
Advanced	
Freeze	Freeze the current image on the screen.
Resize	4:3,16:9, 1:1, 16:10
Reset	Reset all menu function to their factory default values.
Presentation	
Projection	Select Front/Ceiling/Rear/Celing and Rear
Lamp Mode	Switch lamp mode between normal or ECO mode.

Network Control Software Application

Network :

Set up network configuration and password from this page.

NETWORK

NETWORK	PASSWORD : ADMIN
DHCP Enable: <input checked="" type="radio"/> ON <input type="radio"/> OFF	Administrator <input checked="" type="radio"/> ON <input type="radio"/> OFF
IP Address : <input type="text" value="192.168.1.147"/>	New Password : <input type="password"/>
Subnet Mask : <input type="text" value="255.255.255.0"/>	Confirm Password : <input type="password"/>
Gateway : <input type="text" value="192.168.1.254"/>	<input type="button" value="Submit"/>
DNS Server : <input type="text" value="192.168.1.246"/>	
Group Name : <input type="text" value="Group"/>	
Projector Name : <input type="text" value="Projector"/>	
<input type="button" value="Submit"/>	

PASSWORD : USER

User <input checked="" type="radio"/> ON <input type="radio"/> OFF
New Password : <input type="password"/>
Confirm Password : <input type="password"/>
<input type="button" value="Submit"/>

ITEM SETTING	DESCRIPTION
Network	
DHCP	Assign an IP address to the projector from the DHCP server automatically.
IP Address	Set up IP Address when DHCP is disabled.
Subnet Mask	Set up Subnet Mask when DHCP is disabled.
Gateway	Set up Gateway when DHCP is disabled.
DNS Server	Set up DNS Server address when DHCP is disabled.
Group Name	Create projector group. (Max length: 14 characters)
Projector Name	Create projector naming of the current projector. (Max length: 14 characters)
Password:ADMIN	
Administrator	Turn ON/OFF administrative password function.Administrator mode can control the conditions on web.
New Password	Enter administrative password.(Max length: 15 characters)
Confirm Password	Re-enter administrative password.
Password:USER	
User	Turn ON/OFF user password function. User mode only can read the conditions on web.
New Password	Enter user password.(Max length: 15 characters)
Confirm Password	Re-enter user password.

Network Control Software Application

Alert:

Show and setup Alert configurations.

ALERT	
EMAIL SETTING	ALERT CONDITION
<p>To : <input type="text"/></p> <p>CC : <input type="text"/></p> <p>Subject: <input type="text"/></p> <p>From: <input type="text"/></p> <p>Server : <input type="text"/></p> <p>User Name: <input type="text"/></p> <p>Password : <input type="password"/></p> <p><input type="button" value="Submit"/></p> <p><input type="button" value="Issue Test Mail"/></p>	<p><input type="checkbox"/> Fan Lock.</p> <p><input type="checkbox"/> Over Temperature.</p> <p><input type="checkbox"/> Lamp Fail.</p> <p><input type="checkbox"/> Lamp Time Alert.</p> <p><input type="checkbox"/> Lamp Cover Opened.</p> <p><input type="checkbox"/> Filter Time Alert.</p> <p><input type="button" value="Submit"/></p>

When problem occurs to the projector, it will automatically send e-mail to remind user.

How to opearte:

1. Enter Email Setting columns.
2. Enter SMTP Setting columns.
3. Select Alert Condition. Multiple choices are fine.
4. Press Submit to confirm.
5. After completing Alert Setting for the first time, it is recommended that you press Issue Test Mail to see if the attendees can receive the e-mail. If the attendees cannot receive the e-mail, please check if the setting is correct or not. If you have questions with the Alert Setting, please contact your network service provider.

ITEM SETTING	DESCRIPTION
Email Setting	
To	Set up the mail alert attendee. (Max length: 40 characters)
Cc	Set up the backup mail alert attendee. (Max length: 40 characters)
Subject	Set up the subject of the alert e-mail. (Max length: 40 characters)
From	Set up the sender e-mail address. (Max length: 40 characters)
SMTP Setting	
Server	To enter the SMTP server (Mail server) name of the company or IP address.(Max length: 40 characters)
User Name	Enter the sender's e-mail address. (Max length: 40 characters) For example: david@xxxxx.com
Password	Enter password of the sender's e-mail account. (Max length: 15 characters)
Alert Condition	
Fan Lock	The cooling fan is not operating.
Over Temperature	The projector internal is over heated.
Lamp fail	The lamp does not light up.
Lamp Time Alert	Lamp has reached its life time. Suggest changing the lamp.
Lamp Cover Opened	Lamp Cover does not close well.
Filter Time Alert	Filter has reached its life time. Suggest cleaning the filter.

Network Control Software Application

Schedule :

Show and set up Schedule, including Weekly Schedule and Specific Day.

Weekly Schedule

SCHEDULE

WEEKLY

Power On Time :
☐ 15 : 6

Power Off Time :
☐ 15 : 6

Week :
Sunday

Input Source :
RGB1

ADD

No	Week	Power On	Power Off	Input Source	Cancel
1	Sun	10:0	16:20	RGB0	cancel
2					cancel
3					cancel
4					cancel
5					cancel
6					cancel

To power on and power off projector based on Weekly Schedule.

How to set up:

1. Choose week days.
2. Set up power-on or power-off time.
(Please be sure that the interval between power-on and off setting is more than 5 minutes.)
3. Enter Input Source and select input source.
4. After completing setting, press ADD to confirm.
5. To cancel items, select the item and press "Cancel" button.

Specific Day

SPECIFIC DAY

Power On Time :
☐ 2010 / 3 / 25 at 16 : 0

Power Off Time :
☐ 2010 / 3 / 25 at 16 : 0

Input Source :
RGB1

ADD

No	Power On	Power Off	Input Source	Cancel
1	2010/25 19:10	2010/25 19:56	DVI	cancel
2				cancel
3				cancel
4				cancel
5				cancel
6				cancel

Based on Specific Day to set up power-on and power-off time.

How to set up:


1. Choose power-on days and time.
2. Choose power-off days and time.
(Please be sure the setting period between power-on time and off time is greater than 5 minutes.)
3. Enter Input Source and select input source.
4. After completing setting, press ADD to confirm.
5. To cancel items, select the item and press "Cancel" button.

Activate Network Control Software

- 1 Execute the Network Control Software.




- 2 Monitor window below appears.

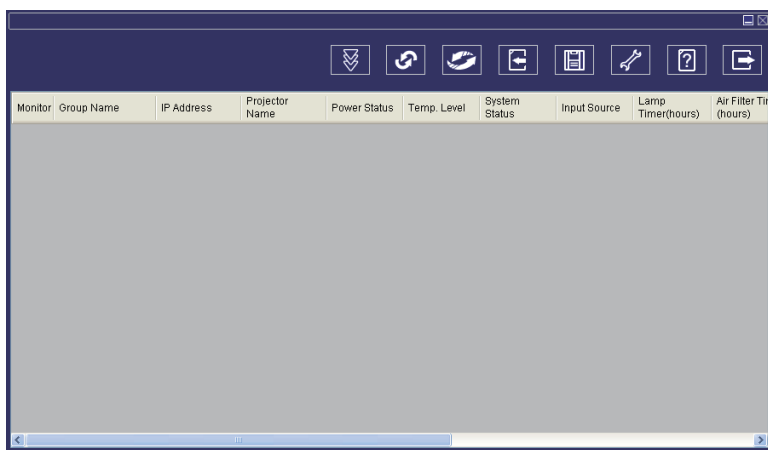


<Graph 1>

Before Use

Projector Auto Search.

- 1 Click the  (Projector search), located projector will show on the network correctly. (Graph2)

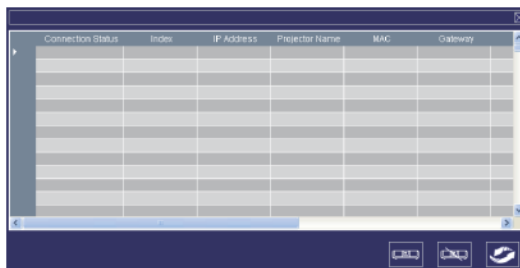


The screenshot shows a window titled "Projector Auto Search" with a table containing the following headers: Connection Status, Index, IP Address, Projector Name, MAC, and Gateway. The table is currently empty.


Connection Status	Index	IP Address	Projector Name	MAC	Gateway
-------------------	-------	------------	----------------	-----	---------

<Graph 2>

NOTE

When the security warning window appears while Network Control is executing, please select "Unblock" to decontrol area network linking against from System Administer.

- 2 Click  (search again), the projector which is well connected with a PC will be shown. (Graph3)

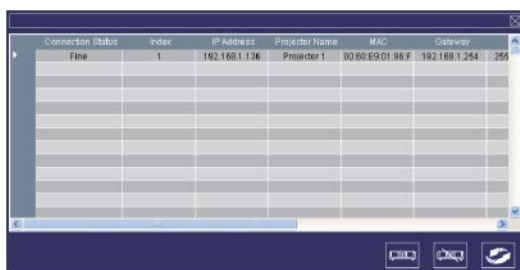

The screenshot shows the same "Projector Auto Search" window, but now the table contains one entry:

Connection Status	Index	IP Address	Projector Name	MAC	Gateway
Fine	1	192.168.1.136	Projector 1	00:00:EO:01:98:F	192.168.1.254 255

<Graph 3>



NOTE


If there is no projector found on the display window, the following maybe the causes:

1. There is no DHCP server available on the LAN. The LAN module is shipping with DHCP-configured client enabled in default.
2. If there is no DHCP server available on the LAN. The LAN module default IP address should be 169.254.1.1. Please modify the PC/Laptop IP address setting to make the PC/Laptop IP address located on the same segment as 169.254.xxx.xxx and try again.

Before Use


Projector Auto Search.

- Click  (register projector), the projector information will show on the monitor window. Click  button (exit), it will cancel the registered item then return to register table.

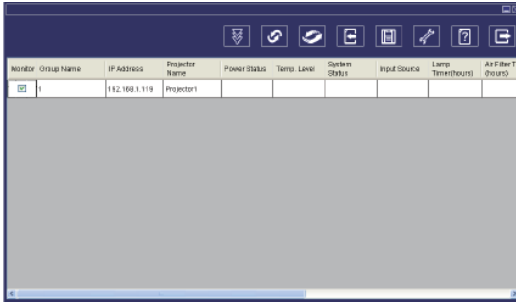

<Graph 4-1> Monitor window

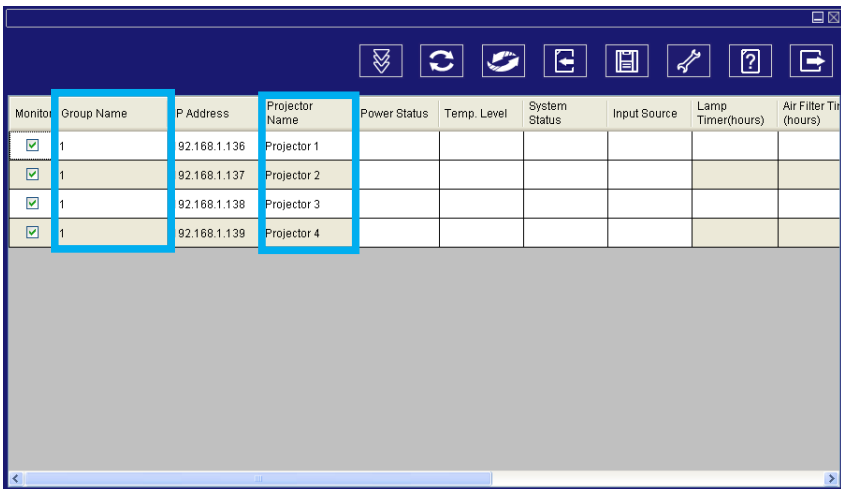

- Projector Auto Search can rank group names or display names by clicking the monitor window title (Group Name) or (Projector Name). This will help you easily to understand projectors status.



 
<Graph 4-2>


Before Use

Projector Auto Search.

- 5 After registering, you can click  button (Data single capture) in the tool bar or click  button (Start Auto Scan) running in this program to monitor the projector.


NOTE

When pressing  "About " button for help, you will see icons explained as in the chart.

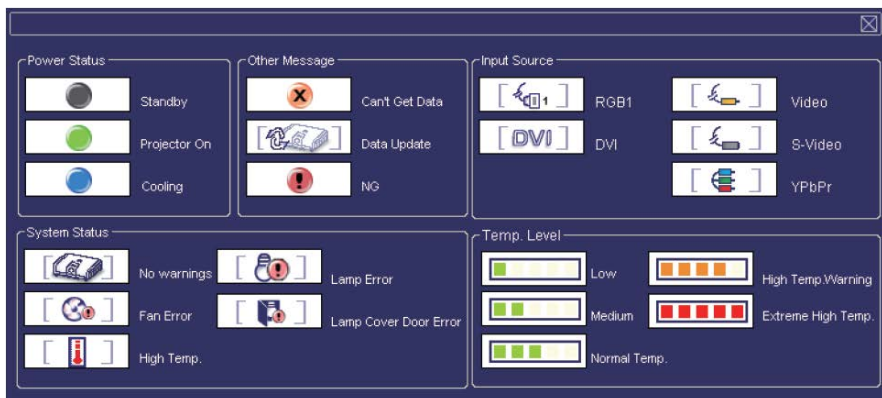

Modify The Projector Setting

- 1 If modifying the registered projector setting is needed, please move your cursor to the data table and click the item that you would like to modify, the detail will be shown on the right side table.

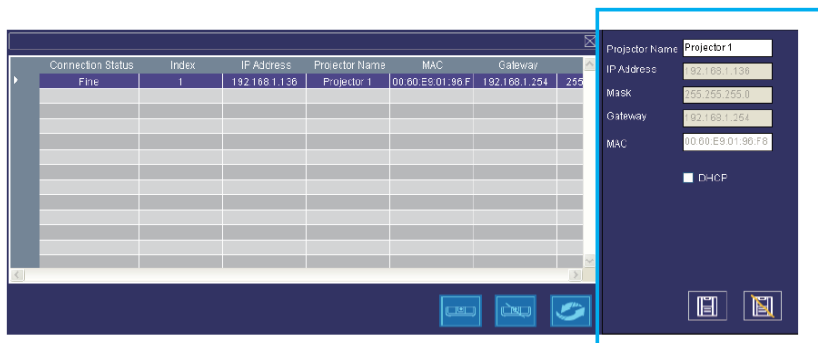

< Graph 5 > : Register Table

- 2 After setting, you can save the data by clicking  button or cancel by clicking  button.


Item	Description
Display name	Show the Host name (16 characters at most in ASCII)
IP Address	Show the IP Address
Mask	Show the Mask
Gateway	Show the Gateway
MAC	Show up the MAC code (The default value can not be modified)
DHCP	Capture IP address from network sensor automatically.

< Table 1 > : Setting Windows

Registering And Configuring The Projector

Delete

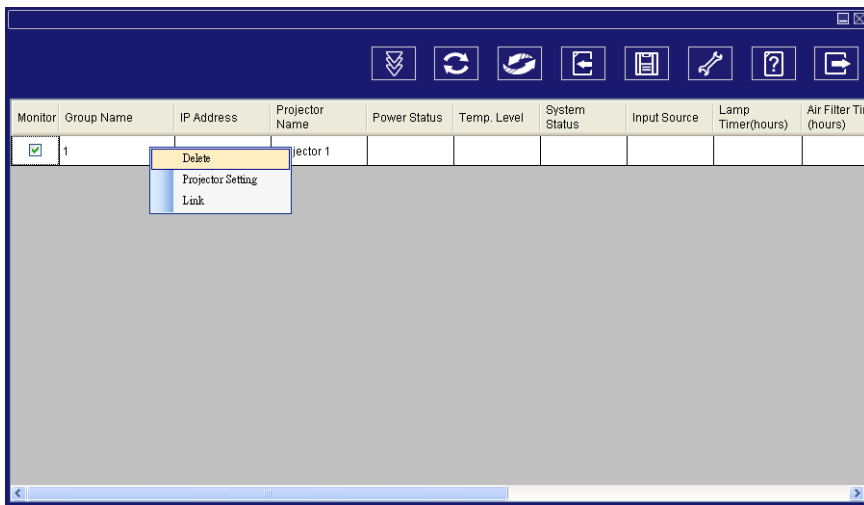

- 1 Select the registered projector in monitor window. Click mouse right key and select " Delete " to erase the registered projector data.




< Graph 6 > : Register Table.


Registering And Configuring The Projector

Projector Setting

- 1 Select the registered projector in monitor window. Click mouse right key and select "projector setting" to modify the registered projector data. After finishing the setting, you can save by clicking  button or cancel by clicking  button.

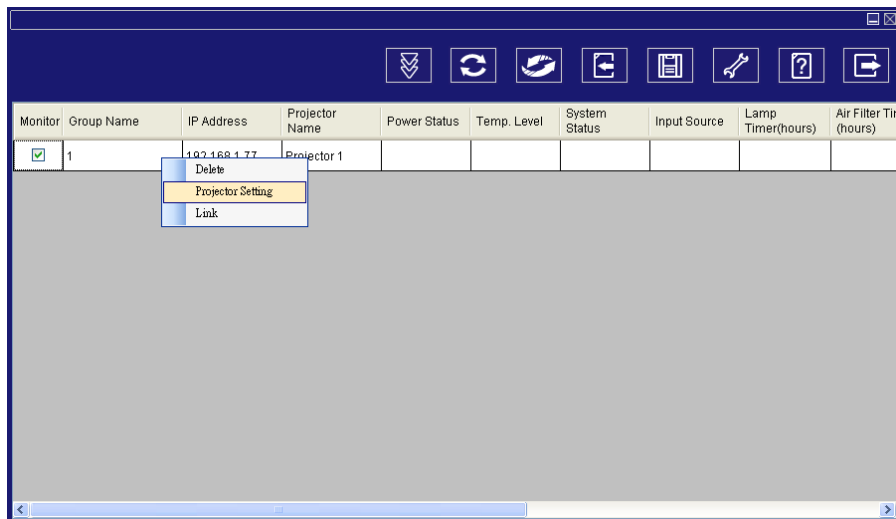

< Graph 7 > : Register table.

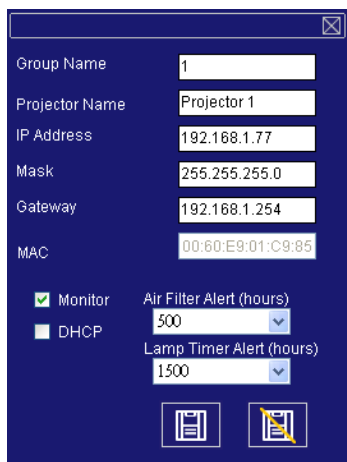

Group Name: 1

Projector Name: Projector 1

IP Address: 192.168.1.77



Mask: 255.255.255.0

Gateway: 192.168.1.254

MAC: 00:60:E9:01:C9:85

☒ Monitor Air Filter Alert (hours): 500

☐ DHCP Lamp Timer Alert (hours): 1500


 

< Graph 8 > :Setting table.


Registering And Configuring The Projector

Projector Setting

- 2 Click  button (system setting) to modify system alert setting.

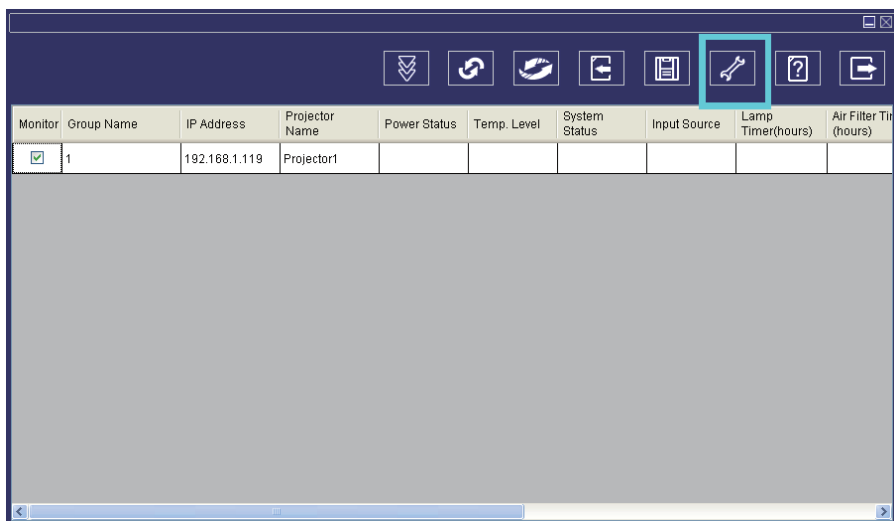

< Graph 9 >

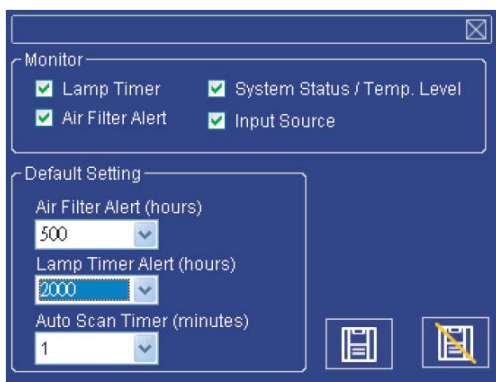

<Graph 10>

Registering And Configuring The Projector

System Setting

Monitor

Item	Description
Lamp Timer	Lamp timer from projector.
Air Filter Alert	Air Filter Timer from projector.
System Status/ Tempeture Level	System Status and Tempeture. Level from projector in Power On status.
Input Source	Input Source from projector in Power On status.

< Table 2 >

Default Setting

Item	Description
Lamp Timer Alert (Hr.)	Default Setting Includes 1000/1500/2000 Hours. When Lamp Timer reach alert target, window will show lamp timer in red color to remind user to replace the lamp.
Filter Timer Alert (Hr.)	Default setting includes 300/500/800/1000/1500 Hours. When Filter Timer reach alert target, window will show filter timer in red color to remind user to replace the filter.
Auto Detect Timer (minutes)	Auto Detect setting. Default setting includes 1/3/5/10 minutes; user can set the optimal default listed in Table 4.

< Table 3 >

Auto Detect Optimal Setting

Projector Number (Sets)	Timer Interval (Minutes)
1~25	1/3/5/10
26~50	3/5/10
51~100	5/10
101~255	10<


* The maximum quantity of projector monitored is 255.

< Table 4 >

Registering And Configuring The Projector

Link

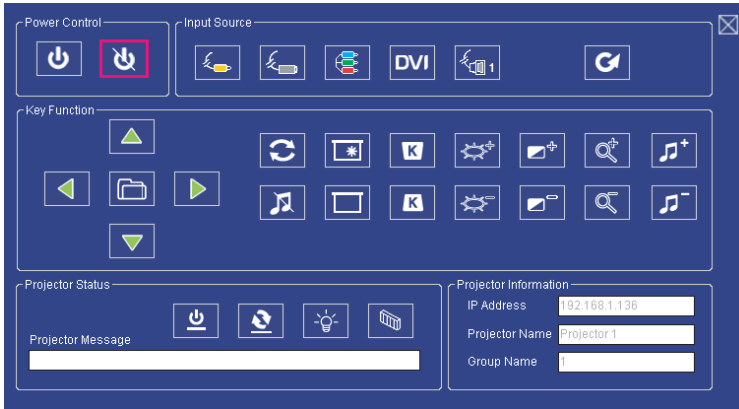

- 3 Select the registered projector in monitor window. Click mouse right key and select " Link " to show up the control panel table and the projector connected status.









< Graph 12 > : The control panel table

Control Panel Window Introduction















① Power Control

Icon	Name
	Power on
	Power off

② Input Source






Icon	Name
	Video
	S-Video
	Y,Pb,Pr
	DVI-I
	RGB 1
	Change Input Source

③ Function Key





Icon	Name	Icon	Name
	Up		Freeze
	Down		Blank
	Left		Keystone Correction +
	Right		Keystone Correction -
	Menu		Increase Brightness
	Auto Sync		Decrease Brightness
	Mute		Higher Contrast

Control Panel Window Introduction

3 Function Key












Icon	Name
	Lower Contrast
	Zoom In
	Zoom Out
	Volume Up
	Volume Down

4 Projector Status

Icon	Name
	System Status
	Input Source Status
	Lamp Timer
	Air Filter Timer

Control Panel Window Introduction

1 Network Control Window introduction


Icon	Name	Description
	Scan all	Capture the all registered projectors' information one time only.
	Start Auto Scan	According to the system setting, get the projector information automatically.
	Stop Auto Capture	Stop scanning the projector information.
	Auto Search	Search the projector in the same network to register and modify the setting.
	Open Project File	Open project file which was saved.
	Save Project File	Save the registered projector in this project.
	System Setting	Setting the projector system reminder message.
	About	Icon content description.
	Exit	Exit the Network software.
	Register projector	Register projector's information.
	Exit	Cancel registered information.

Air Filter

When a warning message appears to remind you to clean the air filter, please replace a new one as soon as possible. Please check and clean the air filter periodically.

Replacing the Air Filter

When the use time reaches the filter counter time, the projector will display a message that indicates to replace a new filter. If there is no spare air filter available, please contact your dealer.

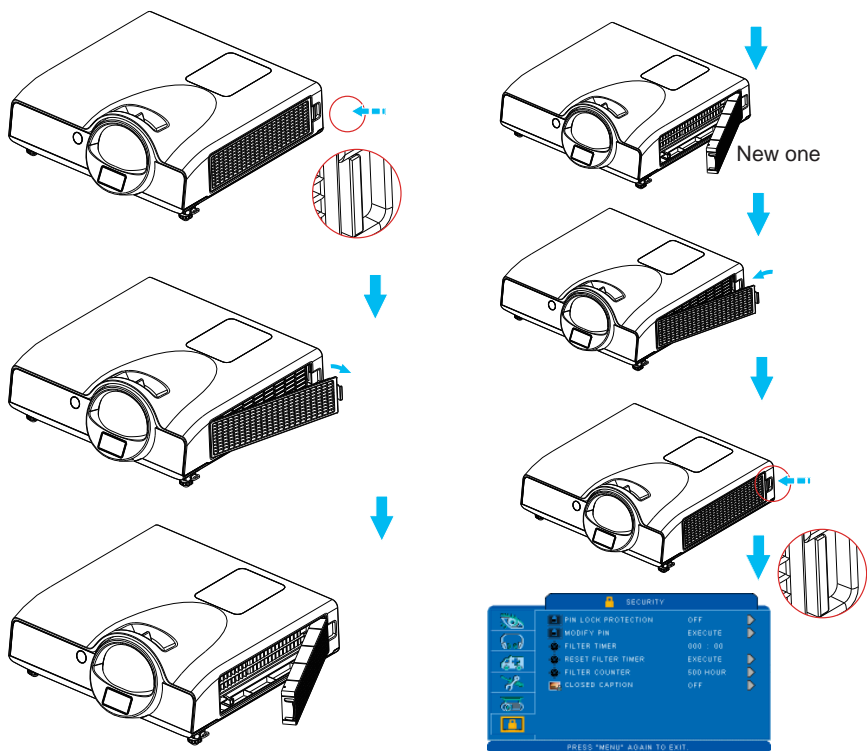

Turn off the projector, and unplug the power cord. Allow the projector to sufficiently cool down.

- 1 Remove the filter cover from the right side of projector.
- 2 Pull out the air filter.
- 3 Install a new air filter.
- 4 Put the filter cover on.
- 5 Reset filter timer after cleaning or changing air filter. (P.35)






Maintenance of Projector

Lamp

1. If you want to replace new lamp, but the projector was just turned off, please let the projector cool down and unplug power cord at least 60 minutes.
2. If the projector is mounted in the ceiling, contact your dealer to replace the lamp.

Replacing New Lamp

1. Remove the lamp door.
2. Loosen 2 screws of the lamp holder. Take the handle on the top of the lamp, pull out the lamp straight off the projector.
3. Insert new lamp, lock the lamp door firmly with 2 screws.
4. Put the lamp door on.
5. Please reset the lamp timer after replacing lamp. (P.34)

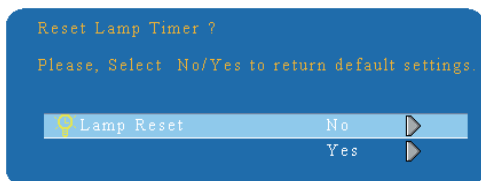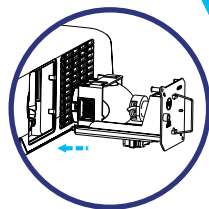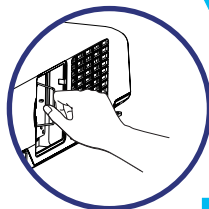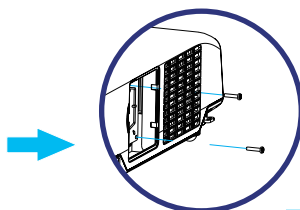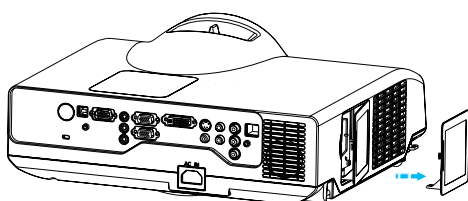



WARNING

The projector uses a high-pressure mercury lamp.

The explosion of lamp with a loud bang or burn out could possibly cause injury or a fire.

When the bulb bursts, it is possible for shards of glass to fly into the lamp housing; and for gas containing mercury to escape from the projector's vent holes.

If the lamp has broken, do not check the inside of the projector. Please ventilate the room immediately.

Do not touch or bring your face close to the broken pieces since it might get into your eyes or mouth. In case of injury, seek medical advice immediately.

Disposal of a Lamp

Dispose of a lamp in accordance with the local recycling laws.

Do not put it to your trash.

Recycling Lamp's laws of the USA, go to www.lamprecycle.org.

Recycling Product's laws of USA, go to www.eiae.org.

Recycling Product's laws of Canada, go to www.epsc.ca.

For more information about recycling laws, please contact local government agency or dealer.

CAUTION HOT

Before replacing the Lamp part, pay attention to the following items:

1. The Lamp is optional part. Contact the dealer for replacement lamp.
2. The lamp becomes very hot when in use. Turn the power off and disconnect the power cord.
3. Wait 1 Hour before replacing the lamp.
4. Do not use old lamp part.

Other Care

Cleaning The Lens

If the lens is dirty and dusty, display quality maybe decreased. Before cleaning the lens, please make sure that the projector is cool down adequately.

After the projector has cooled down adequately, lightly wipe the lens with the available lens-cleaning cloth.

Do not touch the lens directly with your hand.

Additional

-In order to ensure the safe use of your projector, please contact your dealer to inspect about once a year.

-Before maintenance, make sure the power cable is unplugged, allow the projector to cool sufficiently. The high temperature state of the projector could cause a burn in and/or malfunction to the projector.

-Never try to maintain the inside of the projector by yourself

Troubleshooting

Indicator

The power and lamp indicators show the status of the projector. Before requesting repair, check the projector status using the chart below. If the problem cannot be resolved, contact your dealer.

In normal status~~~

POWER	LAMP	CONDITIONS	DESCRIPTION
Blinking In Green	Off	Stand by mode	Projector is ready to be turned on.
Lighting In Green	Off	On mode	Projector is on and operating.
Lighting In Green	Blinking In Red (Slow)	Cool down mode	Projector is in cool down mode and will not respond to user input.

In abnormal status~~~

POWER	LAMP	CONDITIONS	DESCRIPTION
Blinking In Green	Blinking In Red (Fast)	Fan fault mode	The projector has detected a problem of a slow internal fan speed. The lamp will shut off automatically. Contact your dealer.
Blinking In Green	Lighting In Red	Lamp cover open	The lamp cover is open or there is a problem with the lamp. If the lamp door is closed and replacing the lamp does not correct the issue, contact your dealer.
Blinking In Green (Fast)	Blinking In Red (Fast)	High temperature	The projector has overheated and shut itself down. Correct the over temperature condition immediately. 1. Check that the ventilation slots are free from obstructions. 2. Check the cleanliness of the air filter.
Blinking In Green (Slow)	Blinking In Red (Slow)	Lamp fail	The lamp does not light. Come back to " stand by mode ", and press the power button.

Troubleshooting

Error For Machine Defects

The following problems may be confused with a machine defect. Check and follow the table. If it couldn't be improved, contact your dealer.

Symptom	Cause / Remedy
Projector power does not turn on.	The power cord is disconnected. Plug the power cord into an AC outlet.
	Intending to turn on the projector again during the cool down mode. Wait until the cool down mode has completed.
	There is no lamp and/or lamp cover is not firmly closed. Please turn off the power and disconnect the power plug from the power outlet. Check if the lamp is installed or the lamp cover is firmly closed and turn on the power again.
	Power cord has impaired. When you touch the power cord, the indicator goes on then off, please remove the power cord and connect it again. If the situation is repeated, remove the power cord and contact your dealer.
No image	The input is not connected correctly. Select the appropriate input source.
	No signal input. Connect correctly.
	The lens cover is attached to the lens. Remove the lens cover.
Colors are pale	Color density and color matching are not adjusted correctly. Adjust the RGB setting.
	Color lose. Caused by poor VGA cable connection.
Abnormal brightness & contrast	Brightness and contrast are not adjusted correctly. Adjust the brightness and contrast setting.
	The lamp is near the end of its service life. Replace with a new lamp.
Video is blurred	The projection lens is not focused. Adjust the focus using the focus ring.
	The lens is dirty or misty. Clean the lens.

Troubleshooting

Error For Machine Defects

Symptom	Cause / Remedy
No audio	The projector is not connected correctly. Check audio cable if connect correctly.
	The volume is set to minimum. Adjust the volume.
	Mute is turned on. Press the MUTE button.
Remote control is not working.	No battery. Before using the remote control, please check the battery of remote control.
	Remote signal is obstructed. Remove the obstacle between projector and remote control.


Troubleshooting

List of Supported Monitor Displays

Computer mode		
Signal	Refresh Rate (Hz)	Resolution (dots)
VGA	60	640x480
VESA	60/72/75/85	640x480
SVGA	56/60/72/75/85	800x600
XGA	60/70/75/85	1024x768
SXGA	70/75	1152x864
SXGA	60/75	1280x960
SXGA	60	1280x1024
WXGA	60/75	1280x800
WXGA+	60/75/85	1440x900
SXGA +	60/75	1400x1050
UXGA	60	1600x1200
WSXGA+	60	1680x1050
MAC	67	1280x1024/640x480
MAC	75	832x624
MAC	75	1024x768
MAC	75	1152x870
Component (Y,Pb,Pr)		
Signal	Refresh Rate (Hz)	Resolution (dots)
SDTV(480i)	30	720x480
SDTV(480p)	60	720x480
HDTV(720p)	60	1280x720
HDTV(1080i)	30	1920x1080
Composite / S-Video		
Signal	Refresh Rate (Hz)	Resolution (dots)
TV(NTSC)	60	720x480
TV(PAL,SECAM)	50	720x576

Appendix


Menu Tree (PC Mode)

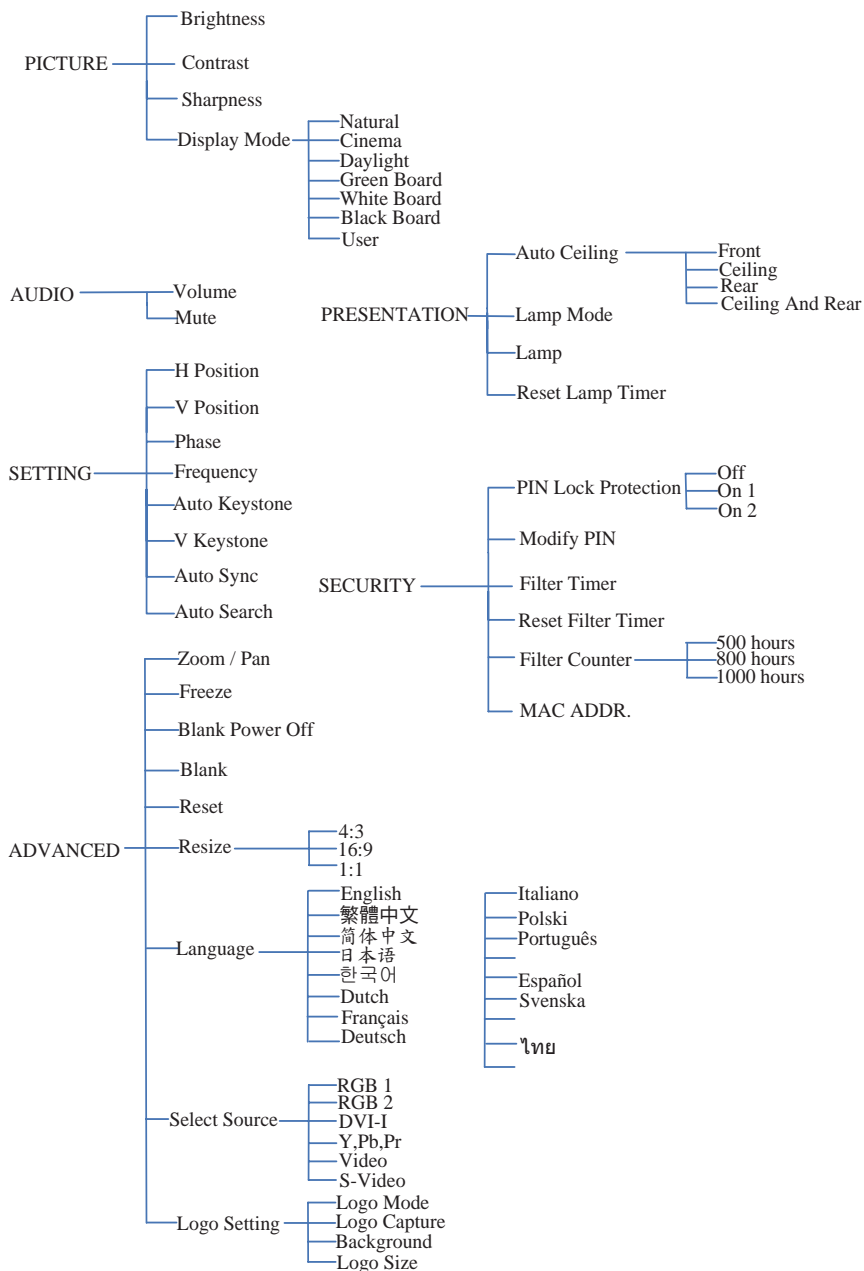

*DVI doesn't support H / V POSITION, PHASE, FREQUENCY, AUTO SYNC function.

Appendix

Menu Tree (Video Mode)

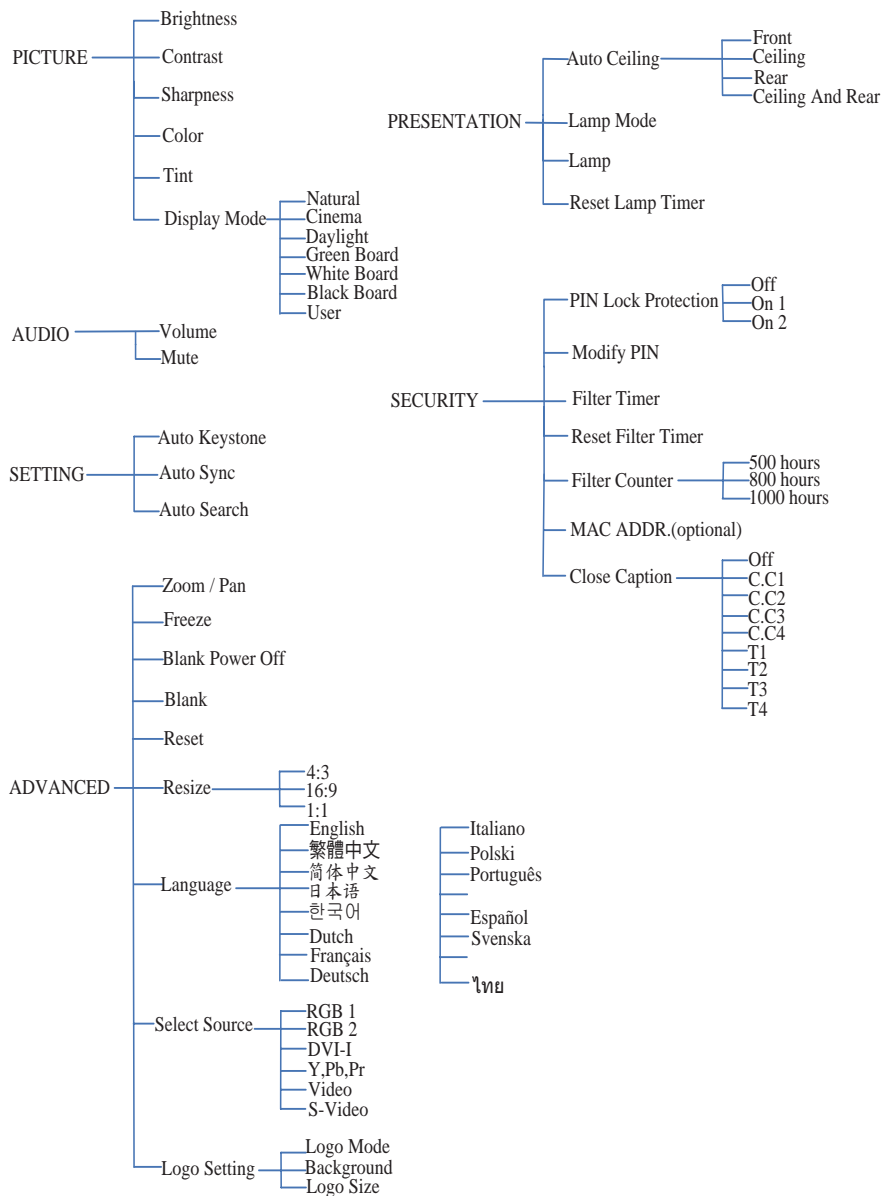

Appendix

Appearance

