


## Replacement Instructions ARF unit for LCD Projector

Model No. **ET-RFF100**

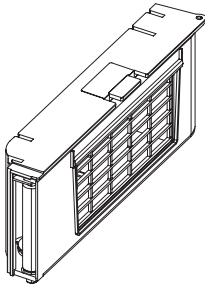

Read these instructions completely before replacement.

### Information for Users on Collection and Disposal of Old Equipment and used Batteries



These symbols on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries should not be mixed with general household waste.

For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points, in accordance with your national legislation and the Directives 2002/96/EC and 2006/66/EC.

By disposing of these products and batteries correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling.

For more information about collection and recycling of old products and batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

#### **For business users in the European Union**

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

#### **[Information on Disposal in other Countries outside the European Union]**

These symbols are only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.

#### **Note for the battery symbol (bottom two symbol examples):**

This symbol might be used in combination with a chemical symbol. In this case it complies with the requirement set by the Directive for the chemical involved.



Cd

# Replacing the ARF


---

- Before replacing the ARF
  - Press the POWER button for at least 0.5 seconds or press the POWER button twice to turn off the projector.
  - Wait until the cooling fan stops and the POWER indicator turn to RED.
  - Disconnect the mains plug from the mains socket.
  - Prepare a Phillips-head screw driver.


## Replacement procedure

---

1. Turn the projector upside down and place it gently on a soft cloth.
2. Use a Phillips-head screwdriver to loosen 3 **ARF cover** fixing screws until the screws turn freely and remove the **ARF cover**.

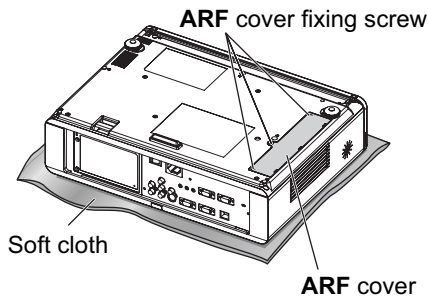


3. Use a Phillips-head screwdriver to loosen an ARF fixing screws and release the clamp, then slightly slide up the used ARF to remove.

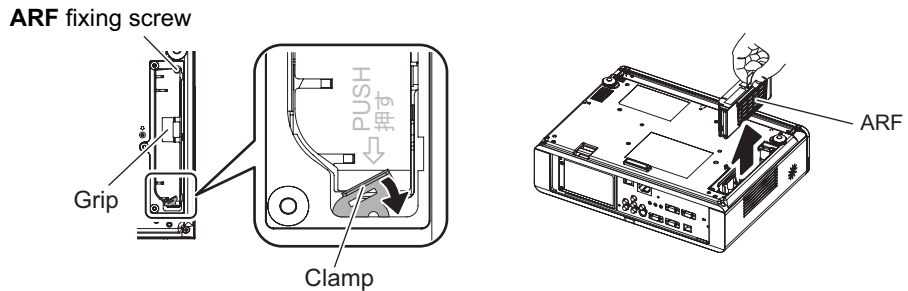

\* When you replace the ARF unit, clean the compartment and/or the Air exhaust port if you need to.

4. Insert the new ARF into the compartment in correct direction and slightly push down until it clicks. Tighten the ARF fixing screws securely with a Phillips-head screwdriver.
5. Attach the ARF cover and tighten the ARF cover fixing screws securely with a Phillips-head screwdriver.
6. Turn on the projector and display the FILTER REMAINING in OPTION menu. Press the ENTER button for 3 seconds and the confirmation screen will be displayed.

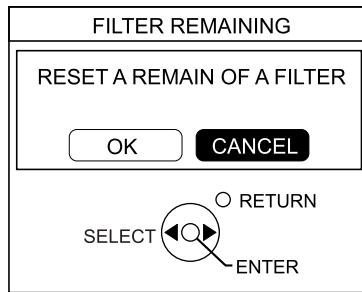

7. Press ◀ to select OK and press the ENTER button to reset the FILTER REMAINING to "0".

---

# Panasonic Corporation

Web Site : <https://panasonic.net/cns/projector/>  
© Panasonic Corporation 2009

Printed in Japan