




Congratulations on purchasing this product

MSWU-81E

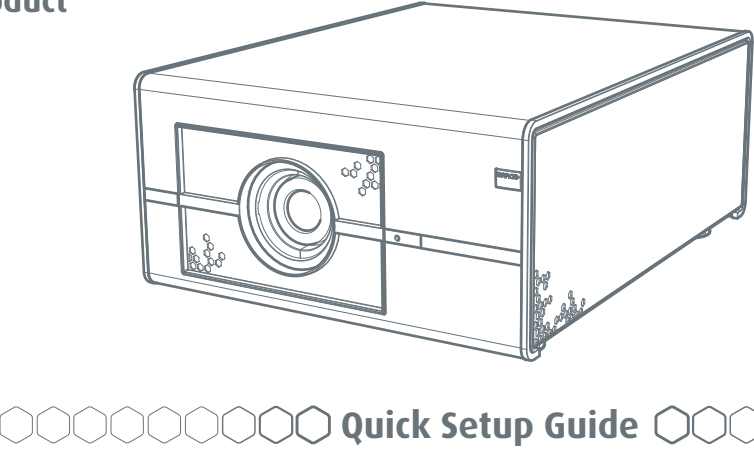


Quick Setup Guide


1 Packaging Contents

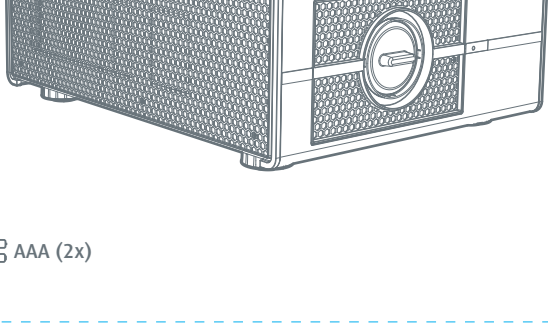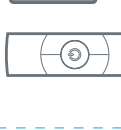

2A Lens Assembly A.

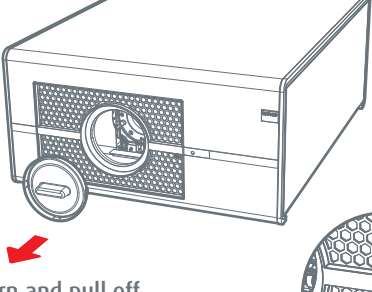

Turn and pull off the lens cap

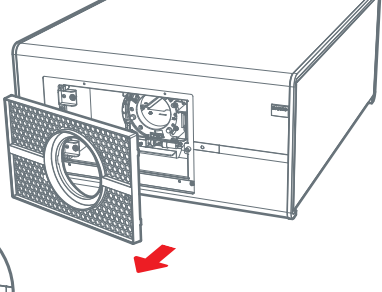


Loosen screw and pull out black frame towards the front



2B Lens Assembly B.




Remove protective covers from both ends of the lens before starting.

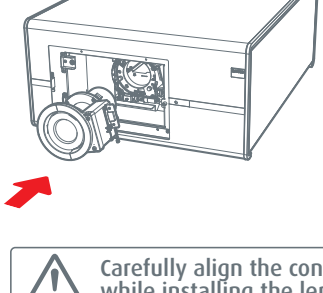


Carefully align the connectors while installing the lens.

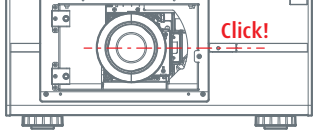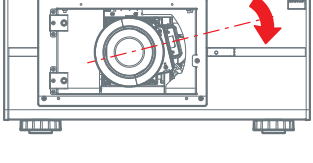

3 Ceiling Mount\*

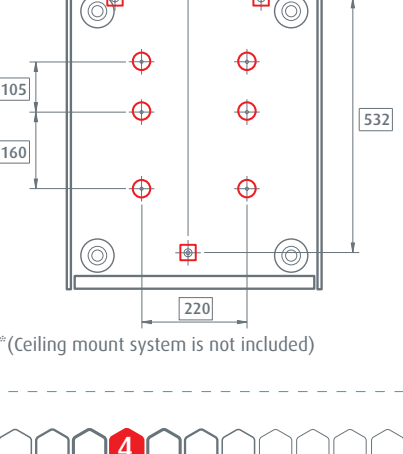

\*(Ceiling mount system is not included)

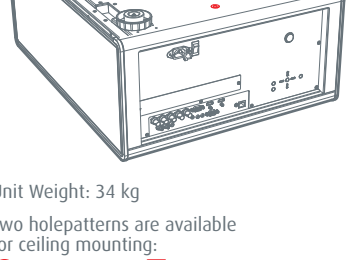

Unit Weight: 34 kg

Two holepatterns are available for ceiling mounting:

○ M6x15 (6x) or ○ M8x15 (3x)

Please check the manual of your supportsystem for compatability


4 Connectors



(HDMI to DVI-D cable included in the box)



(See User Manual for detailed info)

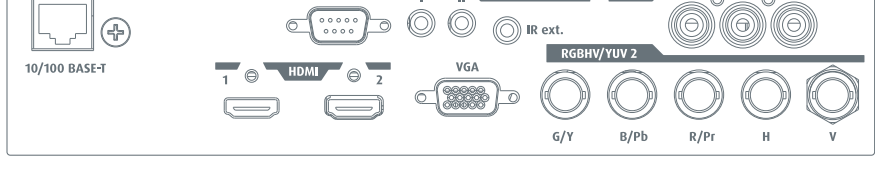

5 Keypad

HOME

Displays or hides the OSD adjustment screen.



Use these buttons to scroll, configure or adjust items on the OSD to toggle between different images.

ENTER

Press this button to confirm selection of OSD item; either to "Select item" or to access "Sub Menu" configurations.

STBY



Use this button to start or shut down the projector.

INPUTS


Used to toggle between different input signal sources.

QUICK ACCESS

Press ENTER key for quick access to "Focus/Zoom Menu"

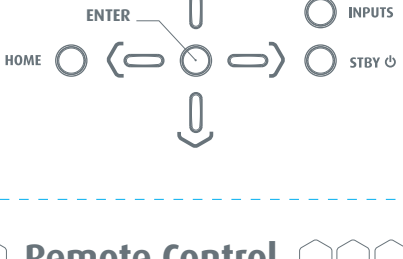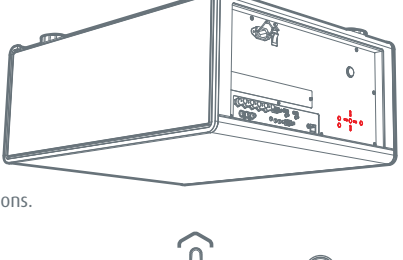

6 Remote Control

 

Menu - OK

Menu - LEFT

Menu - RIGHT

Menu - DOWN

Home/Menu

Battery Lid (Slide down to open)

Feedback LED

Menu - UP

Menu - RIGHT

Menu - DOWN

Home/Menu

Battery Lid (Slide down to open)

Quick Keys

(for Remote and keypad)

Quick Key 1




Push Menu-UP twice for instant 'Picture Mute'

Quick Key 2


Push Menu-OK for quick access to the Focus/Zoom Menu



7 Starting Projector

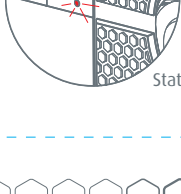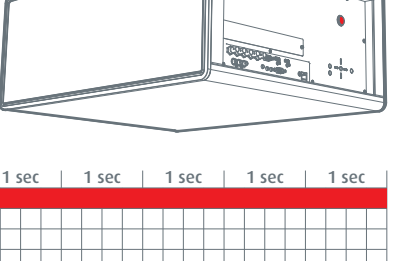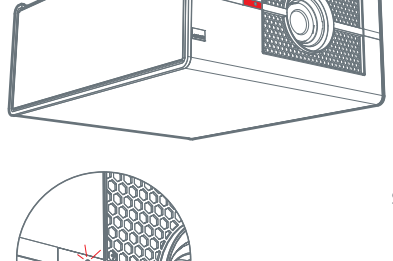


Status Led

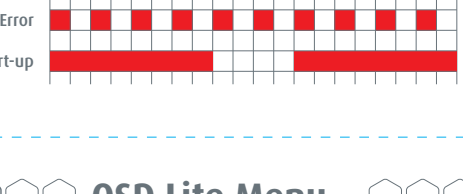

During Start-up

8 OSD Lite Menu

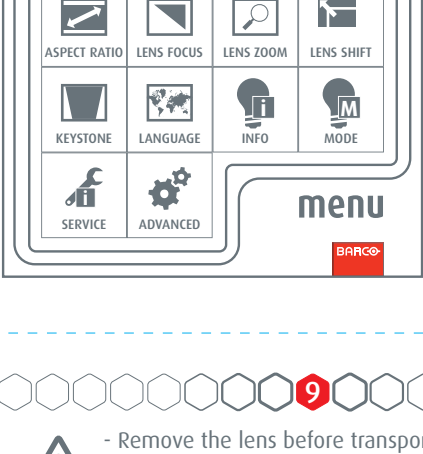

INPUT \_\_\_\_\_ Toggle between input sources  
BRIGHTNESS \_\_\_\_\_ adjust image brightness level  
CONTRAST \_\_\_\_\_ adjust image contrast  
COLOR \_\_\_\_\_ adjust display mode  
ASPECT RATIO \_\_\_\_\_ modify image aspect ratio  
LENS FOCUS \_\_\_\_\_ adjust lens focus  
LENS ZOOM \_\_\_\_\_ adjust lens zoom  
LENS SHIFT \_\_\_\_\_ adjust lens shift  
KEYSTONE \_\_\_\_\_ adjust keystone  
LANGUAGE \_\_\_\_\_ select language  
INFO \_\_\_\_\_ information on lamp status  
MODE \_\_\_\_\_ normal/eco/power  
SERVICE \_\_\_\_\_ service information  
ADVANCED \_\_\_\_\_ see user manual

9 Important Info



- Remove the lens before transporting the projector.  
- To save lamp lifetime, first switch the projector to standby mode and wait two minutes, then switch off the main power.  
- Ensure that the projector is operating with clean filters.  
- Do not block the ventilation in -and outlets.  
- Using the projector at a non recommended tilt angle will reduce the lifetime of the lamps or create unexpected behaviour of the unit.  
- Laser light can cause severe damage to the DMD. This damage is not covered by warranty.



For more information and Maintenance Guidelines, check the Detailed User Manual on: <http://www.barco.com/en/products-solutions/projectors>