


# EIKI

---

## OWNER'S MANUAL

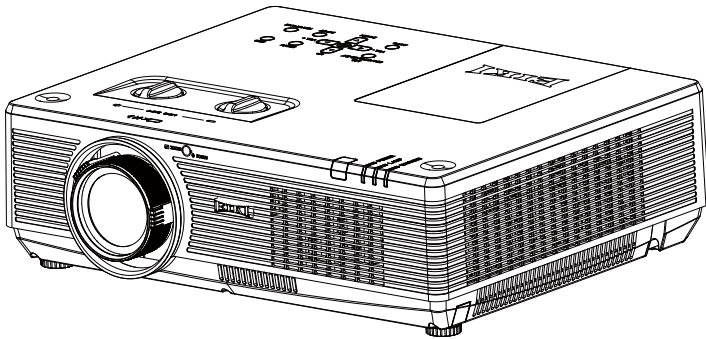

LC-XBS500  
LC-WBS500

# Features and Design

---

This Projector is designed with the most advanced technology for portability, durability, and ease of use. This projector utilizes built-in multimedia features, a palette of 10.7 million colors, and matrix liquid crystal display (LCD) technology.

## **Simple Computer System Setting**

---

The projector has the Multi-scan system to conform to almost all computer output signals quickly. Up to WUXGA resolution can be accepted.

## **Useful Functions for Presentations**

---

The digital zoom function allows you to focus on the crucial information during a presentation.

## **Lamp Control**

---

Brightness of the projection lamp can be selected.

## **Logo Function**

---

The Logo function allows you to customize the screen logo.

## **Multilanguage Menu Display**

---

This projector provides multi-language screen menu.

## **Helpful Maintenance Functions**

---

Lamp and filter maintenance functions provide for better and proper maintenance of the projector.

## **Security Function**

---

The Security function helps you to ensure security of the projector. With the Key lock function, you can lock the operation on the top control or remote control. PIN code lock function prevents unauthorized use of the projector.

## **LAN Network Function**

---

This projector is loaded with the wired and wireless LAN network function. You can operate and manage the projector via network. ( Page 59-66.)

## **Auto Setup Function**

---

This function enables input source search, auto pc adjust and auto keystone by simple pressing the AUTO button on the remote control.

## **Colorboard Function**

---

At the time of simple projection on the colored wall, you can get the close color image to the color image projected on a white screen by selecting the similar color to the wall color from the preset four colors.

## **Switchable Interface Terminal**

---

The projector provides a switchable interface terminal. You can use the terminal as computer input or monitor output conveniently.

## **Power Management**

---

The Power management function reduces power consumption and maintains the lamp life.

## **Closed Caption**

---

This is a printed version of the program sound or other information displayed on the screen. You can turn on the feature and switch the channels.

✓ *Note:*

- *The screen menu and pictures in the manual may slightly differ from the real product.*
- *The manual is subject to change without prior notice.*



# Contents

Features and Design	2	Setting	41
Contents	3	On start	41
Safety Instructions	4	Standby mode	41
Safety Guide	5	High land	42
Air circulation	6	Lamp control	42
Installing the projector properly	6	Cooling fast	42
Moving the projector	7	Closed Caption	43
Compliance	8	Key lock	43
Accessories	9	Iris	44
Part names and functions	10	Terminal	44
Front	10	Sound	44
Back	10	HDMI setup	45
Bottom	10	Expand	46
Terminals	11	Language	46
Top control and Indicators	12	Auto setup	46
Remote control	13	Keystone	47
Install remote control batteries	15	Logo	49
Operating range	15	Security	50
Wired Remote Control Transmitter	15	Power management	51
Installation	16	Filter counter	52
Positioning the projector	16	Test Pattern	52
Adjustable foot	16	Network	53
Lens shift adjustment	17	Remote control	54
Connecting to computer (Digital and analog RGB)	18	Factory default	54
Connecting to video equipment (Video, S-Video)	19	Lamp counter	55
Connecting to audio equipment	20	Memory viewer	56
Connecting to USB device (USB-A, USB-B)	21	Set Slide	56
Connecting the AC power cord	22	Slide transition effect	56
Basic operation	23	Sort Order	56
Turn on the projector	23	Rotate	57
Turn off the projector	24	Best Fit	57
How to operate the screen menu	25	Repeat	57
Menu bar	26	Apply	57
Adjust zoom and focus	27	Information	58
Lens shift adjustment	27	Network Control Instructions	59
Auto setup function	27	LAN control	59
Keystone	28	Using useful functions	67
Volume	29	Memory Viewer function	67
Remote control operation	30	USB Display function	69
Input select	32	Maintenance and cleaning	71
Display	34	WARNING indicator	71
Auto PC adj.	34	Cleaning the filter	72
Fine sync	34	Filter counter reset	72
H Position	34	Clean the projector lens	73
V Position	34	Clean the cabinet	73
H.Size	34	Replace the lamp	74
Aspect	35	Order Replacement lamp	75
Project Way	35	Appendix	76
Menu Position	35	Troubleshooting	76
Background Display	36	Menu Tree	78
System	36	Indicator and projector state	82
Color adjust	38	Compatible computer specifications	83
Image Mode	38	Technical Specifications	85
Color adjust (Computer)	39	Configurations of terminals	86
Color adjust (Video,S-video,Component)	40	Content of hazardous substances and elements	87
		Dimensions	87
		PIN code memorandum	88
		RS232 Control Method	89



# Safety Instructions

Please read this manual completely before installing and operating the projector.

The projector provides many convenient features and functions. Proper operation may enable you to fully utilize the features and keep it in good condition. Otherwise, it will not only shorten the service life of the unit, but also may cause malfunction, a fire, or other accidents.

If your projector cannot work properly, please read this manual again, check the operating methods and cable connection, and try the solutions in the part of Troubleshooting. If the problem still exists, contact the dealer or the service center.

The lamp of the projector is a wearing part. The luminance may decrease after a period of operation and be weaker than that of a new lamp. This is normal. Please strictly follow the steps in Turning on the unit and Turning off the unit to turn on/off the projector, and the requirements in Maintaining and cleaning the projector to service and clean the projector regularly. Otherwise the high temperature residual heat may not radiate, greatly shorten the service life of the projector and lamp, or even damage them within a short period.

 <div style="display: inline-block; text-align: center;"> <p><b>Caution</b></p> <p><b>ELECTRIC SHOCK DO NOT OPEN</b></p> </div> 
<p><b>CAUTION:</b>  <b>TO REDUCE THE RISK OF ELECTRIC SHOCK,          DO NOT REMOVE COVER (OR BACK). NO          USER SERVICEABLE PARTS INSIDE EXCEPT          LAMP REPLACEMENT. REFER SERVICING TO          QUALIFIED SERVICE PERSONNEL.</b></p>
<p>THIS SYMBOL INDICATES          THAT DANGEROUS VOLTAGE          CONSTITUTING A RISK OF ELECTRIC          SHOCK IS PRESENT WITHIN THIS          UNIT.</p>
<p>THIS SYMBOL INDICATES THAT THERE          ARE IMPORTANT OPERATING AND          MAINTENANCE INSTRUCTIONS IN THE          USER'S MANUAL WITH THIS UNIT.</p>

**FOR EU USERS**

The symbol mark and recycling systems described below apply to EU countries and do not apply to countries in other areas of the world. Your product is designed and manufactured with high quality materials and components which can be recycled and/or reused.


The symbol mark means that electrical and electronic equipment, batteries and accumulators, at their end-of-life, should be disposed of separately from your household waste.

Note:

If a chemical symbol is printed beneath the symbol mark, this chemical symbol means that the battery or accumulator contains a heavy metal at a certain concentration. This will be indicated as follows: Hg: mercury, Cd: cadmium, Pb: lead In the European Union there are separate collection systems for used electrical and electronic equipment, batteries and accumulators.


Please, dispose of them correctly at your local community waste collection/recycling centre.

Please help us to conserve the environment we live in!




## Safety precautions

- Caution:**
- The projector must be grounded.
  - Do not expose the projector to raindrops or high humidity to avoid a fire or electric shock.
- This projector produces intense light from the projection lens. Avoid staring directly into the lens, otherwise eye damage could be caused. Be especially careful that children do not stare directly into the beam.
  - Place the projector in a proper position. Otherwise it may result in fire hazard.
  - Leave an appropriate space from the top, sides, and back of the shell in order to ventilate and cool down the projector. The figures below indicate the minimum distance to be left. It must be satisfied if the projector is placed in sealed environment like a cabinet.

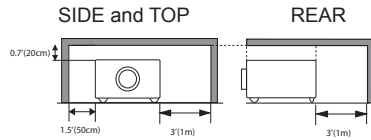

- Do not cover the vent of the projector. Poor radiation may shorten the service life or even cause dangers.
- Remove the AC power plug if the projector is not to be used for a long time.
- Do not project the same image for a long time; otherwise, a residual image may appear on the LCD panel due to its characteristic.



## Caution

Do not set the projector in greasy, wet, or smoky conditions such as in a kitchen, to prevent a malfunction or accident. If the projector comes in contact with oil or chemicals, it may become deteriorated.

Read and keep this manual for future reference.

The mains plug/appliance coupler is used as disconnect device, the disconnect device shall remain readily operable.

# Safety Guide

All the safety and operating instructions should be read before the product is operated.

Read all of the instructions given here and retain them for later use. Unplug this projector from AC power supply before cleaning. Do not use liquid or aerosol cleaners.

Use a damp cloth for cleaning.

Follow all warnings and instructions marked on the projector.

For added protection to the projector during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet. This will prevent damage due to lightning and power line surges.

Do not expose this unit to rain or use near water... for example, in a wet basement, near a swimming pool, etc...

Do not use attachments not recommended by the manufacturer as they may cause hazards.

Do not place this projector on an unstable cart, stand, or table. The projector may fall, causing serious injury to a child or an adult, and serious damage to the projector.

Use only with a cart or stand recommended by the manufacturer, or sold with the projector. Wall or shelf mounting should follow the manufacturer's instructions, and should use a mounting kit approved by the manufacturers.

An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.



Slots and openings in the back and bottom of the cabinet are provided for ventilation, to ensure reliable operation of the equipment and to protect it from overheating.

The openings should never be covered with cloth or other materials, and the bottom opening should not be blocked by placing the projector on a bed, sofa, rug, or other similar surface. This projector should never be placed near or over a radiator or heat register.

This projector should not be placed in a built-in installation such as a book case unless proper ventilation is provided.

Never push objects of any kind into this projector through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the projector.

Do not install the projector near the ventilation duct of air-conditioning equipment.

This projector should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied, consult your authorized dealer or local power company.

Do not overload wall outlets and extension cords as this can result in fire or electric shock. Do not allow anything to rest on the power cord. Do not locate this projector where the cord may be damaged by persons walking on it.

Do not attempt to service this projector yourself as opening or removing Covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

Unplug this projector from wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power cord or plug is damaged or frayed.
- If liquid has been spilled into the projector.
- If the projector has been exposed to rain or water.
- If the projector does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the projector to normal operation.
- If the projector has been dropped or the cabinet has been damaged.
- If the projector exhibits a distinct change in performance-this indicates a need for service.

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or injury to persons.

Upon completion of any service or repairs to this projector, ask the service technician to perform routine safety checks to determine that the projector is in safe operating condition.

## Information for users in the European Union

This is a device to project images onto a screen, etc., and is not intended for use as indoor lighting in a domestic environment.  
Directive 2009/125/EC.

## NOTE FOR CUSTOMERS IN THE US

 LAMP(S) INSIDE THIS PRODUCT CONTAIN MERCURY AND MUST BE RECYCLED OR DISPOSED OF ACCORDING TO LOCAL STATE OR FEDERAL LAWS.

# Safety Guide

## Air circulation


Vents in the cabinet are provided for ventilation. To ensure reliable operation of the product and to protect it from overheating, these openings must not be blocked or covered.




### Caution

Hot air is exhausted from the exhaust vent. When using or installing the projector, the following precautions should be taken.

- Do not put any flammable objects, or spray can near the projector. Hot air is exhausted from the air vents.
- Keep the exhaust vent at least 1m away from any objects.
- Do not touch a peripheral part of the exhaust vent, especially screws and metallic part. This area will become hot while the projector is being used.
- Do not put anything on the projector. Objects put on the cabinet will not only get damaged but also may cause fire hazard by heat.
- Cooling fans are provided to cool down the projector.
- The fan's running speed is changed according to the temperature inside the projector.

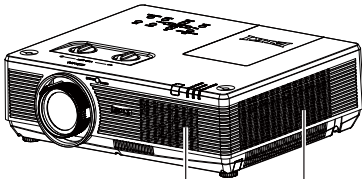



Air Intake Vent Exhaust Vent

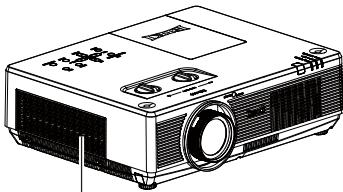

Air Intake Vent

## Installing the projector properly

  Please set the projector on nearly-level. Be sure to install the projector properly. Improper installation may reduce the lamp lifetime and even cause a fire hazard.



Do not point the projector up to project an image.



Do not point the projector down to project an image.




Do not put the projector on either side to project an image.



### Caution in ceiling installation the projector

- Only qualified personal is authorized for ceiling installation.
- We are not responsible for the hurt and damage caused by ceiling bracket that purchased from unauthorized dealer even in warranty period.
- Remove the ceiling bracket immediately while not use.
- While installing, torque screwdriver is suggested, don't use electric or impact-type screwdriver.
- Please read the manual of bracket for details.


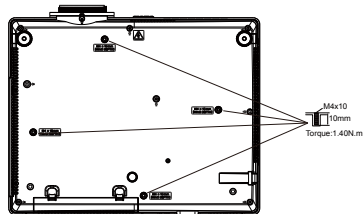


## Moving the projector

When moving the projector, take care of the lens and retract the adjustable feet to prevent damage to the lens and cabinet.

### Notes on Lens Protective Ring

Before operating the projector, remove the lens protective ring. In case of transportation, rotate the FOCUS ring and LENS SHIFT lever to let the lens back to its central position and put on the lens protective ring to protect the lens.

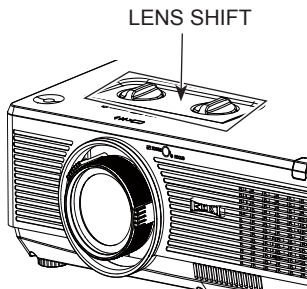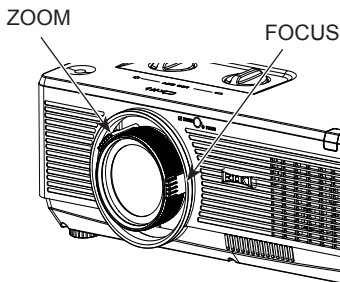

### Caution in moving or transporting the projector

- Do not drop or bump the projector, otherwise damages or malfunctions may result.
- When carrying the projector, use a suitable carrying case.
- Do not transport the projector by courier or any other transport service in an unsuitable transport case. This may cause damage to the projector. For more information about transporting the projector by courier or any other transport service, consult your dealer.
- Do not put the projector in a case before it is cooled enough.

### Notes on Projector Handling

When lifting or moving the projector, do not hold the lens and the peripheral part to prevent damage on the lens or projector.

Be careful in handling the projector. Do not drop or bump it to avoid strong force, or place other objects on the cabinet.





Note:




The lens of the projector is manual. When operating the projector, pay attention to the following conditions.



- When the lens is rotating, do not touch it, otherwise your fingers may get hurt.
- Do not allow a child to touch the lens.

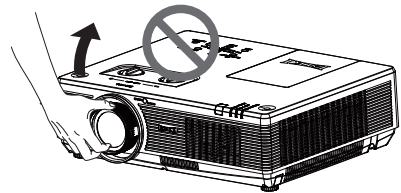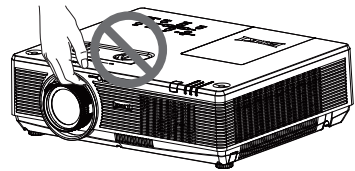

Do not hold the lens and the peripheral part.

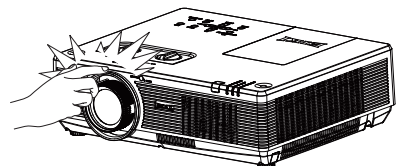

# Compliance

## FCC Caution

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Use of shielded cable is required to comply with class B limits in Subpart B of Part 15 of FCC Rules. Do not make any changes or modifications to the equipment unless otherwise specified in the instructions. If such changes or modifications should be made, you could be required to stop operation of the equipment.

Model Number : LC-XBS500, LC-WBS500

Trade Name : EIKI

Responsible party : EIKI International, Inc.

Address : 30251 Esperanza Rancho Santa Margarita CA 92688-2132

Telephone No. : 800-242-3454 (949-457-0200)

## AC Power Cord Requirement


The AC Power Cord supplied with this projector meets the requirement for use in the country you purchased it.

### AC Power Cord for the United States and Canada:

AC Power Cord used in the United States and Canada is listed by the Underwriters Laboratories (UL) and certified by the Canadian Standard Association (CSA).

AC Power Cord has a grounding-type AC line plug. This is a safety feature to be sure that the plug will fit into the power outlet. Do not try to defeat this safety feature. Should you be unable to insert the plug into the outlet, contact your electrician.

### AC Power Cord for the United Kingdom:

This cord is already fitted with a moulded plug incorporating a fuse, the value of which is indicated on the pin face of the plug. Should the fuse need to be replaced, an ASTA approved BS 1362 fuse must be used of the same rating, marked thus . If the fuse cover is detachable, never use the plug with the cover omitted. If a replacement fuse cover is required, ensure it is of the same colour as that visible on the pin face of the plug (i.e. red or orange). Fuse covers are available from the Parts Department indicated in your User Instructions.

If the plug supplied is not suitable for your socket outlet, it should be cut off and destroyed.

 
The end of the flexible cord should be suitably prepared and the correct plug fitted.

**WARNING : A PLUG WITH BARED FLEXIBLE CORD IS HAZARDOUS IF ENGAGED IN A LIVE SOCKET OUTLET.**

The Wires in this mains lead are coloured in accordance with the following code:

Green-and-yellow . . . . .	Earth
Blue . . . . .	Neutral
Brown . . . . .	Live

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug proceed as follows:

The wire which is coloured green-and-yellow must be connected to the terminal in the plug which is marked by the letter E or by the safety earth symbol  or coloured green or green-and-yellow.


 

 
 

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

**WARNING: THIS APPARATUS MUST BE EARTHED.**


**THE SOCKET-OUTLET SHOULD BE INSTALLED NEAR THE EQUIPMENT AND EASILY ACCESSIBLE.**

# Accessories

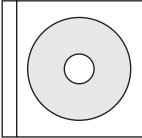Owner's Manual(CD)	AC Power cord	Remote control with batteries (AA or LR6)
		
VGA cable	Quick start guide	Lens Protection Ring
		


## Part names and functions

### Front

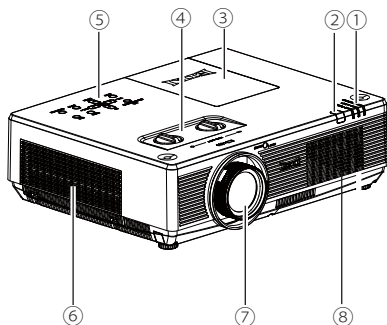


- ① Indicators
- ② Remote control receiver(front)
- ③ Lamp cover
- ④ Lens shift
- ⑤ Top control panel
- ⑥ Filter
- ⑦ Projector Lens
- ⑧ Air Intake Vent

### Back

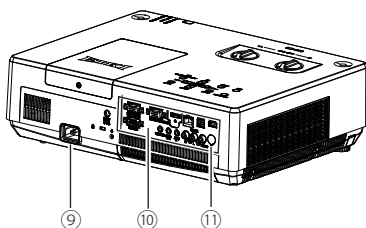

- ⑨ AC cord connector
- ⑩ Terminals
- ⑪ Remote control receiver(back)

### Bottom

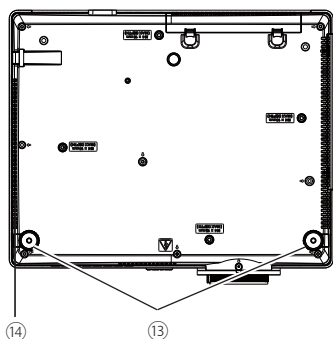

- ⑬ Adjustable feet
- ⑭ Exhaust vent




### Caution

*Hot air is exhausted from the exhaust vent. Do not put heat-sensitive objects near this side.*





## Terminals

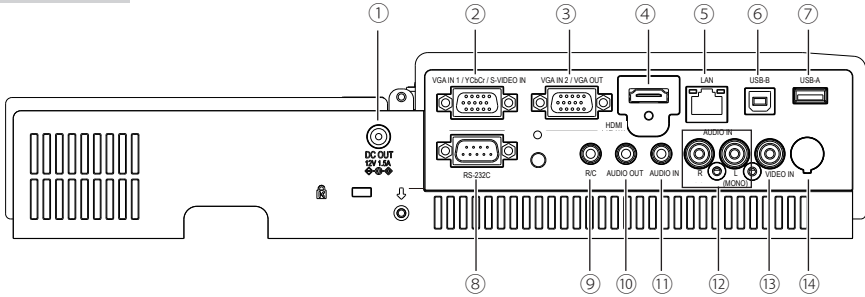

- ① **DC OUT**  
DC out 12V 1.5A .
- ② **VGA IN 1/YCbCr/S-VIDEO IN**  
This is the terminal to input RGB, YCbCr or S-video signals.
- ③ **VGA IN 2/VGA OUT**  
- Connect a computer output to this terminal.  
- Output the analog signal form ② to other monitor.
- ④ **HDMI**  
This is the terminal to input HDMI signals.
- ⑤ **LAN**  
This is the LAN terminal to connect to the network.
- ⑥ **USB-B**  
This terminal is used to connect the projector to the computer with a USB cable when you want to use the "USB Display" function.
- ⑦ **USB-A**  
When using the "Memory Viewer" function, insert the USB memory directly to this terminal.
- ⑧ **RS-232C**  
When using RS232 to control the projector, please connect the serial control line to this terminal.
- ⑨ **R/C**  
Connect the wired remote control cable to this jack while operation the projector by wired remote control.
- ⑩ **AUDIO OUT**  
Connect external audio amplifier to this jack.
- ⑪ **AUDIO IN**  
This is the terminal to input computer audio signals.
- ⑫ **MONO(R/L)**  
For a mono audio signal (a single audio jack), connect it to MONO(R/L) jack.
- ⑬ **VIDEO IN**  
This is the terminal to input video signals.
- ⑭ **Remote Control receiver(BACK)**  
Operation the projector by remote control.

## Part names and functions

### Top control and Indicators

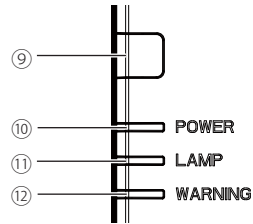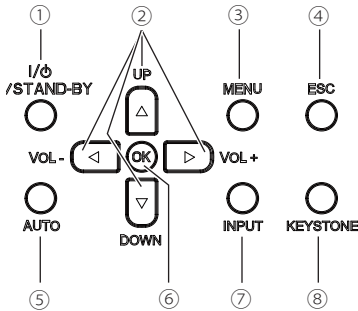

#### ① POWER

Turn on/off the projector.

#### ② ▲▼◀▶/UP/DOWN/VOL+/VOL-

- Select an item or adjust the value in the screen menu.
- Pan the image in the D. Zoom +/- mode.
- Increase or decrease volume.

#### ③ MENU

Open or close the screen menu.

#### ④ ESC

Return to the previous menu.

#### ⑤ AUTO

Perform various settings configured automatically, including the "Input search", "Auto PC adj." and "Auto keystone".

#### ⑥ OK

- Enter menu operation.
- Execute the selected item.

#### ⑦ INPUT

Select an input source.

#### ⑧ KEYSTONE

Correct the keystone distortion.

#### ⑨ Remote Control receiver(Front)

Operation the projector by remote control.

#### ⑩ POWER

- It lights red when the projector is in stand-by mode.
- It lights green during normal operations.
- It flashes green in the Power management mode.
- It flashes red during fans cooling.


#### ⑪ LAMP

- It turns yellow when the life of the projection lamp draws to an end.

#### ⑫ WARNING

- It flashes red when the internal projector temperature is beyond the operating temperature range.
- It lights red when the power supply of the projector is abnormal.

### Remote control

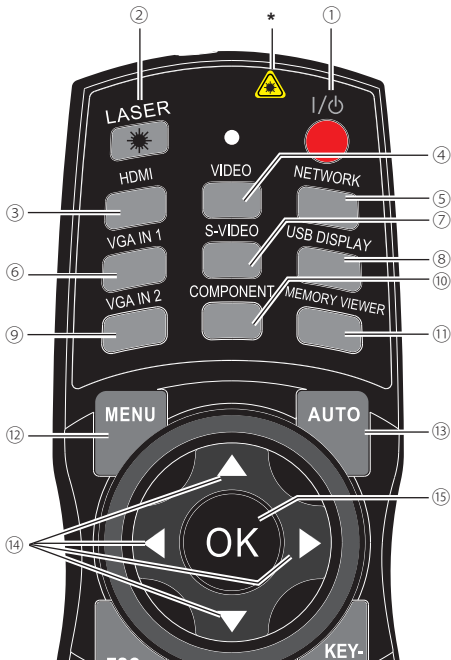


\* Laser Transmitting Window:  
Laser beam will emit from this window. While pressing LASER button during the projection to use the remote control as a laser pointer.

Do not stare directly at the laser transmitting window or aim the window at human body to avoid any physical injury.

- ① **POWER**  
Turn on or turn off the projector.
  - ② **LASER**  
Press this button during projection, the remote control can be used as a laser pointer.
  - ③ **HDMI**  
Select "HDMI" as input source.
  - ④ **VIDEO**  
Select "Video" as input source.
  - ⑤ **NETWORK**  
Select "Network" as input source.
  - ⑥ **VGA IN 1**  
Select "Computer 1" as input source.
  - ⑦ **S-VIDEO**  
Select "S-video" as input source.
  - ⑧ **USB DISPLAY**  
Select "USB Display" as input source.
  - ⑨ **VGA IN 2**  
Select "Computer 2" as input source.
- Note:**
- It only can switch input source to "Computer 2" when select VGA IN2/VGA OUT as VGA IN2.
- ⑩ **COMPONENT**  
Select "Component" as input source.
  - ⑪ **MEMORY VIEWER**  
Select "Memory Viewer" as input source.
  - ⑫ **MENU**  
Open or close the screen menu.
  - ⑬ **AUTO**  
Enter auto setup adjust mode.
  - ⑭ **▲▼◀▶ button**
    - Select item or adjust data in screen menu.
    - Select the image display area in digital zoom + mode.
  - ⑮ **OK**  
Enter the menu or select an item in the menu.

## Part names and functions

---

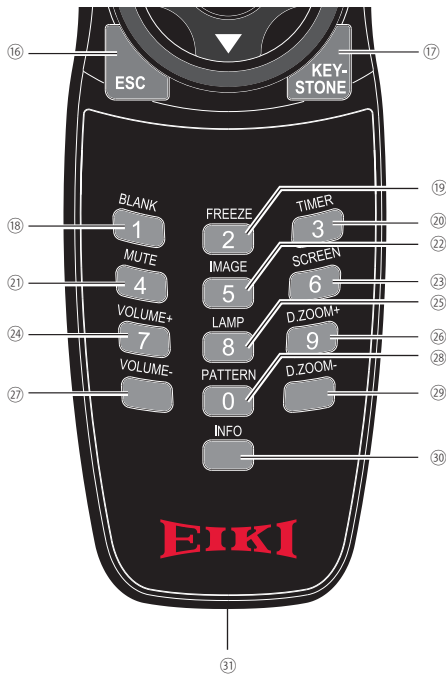

①⑥ **ESC**  
Return to the previous menu.

①⑦ **KEYSTONE**  
Correct the keystone distortion.

①⑧ **BLANK**  
Temporarily close the image on the screen.

①⑨ **FREEZE**  
Freeze the projected image.

②⑩ **TIMER**  
Enable the timer function.

②① **MUTE**  
Turn off the volume.

②② **IMAGE**  
Select the image mode.

②③ **SCREEN**  
Select the screen size.

②④ **VOLUME +**  
Increase the volume.

②⑤ **LAMP**  
Select the lamp mode.

②⑥ **D.ZOOM +**  
Digital zoom in the image.

②⑦ **VOLUME -**  
Decrease the volume.

②⑧ **PATTERN**  
Set the internal test image.


②⑨ **D.ZOOM -**  
Digital zoom out the image.

③⑩ **INFO.**  
Display the projector information.


③① **Wired remote control output port**  
Connect the wired remote control cable to this port while operation the projector by wired remote control.

### Install remote control batteries


- ① Open the battery cover.

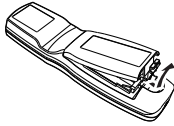

- ② Install new batteries.

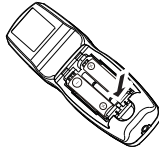

- ③ Put the cover back.

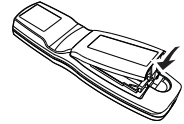

Two AA batteries  
For correct polarity (+ and -), be sure battery terminals are in contact with pins in the compartment.





To ensure safe operation, please observe the following precautions:

- Use two (2) AA or LR6 type alkaline batteries.
- Always replace batteries in sets.
- Do not use a new battery with a used battery.
- Avoid contact with water or liquid matter.
- Do not expose the remote control to moisture or heat.
- Do not drop the remote control.
- If the battery has leaked in the remote control, carefully wipe the case clean and install new batteries.
- Risk of explosion if two batteries are replaced by an incorrect type.
- Dispose of used batteries according to the instructions on the battery or local regulations or guides.

### Operating range


Point the remote control toward the remote control receivers on the projector (front and back) when pressing any button.

The maximum operating range for the remote control is about 5 meters and 60 degrees.

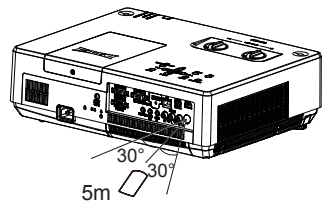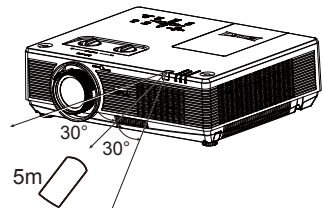

### Wired Remote Control Transmitter

The remote control can be used as a wired remote control. Wired remote control helps you use the remote control outside of the operation range (26.25/8m). Connect the remote control and the projector with the remote control cable. Connected with the remote control cable, the remote control does not emit wireless signal.

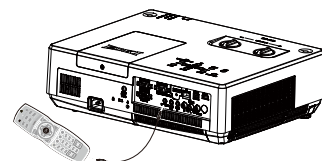


# Installation

## Positioning the projector

✓ Note:

- The brightness in a room has a great influence on picture quality. It is recommended to limit the ambient lighting in order to get the best image.
- All measurements are approximate and may vary from the actual sizes.

LC-XBS500:

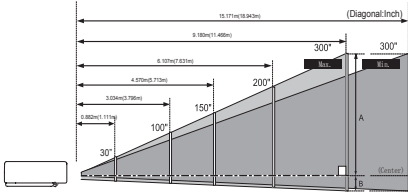

✓ Note:

The data in "( )" is the project distance for 16:9 aspect ratio.


4:3

Screen size (WxH)mm	30"	100"	150"	200"	300"
4:3 aspect ratio	610x457	2032x1524	3048x2286	4064x3048	6096x4572
Maximum	0.882m	3.034m	4.570m	6.107m	9.180m
Minimum	1.482m	5.031m	7.566m	10.101m	15.171m

16:9

Screen size (WxH)mm	30"	100"	150"	200"	300"
16:9 aspect ratio	664x374	2214x1245	3321x1868	4428x2491	6641x3736
Maximum	1.111m	3.796m	5.713m	7.631m	11.466m
Minimum	1.859m	6.288m	9.452m	12.616m	18.943m

LC-WBS500:

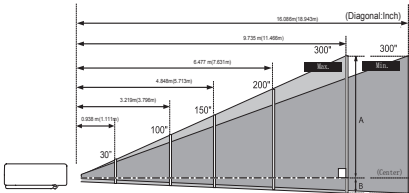

✓ Note:

The data in "( )" is the project distance for 16:9 aspect ratio.

16:10

Screen size (WxH)mm	30"	100"	150"	200"	300"
16:10 aspect ratio	646x404	2154x1346	3231x2019	4308x2692	6462x4039
Maximum	0.938m	3.219m	4.848m	6.477m	9.735m
Minimum	1.573m	5.336m	8.023m	10.711m	16.086m

16:9

Screen size (WxH)mm	30"	100"	150"	200"	300"
16:9 aspect ratio	664x374	2214x1245	3321x1868	4428x2491	6641x3736
Maximum	1.111m	3.796m	5.713m	7.631m	11.466m
Minimum	1.859m	6.288m	9.452m	12.616m	18.943m


## Adjustable foot

The projector can be adjusted up to 40 mm with the adjustable feet.

Rotate the adjustable feet to lift the projector to a certain height. During lifting, rotate the two feet clockwise.

To lower or retract the adjustable feet, rotate the two feet counterclockwise.


Keystone distortion of projected images can be corrected by auto settings, remote control operation or menu operation.

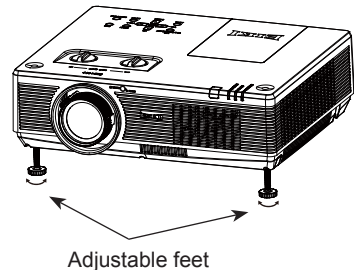

**Lens shift adjustment**


Projection lens can be moved from side to side and up to down. This function makes the positioning of images easy on the screen.

The display position can be shifted upward up to 40%(XGA), 50%(WXGA) elevation of the display.

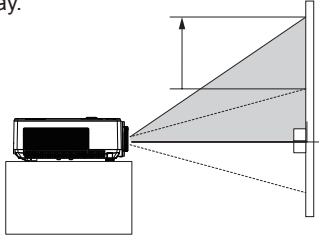


When the lens is shifted to top.

The display position can be shifted downward up to 40%(XGA), 50%(WXGA) elevation of the display.

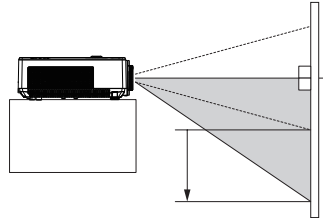


When the lens is shifted to bottom.

The display position can be shifted to the left up to 10% width of the display.

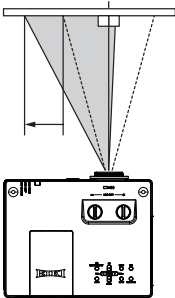


When the lens is shifted to leftmost.

The display position can be shifted to the right up to 10% width of the display.

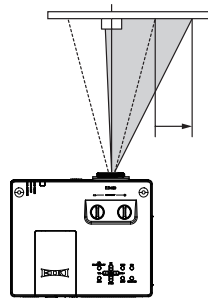

When the lens is shifted to rightmost.

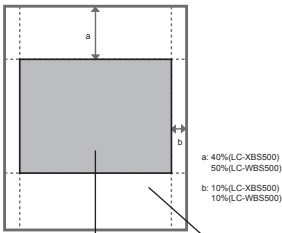

When the lens is shifted to the center.

Shifting range

a: 40%(LC-XBS500)  
50%(LC-WBS500)  
b: 10%(LC-XBS500)  
10%(LC-WBS500)


# Installation

## Connecting to computer (Digital and analog RGB)

Cables used for connection:

- VGA cable
- HDMI cable\*
- Serial cable\*

(\*=Cables are not supplied with the projector)

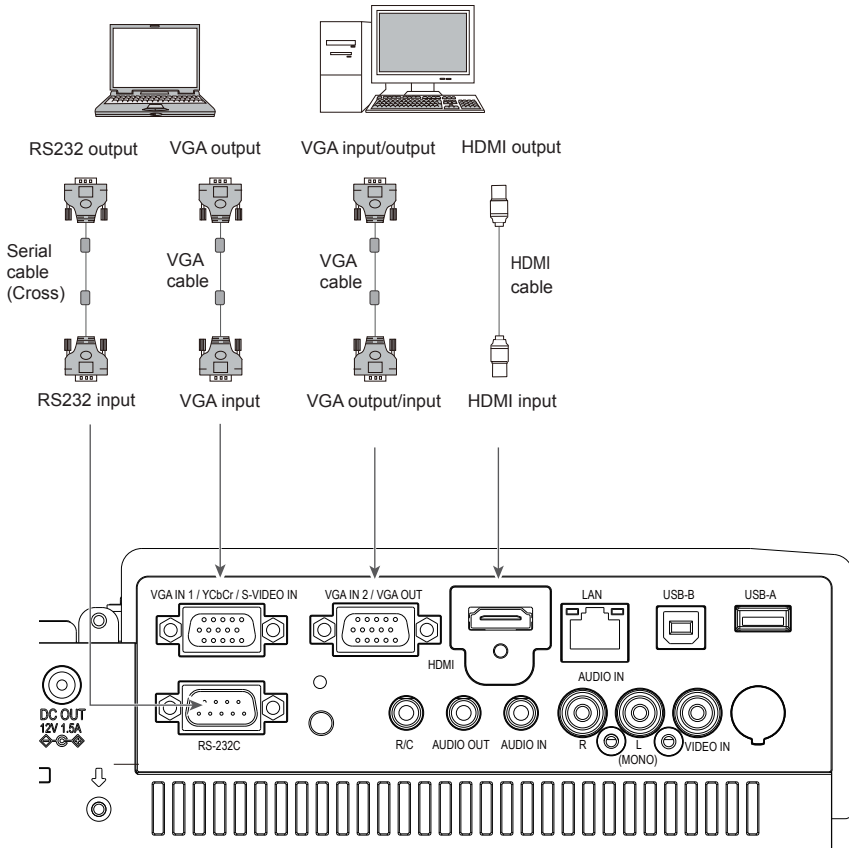

Unplug the power cords of both the projector and external equipment from the AC outlet before connecting the cables.




**Connecting to video equipment (Video, S-Video)**

Cables used for connection:

- S-video cable\*\*
- Video cable\*
- Component conversion cable\*

(\*=Cables are not supplied with the projector)

\*\*=Dedicated cable is required and can be ordered through your dealer)

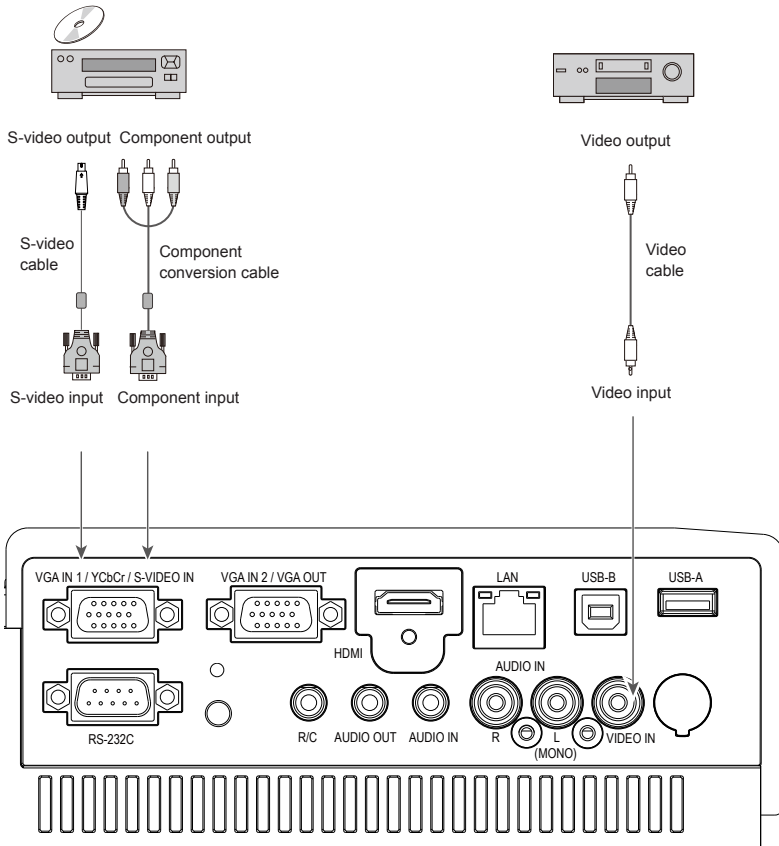

*Unplug the power cords of both the projector and external equipment from the AC outlet before connecting the cables.*

# Installation


## Connecting to audio equipment

Cables used for connection:

- Audio cable\*

(\*=Cables are not supplied with the projector)

### External audio equipment

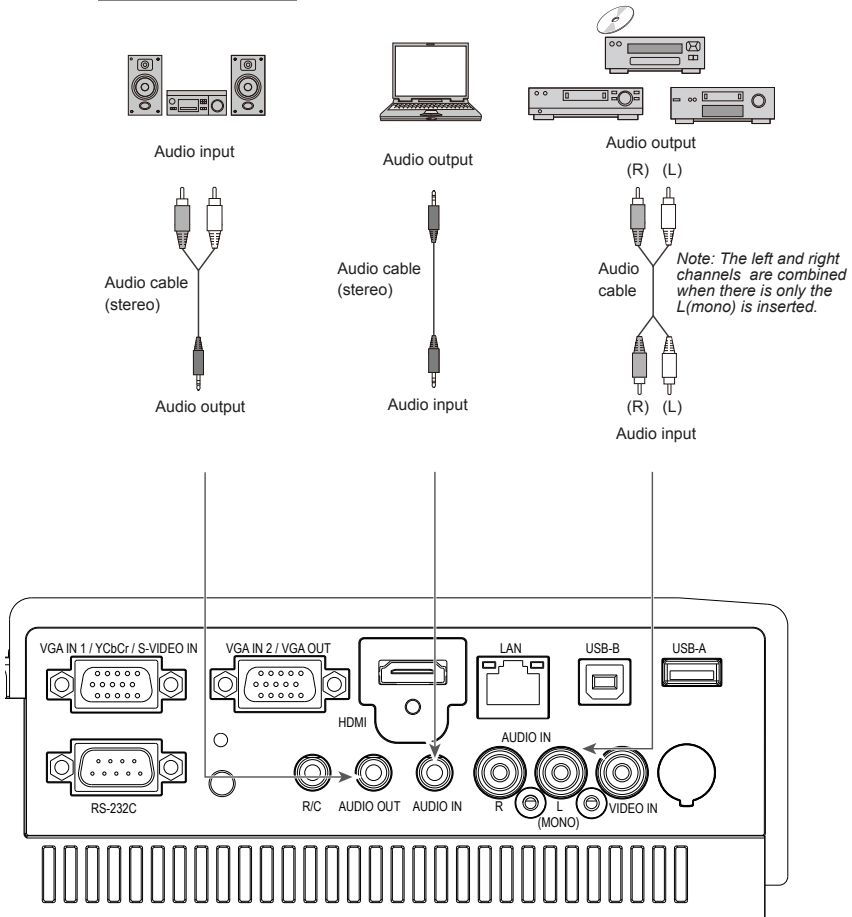


Unplug the power cords of both the projector and external equipment from the AC outlet before connecting the cables.

## Connecting to USB device (USB-A, USB-B)

Cables used for connection:

- USB-B cable\*

(\*=Cables are not supplied with the projector)

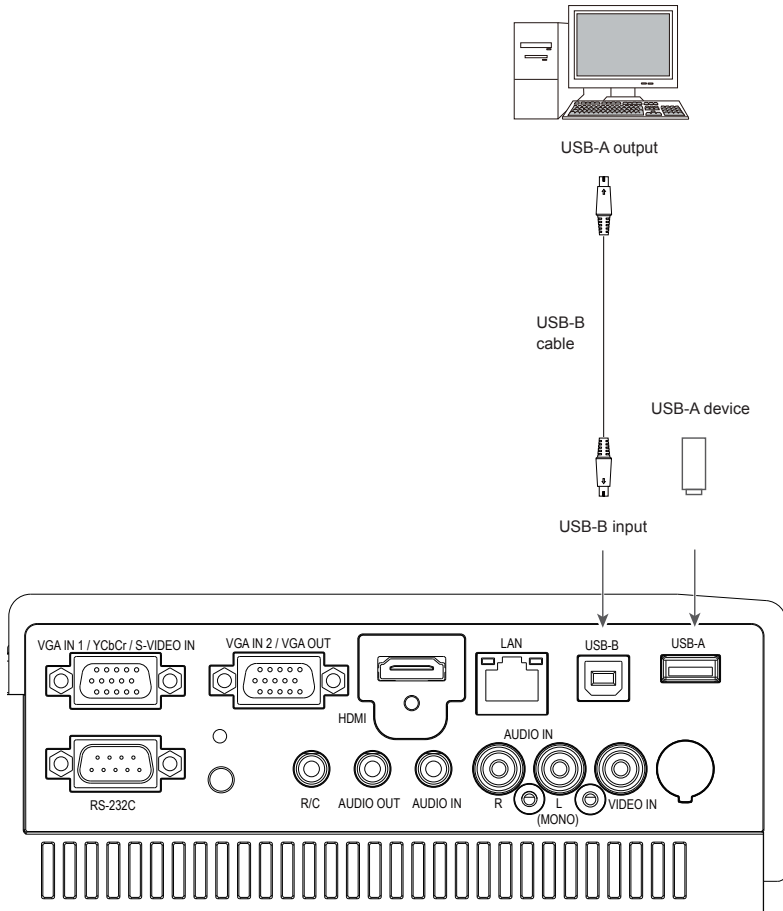


*Unplug the power cords of both the projector and external equipment from the AC outlet before connecting the cables.*

## Installation

### Connecting the AC power cord

This projector uses nominal input voltages of 100–240V AC and it automatically applies to different input voltages. It is designed to work with a single-phase power system having a grounded neutral conductor. To reduce the risk of electrical shock, do not plug into any other type of power system. If you are not sure of the type of power being supplied, consult your authorized dealer or service station. Connect the projector with all peripheral equipment before turning it on.

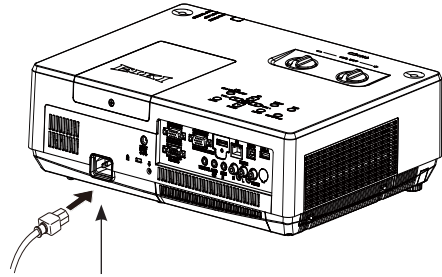

Connect the AC power cord (supplied) to the projector.



Note:





The AC outlet should be near this equipment and must be easily accessible.

✓ Note:

*For safety, unplug the AC power cord when the projector is not in use. When the projector is connected to an outlet with AC power cord, it is in stand-by mode and consumes a little electric power.*

#### Note on the power cord

 AC power cord must meet the requirements of the country where you use the projector. Confirm the AC plug type with the chart below and proper AC power cord must be used. If the supplied AC power cord does not match your AC outlet, contact your sales dealer.

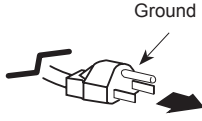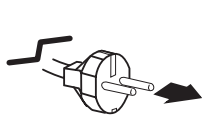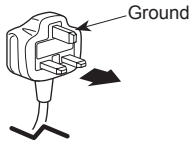Projector side	AC outlet side		
	For the U.S.A. and Canada	For Continental Europe	For the U.K.
 <p>To power cord connector on your projector.</p>	 <p>To the AC outlet.</p>	 <p>To the AC outlet.</p>	 <p>To the AC outlet.</p>

✓ Note:

- *Using incorrect power cord may influence the product performance, or even cause hazards like an electric shock or fire. To ensure the product performance and security, please apply the cable of the same model with the original one.*

## Turn on the projector

1. Complete peripheral connections (with a computer, VCR, etc.) before turning on the projector.
2. Connect the projector's AC power cord into the AC outlet. The POWER indicator turns red.
3. Press the POWER button on the top control or on the remote control. The POWER indicator becomes green and the cooling fans start to work. The preparation display appears on the screen.
4. If the projector is locked with a PIN code, a PIN code input dialog box appears. Enter the PIN code as instructed below.

✓ *Note:*

- When the logo select is set to be "Off", the logo will not be displayed on the screen. (See page 49)

Enter a PIN code

Press the OK button, press ▲▼ button to select a number, then press the OK button, select a number and enter it to the PIN code box, then number changes to "\*", automatically move the cursor to next box. If you fixed an incorrect number, press MENU button to reset it again.



Repeat this step to complete entering a three-digit number.

After entering the three-digit number, move the cursor to "Set", then you can start to operate the projector.

If you entered an incorrect "PIN code", the number (\*\*\*) turn red. PIN code will be reset within one second automatically, Enter the correct PIN code all over again.

What is PIN code?

PIN (Personal Identification Number) code is a security code that allows the person who knows it to operate the projector. Setting the PIN code can prevent unauthorized use of the projector. A PIN code consists of a three-digit number. Refer to the PIN code lock function in the "Expand" "Security" menu on page 50 for PIN code lock operation of the projector.

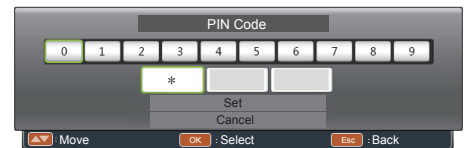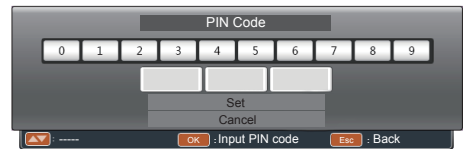

Move the cursor to "Set", and press "OK".




**Caution on handling the PIN code**  
If you forget your PIN code, the projector can no longer be started. Take a special care in setting a new PIN code. Write down the number in a column on page 88 of this manual and keep it properly. Should the PIN code be missing or forgotten, consult your dealer or service center.


## Basic operation

---

### Turn off the projector


1. Press the POWER button on the top control or on the remote control, and "Power off?" appears on the screen.
2. Then, press the POWER button again in 4 seconds. The POWER indicator starts to flash red, and the cooling fans keep running (You can select the fan noise and running speed). Now you can unplug the AC power cord after the fans stop running. Otherwise, the service life of the projector will be affected or the projector will not be turned on or turn on abnormal.
3. When the projector has cooled down enough to be turned on again, the POWER indicator stops flashing.

 *To maintain the lamp life, once you turn the projector on, wait at least 5 minutes before turning it off.*

 *Do not operate the projector continuously without reset. Continuous use may result in shortening the lamp life. Turn off the projector and let it standby for about an hour in every 24 hours.*

✓ Note:

- When the On start function is "On", this projector is turned on automatically by connecting the AC power cord to an AC outlet.
- The running speed of cooling fans is changed according to the temperature inside the projector.
- Do not put the projector in a case before it is cooled enough.
- If the POWER indicator flashes or emits a red light, see page 82.
- While the POWER indicator is flashing, the lamp is being cooled down and the projector cannot be turned on. Wait until the POWER indicator turns red to turn on the projector again.
- The fan rotation will terminate directly if the AC power cord is unplugged immediately after the projector is turned off.
- The projector can be turned on after the POWER indicator turns red. The waiting time to restart will be shortened when the normal power-off processing for fan cooling is completed, comparing with the time the AC power cord is immediately unplugged after the power-off.

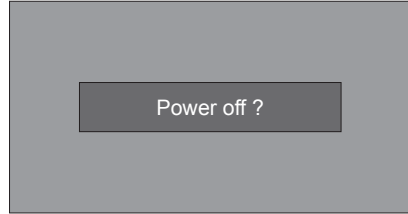


"Power off ?" disappears after 4 seconds.

## How to operate the screen menu


The projector can be adjusted or set via the on-screen menu. Each main menu can be divided into several levels of submenus, and submenus are also divided into several levels of sub-submenus.

For each adjustment and setting procedure, refer to the respective sections in this manual.

### Top control

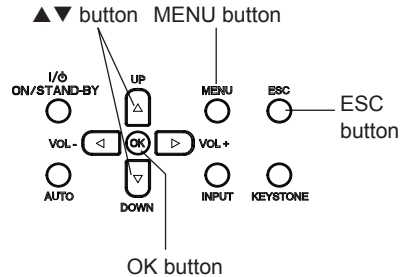


### Remote control

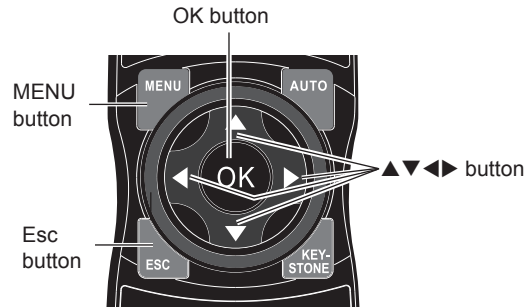

- 1 Press the MENU button on the remote control or top control to display the screen menu.
- 2 Press ▲▼ buttons to select an entry in the main menu and then press the OK button to enter the submenu.
- 3 Press ▲▼ buttons to select an item, and then press the OK button to set or enter the submenu.
- 4 Press ▲▼ buttons to adjust settings or switch among the items. Press the OK button for corresponding operation.


### Screen menu

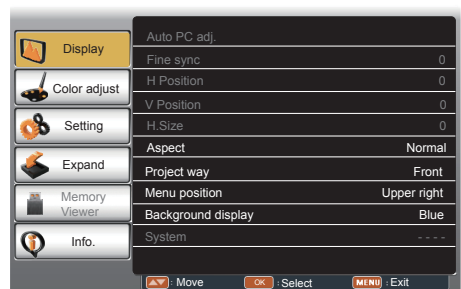

- 5 Press ESC button on the remote control or top control to go back to the previous menu. Press MENU button again to exit the screen menu.

## Basic operation

### Menu bar

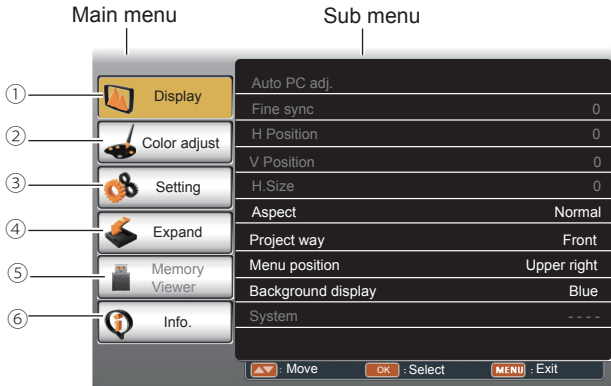

#### ① Display

- Adjust computer parameters to match with VGA input signal format: **Auto PC adj.**, **Fine sync**, **H Position**, **V Position** and **H.Size**.
- **Aspect: Normal** and **Wide**.
- **Project way**: select a project way among **Front**, **Rear**, **Ceiling/Front** and **Ceiling/Rear**.
- **Menu position**: set the menu's position on the screen.
- **Background display**: set the background display color for project screen.
- **System**: select a system signal format to match the input source.

#### ② Color adjust

- **Image mode**: the available image modes is **Standard**, **Dynamic**, **User Image**, **Colorboard**, **Blackboard(Green)** or **Cinema**.
- Image color adjust:  
If a computer is selected as a signal source, the following image adjusting options are available: **Contrast**, **Brightness**, **Color temp.**, **White balance (R/G/B)** and **Sharpness**.  
If video equipment is selected as a signal source, the following image adjusting options are available: **Contrast**, **Brightness**, **Color**, **Tint**, **White balance (R/G/B)** and **Sharpness**.

#### ③ Setting

Configure basic operation settings of the projector: **On start**, **Standby mode**, **High land**, **Lamp control**, **Cooling fast**, **Closed caption**, **Key lock**, **Iris**, **Terminal**, **Sound** and **HDMI setup**.

#### ④ Expand

Configure expand operation settings of the projector: **Language**, **Auto setup**, **Keystone**, **Logo**, **Security**, **Power management**, **Filter counter**, **Test Pattern**, **Network**, **Remote control**, **Factory default** and **Lamp counter**.

#### ⑤ Memory viewer

Configure operation settings for Memory Viewer function: **Set Slide**, **Slide transition effect**, **Sort order**, **Rotate**, **Best fit**, **Repeat** and **Apply**.

#### ⑥ Info.


The system information of the projector.



### Adjust zoom and focus

Rotate the ZOOM to zoom in or zoom out the image.

Rotate the FOCUS to adjust the focus of the image.

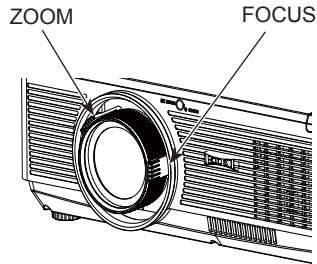


### Lens shift adjustment

Perform the lens shift adjustment with ① and ②.

Rotate ①, the screen may deviate up-and-down from the central axis of lens shift 40%(XGA), 50%(WXGA) elevation of the display.


Rotate ②, the screen may deviate left-and-right from the central axis of lens shift 10% width of the display.

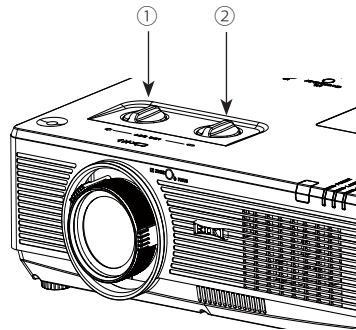

### Auto setup function

This function is available just by pressing the AUTO button on the remote control or top control. The system then automatically performs various settings in the "Expand" menu, including "Input search", "Auto PC adj." and "Auto keystone".

Top control

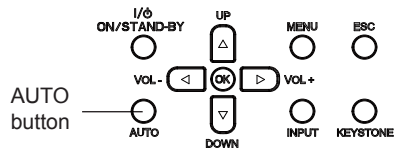

Remote control



## Basic operation

### Keystone

If a projected image has keystone distortion, follow the steps below to manually correct the keystone distortion.

Press KEYSTONE button on the top control or on the remote control. The Keystone screen will displayed, (it includes: H/V Keystone, Corner correction, Curved correction and Reset value), press ▲▼ to select the item.


H/V Keystone.....Adjusts when the horizontal or vertical trapezoid of the projected image is distorted.

Corner correction...Adjusts when the four corners of the projected image are distorted.


Curved correction...Adjusts when the linearity is not uniform or the vertical and horizontal lines are distorted.

Reset value.....Return the corrected values to the factory default values.

#### Top control

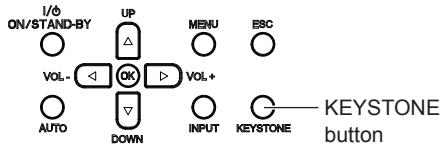

#### Remote control

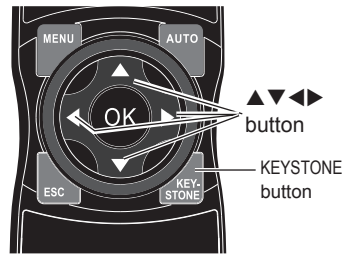

### H/V Keystone



- The arrows are white when there is no correction.
- The arrows that are used for correction turns red.
- Press ▲▼◀▶ button long time, the arrows turn red and can be adjusted quickly
- The arrows disappear at the maximum correction.
- If you press the KEYSTONE button on the remote control or top control once again while the keystone dialog box is being displayed, the keystone adjustment is canceled.
- The adjustable range can be limited depending on the input signal.

#### H/V Keystone

- Corner correction
- Curved correction
- Reset value

## Volume

### Direct operation

#### Volume


Press the VOLUME +/- buttons on the remote control or top control to adjust the volume.

#### Mute


Press the MUTE button on the remote control and select "On" to turn off the audio temporarily. To restore the audio to its previous level, press the MUTE button again and select "Off" or press the VOLUME +/- buttons.

Mute function is also effective for AUDIO OUT jack.

### Top control

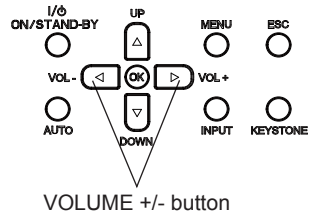

### Remote control

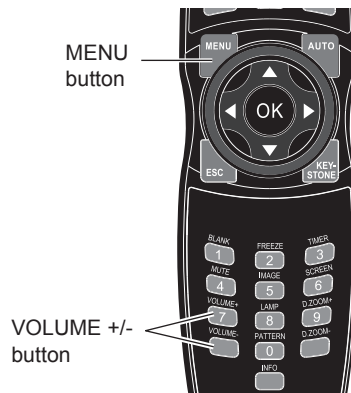

### Menu operation

- 1 Press the MENU button to display the screen menu. Press ▲▼ button to select the "Setting" menu icon. Press the OK button to enter the submenu entry.
- 2 Press ▲▼ button to select "Sound" and then press the OK button.
- 3 Press ▲▼ button to select "Volume" or "Mute" to adjust.

#### Volume


Press ▲ to increase the volume and ▼ to decrease the volume.

#### Mute

Press ▲▼ button to switch the mute function (On/Off).

- 4 Press the OK button to select.

### Volume menu

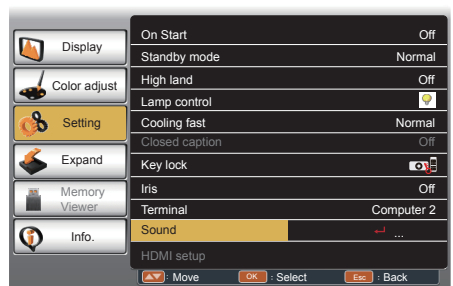

## Basic operation

### Remote control operation

Using the remote control for some frequently used operations is advisable. Just pressing one of the buttons enables you to quickly without calling up the screen menu.

#### **FREEZE** button

Press FREEZE button on the remote control, video will be paused and the audio is muted. The icon is displayed on the screen during Freeze. Press FREEZE button again, the video playback resumes and the audio is unmuted.

#### **MUTE** button

Press MUTE button on the remote control to turn off the volume. Press MUTE button again or VOLUME +/- button to cancel mute function.

#### **VOLUME +/-** button


Press VOLUME +/- button on the remote control to increase or decrease the volume.


#### **IMAGE** button

Press IMAGE button on the remote control to select the image mode you want.

#### **LAMP** button

Press LAMP button to select a lamp mode to change the brightness of the screen.


 Normal ..Normal brightness.

 ECO ..... Lower brightness, reducing the lamp power consumption and extending the lamp life.

#### **INFO** button

Press INFO button on the remote control to display the projector information.

Remote control

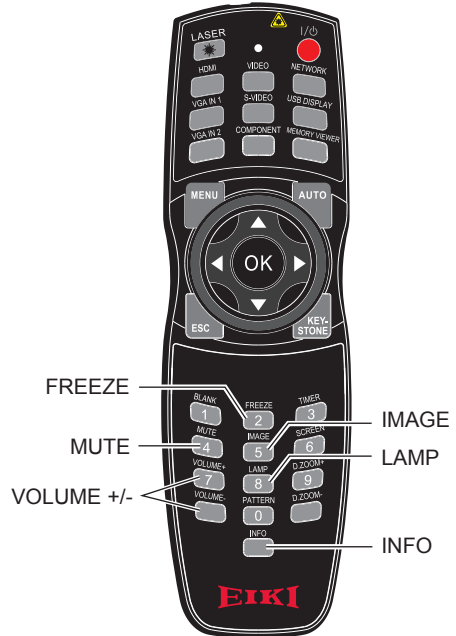

✓ *Note:*


*See the next page for the description of other buttons.*

### ESC button

Return to the previous menu.

### BLANK button

Press BLANK button on the remote control to black out the image. To restore to normal, press the BLANK button again or press any other button.

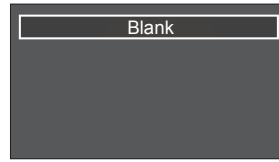

“Blank” disappears after 2 seconds if there is no other button operation.

The screen changes each time you press the button as follows:

Black out →Normal →Black out →Normal ...

### TIMER button

Press TIMER button. The timer display “00:00” appears on the screen and the timer starts to count time (00:00–59:59).



Timer display

To stop the Timer, press TIMER button. Press TIMER button again, and then the Timer display disappears.

### SCREEN button

Press SCREEN button on the remote control to select the screen size you want.

### D.ZOOM+ button

Press D.ZOOM+ button, the on-screen menu will disappear, while the information on digital zoom + appears.

Press ▲▼◀▶ to move the image horizontally and vertically.

The moving is effective only when the image is larger than the size of the screen.


### D.ZOOM- button

Press D.ZOOM- button, the on-screen menu will disappear, while the information on digital zoom - appears.

To exit the “digital zoom +/-”mode, press any button except the D.ZOOM+/- .

To return to normal size, select “ SCREEN” button on the remote control to adjust screen size, or press ▲▼◀▶ button to move the image horizontally or vertically.

Remote control

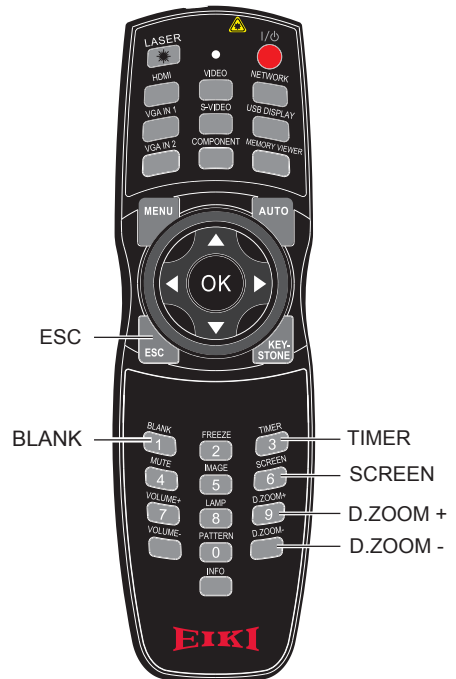

# Basic operation

## Input select

### Direct Operation


Press VGA IN 1, VGA IN 2, HDMI, Component, Video, S-video, Network, Memory Viewer or USB Display on the remote control as input source.

### Menu operation


1 Press INPUT button on the top control to display the input select menu.

2 Press ▲▼ button to select Computer 1, Computer 2, HDMI, Component, Video, S-video, Network, Memory Viewer or USB Display, then press the OK button.

### Remote control

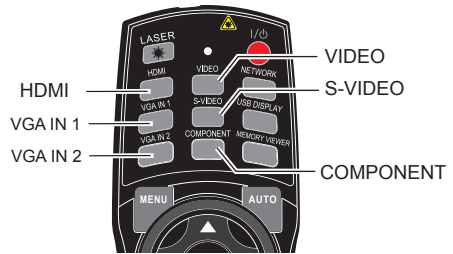

### Top control

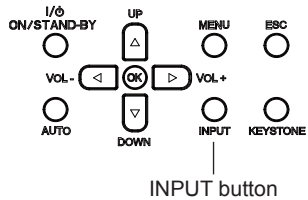

- Computer 1** When input source is from computer connected to VGA IN 1 terminal with VGA cable, please select "Computer 1".
- Computer 2** When input source is from computer connected to VGA IN 2/VGA OUT terminal with VGA cable, please select "Computer 2".


**HDMI** When input source is from equipment connected to HDMI terminal with HDMI cable, please select "HDMI".

**Component** Select it when the input source is from the video equipment connected to YCbCr terminal.

**Video** Select it when the video input signal is connected to VIDEO IN terminal.

**S-video** Select it when the video input signal is connected to S-VIDEO IN terminal.

### Input select menu

 

### ✓ Note:

- When the "Input search" function is set to "On" in the "Auto setup" function, press AUTO button, the input signal will be searched automatically.
- When VGA IN 2/VGA OUT terminal is used as VGA OUT, Computer 2 can not be selected.

## Input select

### Direct Operation


Press VGA IN 1, VGA IN 2, HDMI, Component, Video, S-video, Network, Memory Viewer or USB Display on the remote control as input source.

### Menu operation


1 Press INPUT button on the top control to display the input select menu.

2 Press ▲▼ button to select Computer 1, Computer 2, HDMI, Component, Video, S-video, Network, Memory Viewer or USB Display, then press the OK button.

### Remote control

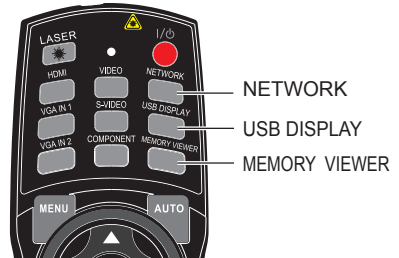

### Top control

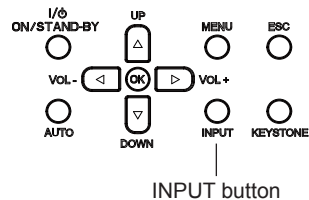

#### Network

When input source is from network connected to LAN terminal with LAN cable, please select "Network".

 
#### Memory Viewer

When input source is from device connected to USB-A terminal, please select "Memory Viewer".

#### USB Display

When input source is from device connected to USB-B terminal, please select "USB Display".

### Input select menu



### ✓Note:

- When the "Input search" function is set to "On" in the "Auto setup" function, press AUTO button, the input signal will be searched automatically.
- When signal is in "USB Display", "Memory Viewer" and "Network", FREEZE, ASPECT, IMAGE, AUTO SETUP and SCREEN function cannot work.
- Memory Viewer function, please refer to page 67~68.
- USB Display function, please refer to page 69~70.

# Display

## Auto PC adj.


Auto PC Adjustment function is provided to automatically adjust Fine sync, Horizontal, Vertical and H.Size to conform to your computer.

Menu operation

Auto PC adj.

1. Press MENU button on the remote control or top control to display screen menu. Press ▲▼ button to select "Display", then press the OK button.
2. Press ▲▼ button to select "Auto PC adj.", then press the OK button. "Please wait" will be displayed on the screen, the Auto PC adj. function will be executed.

Auto PC adj. Menu

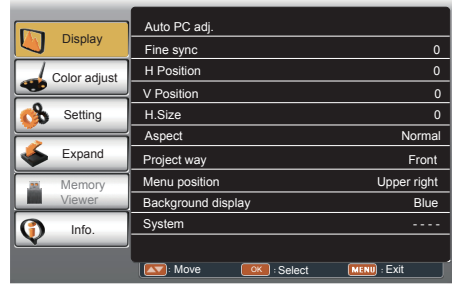

## Fine sync

You can cut off flicker from the image displayed by pressing ▲▼ to adjust the value.(from 0 to 31).

## H Position

Press ▲▼ to adjust the horizontal image position.

## V Position

Press ▲▼ to adjust the vertical image position.

## H.Size

This function is used to adjust and minimize the effect of interference caused by projection of patterns consisting of vertical stripes. The projection of the vertical striped pattern may cause cyclic patterns (noise). Adjust to minimize the amount of interference.(From -15 to +15). H.Size must be set before adjust Fine sync.

√ Note:

*The adjustment of Fine sync, H Position, V Position and H.Size is only for computer signal input.*

√ Note:

- The projector executes the Auto PC adj. automatically when the computer signals input the projector for the first time.
- Automatic adjustment may not work depending on the model of the computer and the input signal.
- The Auto PC adj. cannot be operated when 480i, 576i, 480p, 576p, 720p 1080i or 1080p is selected in the "Display" menu → "System", or when the signal is coming from the HDMI terminal.



## Aspect

You can set a screen size to fit the image while maintaining the aspect ratio of the input signal.

1. Press ▲▼ to select "Aspect" and then press the OK button.
2. Press ▲▼ button to select the item, then press the OK button.
  - Normal... Projects the image at the maximum size while maintaining the aspect ratio of the input signal.
  - Wide.... Projects the image at 16:9 aspect ratio.

## Project Way

This function is used to set the project way.


- 1 Press MENU button on the remote control to display screen menu. Press ▲▼ button to select "Display", then press the OK button.
- 2 Press▲▼ button to select "Project way", press the OK button.
- 3 Press▲▼ button to select the item you want to set, press the OK button.
  - Front ..... Projects to front screen when projector is front standing.
  - Rear ..... Projects to rear screen when projector is front standing.
  - Ceiling/Front ..... Projects to front screen when projector is in ceiling state.
  - Ceiling/Rear ..... Projects to rear screen when projector is in ceiling state.

## Menu Position


This function is used to change the position of screen menu.

- 1 Press MENU button on the remote control to display screen menu. Press ▲▼ button to select "Display", then press the OK button.
- 2 Press▲▼ button to select "Menu position", press the OK button.
- 3 Press▲▼ button to select the item you want to set, press the OK button.
  - Upper left .... Menu locates on upper left of the screen.
  - Upper right .. Menu locates on upper right of the screen.
  - Center ..... Menu locates at the center of the screen.
  - Lower left .... Menu locates on lower left of the screen.
  - Lower right .. Menu locates on lower right of the screen.


## Aspect menu

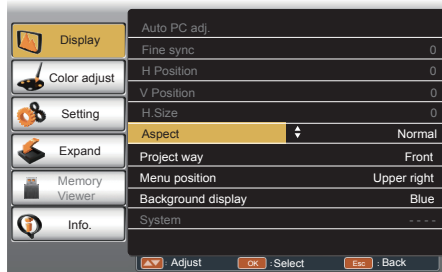

## Project way menu

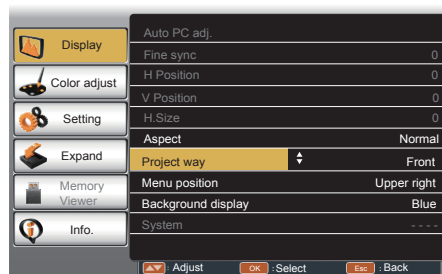

## Menu position

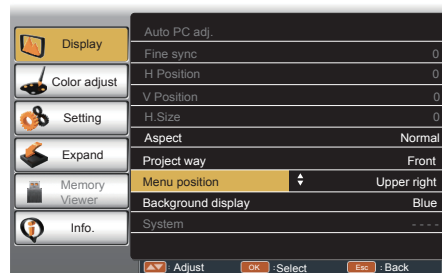

# Display

## Background Display

This function is used to select the screen background of the projector when there is no signal detected.

- 1 Press MENU button on the remote control or top control to display screen menu. Press ▲▼ button to select "Display", then press the OK button.
- 2 Press ▲▼ button to select "Background display", press the OK button.
- 3 Press ▲▼ button to select the item you want to set, press the OK button.

Black .... Select black background.  
Blue ..... Select blue background.

Background display



## System

Computer system select

The projector automatically tunes to various types of computers with its function of Multi-scan system and Auto PC Adjustment. If a computer is selected as a signal source, the projector automatically detects the signal format and tunes to project proper images without any additional setting.

One of the following messages may appear when:

- Auto** When the projector cannot recognize the connected signal conforming to the provided computer system, Auto is displayed on the System menu box and the Auto PC Adj. function works to display proper images. If the image is not projected properly, a manual adjustment is required.
- There is no signal input from computer. Check the connection between your computer and projector.

System menu



System

## Select computer system manually


The system can also be selected manually.

- 1 Press MENU button on the remote control or on top control to display the screen menu.
- Press ▲▼ button to select the "Display" icon, and press the OK button.
- 2 Press ▲▼ button to select "System" and press the OK button.
- 3 Press ▲▼ button to select your required system, and then press the OK button.

✓ **Note:**


*When HDMI is selected, System menu for computer is disable.*

## System menu

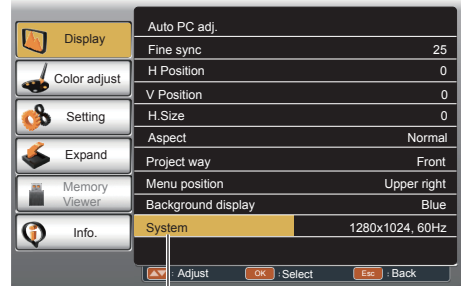

System

## System for computer signal

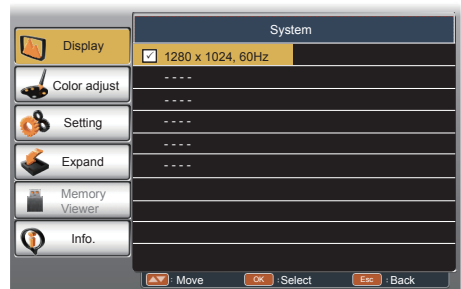

## Video or S-video


### Auto

The projector automatically detects an incoming video system, and adjusts itself to optimize its performance. When Video System is PAL-M, PAL-N or PAL60, select the system manually.

PAL/SECAM/NTSC/NTSC4.43/PAL-M/PAL-N/PAL60

If the projector cannot reproduce proper video images, select a specific broadcast signal format from PAL, SECAM, NTSC, NTSC 4.43, PAL-M, PAL-N and PAL60.

## System for Video or S-video signal

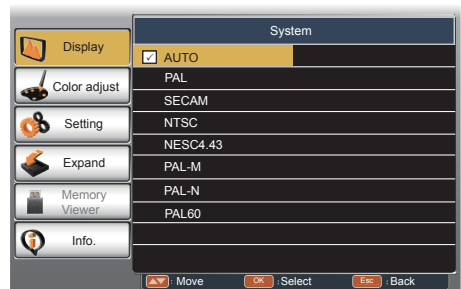

# Color adjust

Color adjust menu is used to set the image mode and adjust the image.

## Image Mode

Direct operation

Press IMAGE button on the remote control to select the image mode.

Remote control

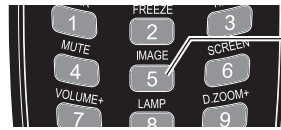


IMAGE button

Menu operation

- 1 Press MENU button on the remote control or top control to display screen menu. Press ▲▼ button to select "Color adjust" menu, then press the OK button.
- 2 Press ▲▼ button to select "Image mode", press the OK button.
- 3 Press ▲▼ button to select the item you want to set, press the OK button.

Dynamic

The light output is maximized for use in bright areas.

Standard

The picture becomes suitable for moving images in general.

Cinema

For watching movies with multiple gray scale levels.

Blackboard (Green)

For viewing the image projected on a blackboard (green) by enhancing the image quality. This is mainly effective on a green colored board instead of a black colored board.


Colorboard

For images projected onto a red, blue, yellow, or green wallpaper.

User Image

Image quality preset by the user in the Image adjustment menu.

Image mode (Computer)

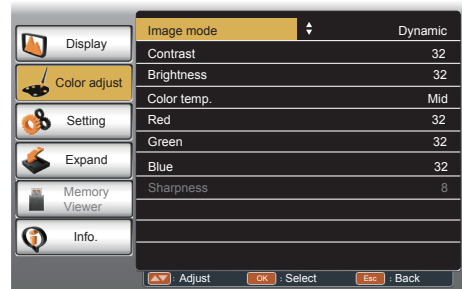

## Color adjust (Computer)

- 1 Press MENU button on the remote control or top control to display screen menu. Press ▲▼ button to select "Color adjust", then press the OK button.
- 2 Press▲▼ button to select the item you want to set, press the OK button.
- 3 Press▲▼ button to adjust the data.

### Contrast

Press ▼ to decrease the contrast and ▲ to increase it.

### Brightness

Press ▼ to decrease the brightness and ▲ to increase it.

### Color temp.

Press▲▼ to select color temperature.( Low, Mid and High )

### Red (White balance)

Press ▼ to lighten the red tone and ▲ to deepen it.

### Green (White balance)

Press ▼ to lighten the green tone and ▲ to deepen it.


### Blue (White balance)

Press ▼ to lighten the blue tone and ▲ to deepen it.

### Sharpness

Press ▼ to decrease the sharpness of the image and ▲ to increase it.

## Color adjust (Computer)

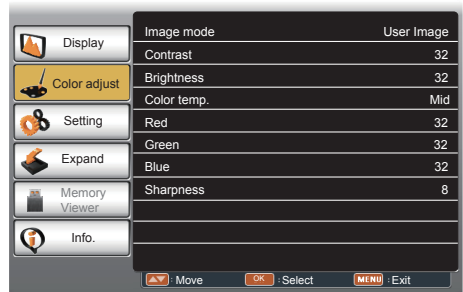

### √ Note:

- If you only adjust projector to "Video", "S-video" or "Component", "Sharpness" is disable.

## Color adjust

### Color adjust (Video,S-video,Component)

- 1 Press MENU button on the remote control or top control to display screen menu. Press ▲▼ button to select "Color adjust", then press the OK button.
- 2 Press ▲▼ button to select the item you want to set, press the OK button.
- 3 Press ▲▼ button to adjust the data.

#### Contrast

Press ▼ to decrease the contrast and ▲ to increase it.

#### Brightness

Press ▼ to decrease the brightness and ▲ to increase it.

#### Color

Press ▼ to decrease the chroma and ▲ to increase it.

#### Tint

Press ▲▼ to select the appropriate tone for the image.

#### Red (White balance)

Press ▼ to lighten the red tone and ▲ to deepen it.

#### Green (White balance)

Press ▼ to lighten the green tone and ▲ to deepen it.


#### Blue (White balance)

Press ▼ to lighten the blue tone and ▲ to deepen it.

#### Sharpness

Press ▼ to decrease the sharpness of an image and ▲ to increase it.

### Color adjust (Video,S-video, Component)

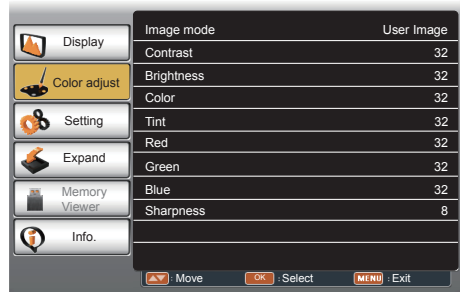


#### √ Note:

- Signal input "Video", "S-video" or "Component", "Tint" is in grey, it is disable.
- If you only adjust projector to "Video", "S-video" or "Component", "Sharpness" is disable.

The projector has "Setting" menu that allows you to set the other various functions described as follows.

- 1 Press MENU button on the remote control or top control to display screen menu. Press ▲▼ button to select "Setting", then press the OK button.
- 2 Press ▲▼ button to select the item you want to set, press the OK button.
- 3 Press ▲▼ button to adjust the item, then press the OK button.

## Setting menu

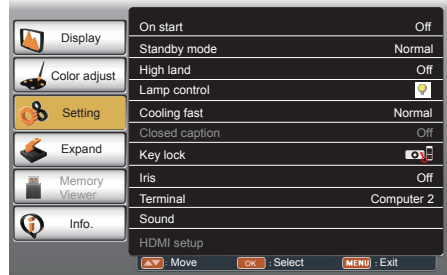


## On start

Enable the projector to be turned on automatically just by connecting the AC power cord to an outlet when this function is set to On.

- On ..... Start the projection immediately, enter countdown display.
- Off ..... Start up in the standby mode.

## On start

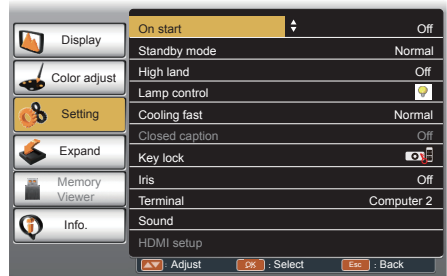


## Standby mode

This function is available when operating the projector via network.

Press ▲▼ button to select the item below:

- Eco..... Restrict some functions in the standby mode to reduce power consumption. In this case, you cannot use network functions and some RS-232C commands.
- Normal ... Do not restrict network function and serial communication function even in the standby mode.

## Standby mode

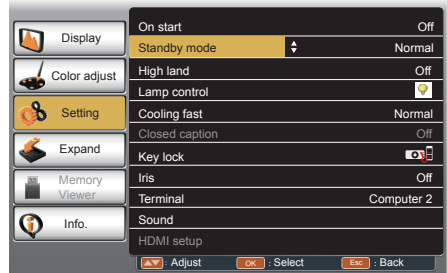

## Setting

### High land

Enable to control the fan through the Setting menu.

You can select the running speed of the fan according to the altitude of the location where the projector is installed.


Off ..... Normal speed. Set it so if the projector is operated at a lower altitude.

On ..... Faster than Off. Set it so if the projector is operated at a higher altitude because fans will produce weaker effects.

✓ **Note:**

*Please set High land "On" when operating the projector higher than 1400 meters.*

### High land

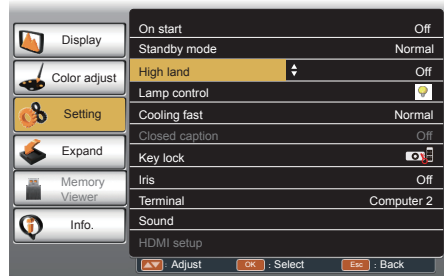


### Lamp control

Change the brightness of the screen.

Lightbulb Normal .... Normal brightness.

Lightbulb Eco ..... Lower brightness, reducing power consumption and extending the lamp life.

### Lamp control

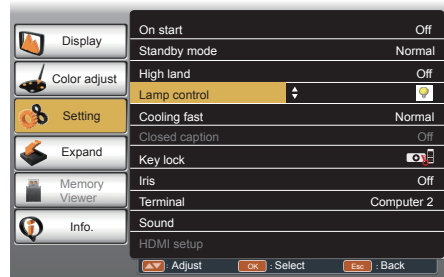

### Cooling fast


This function provides the following options in the cooling fans' operation after turning off the projector.

Normal... Normal cooling speed.

60 sec ... Faster and louder than Normal, cooling time is shorter.

0 sec ..... Enable you directly unplug the AC power cord after turning off the projector, no need waiting for cooling.

### Cooling fast

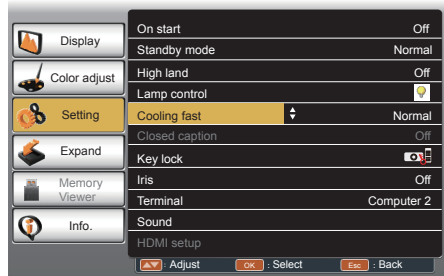

✓ **Note:**

*When it is set to "0 sec", you cannot restart the projector immediately after the power-off. The lamp remains high temperature and needs to be cooled, so it takes longer time than usual for the lamp to light up again.*




## Closed Caption

Allows the subtitle to be displayed for the audio contents or other information. If the input source contains closed caption, you can enable this function and change the channel. Press ▲▼ to select Off, CC1, CC2, CC3 or CC4.

✓Note:


- The icon of Closed Caption is displayed in grey when it is disable.
- Closed caption is disable when screen menu or Timer displayed on screen.


### Closed Caption

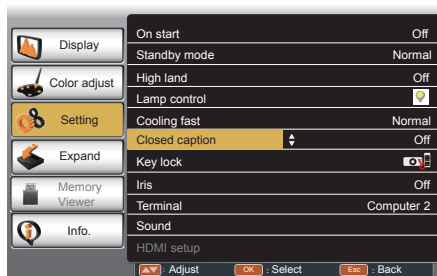


## Key lock


This function allows you to use the Key lock to set the security for the projector operation. Select "Key lock" and press the OK button, then press ▲▼ button to select the item you want.

 ..... Unlock.

 Projector ..... Lock the operation of the top control. To unlock, use the remote control.

 Remote Control ..... Lock the operation of the remote control. To unlock, use the top control.

### Key lock

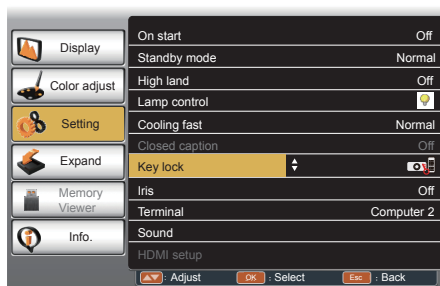

If the top control accidentally becomes locked and you do not have the remote control nearby or there is something wrong with your remote control, contact the dealer where you purchased the projector or the service center.

# Setting


## Iris

This function is used to increase the contrast of the image.

On .... Enable Iris function, increase the contrast of the image.

Off .... Disable Iris function.

### Iris

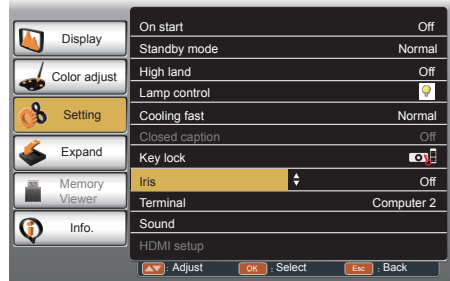

## Terminal

The VGA IN 2/VGA OUT terminal can be used as computer input or monitor output. Press ▲▼ to select input or output.

Computer 2 ..... Computer 2 input.

Monitor out ..... Monitor out.

### Terminal




## Sound

This item is used to adjust the volume.

Sound ... Press ▲ button to increase the volume, press ▼ button to decrease the volume.

Mute ..... Press ▲▼ button to switch mute function. (On/Off)

### Sound

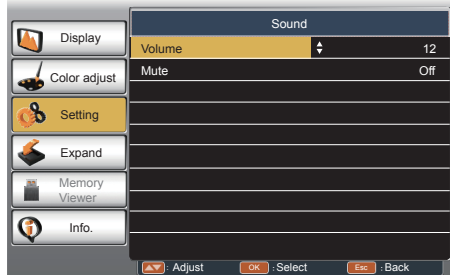

## HDMI setup

When the external equipment is connected to "HDMI" terminal, if the image is not projected properly, please switch the settings of "Image" or "Sound" in "HDMI setup" menu.

- 1 Press the MENU button to display the screen menu. Press ▲▼ button to select the "Setting" menu icon. Press the OK to enter the submenu entry.
- 2 Press ▲▼ button to select "HDMI setup" and then press the OK button.
- 3 Press ▲▼ button to select "Image" or "Sound" to adjust.
- 4 Press ▲▼ button to switch the item.

### Image

64-940 ..... Select when the HDMI terminal of an external device (such as a blu-ray player) is connected to the "HDMI" terminal.

0-1023 ..... Select when the DVI-D terminal output of an external device (such as a computer) is connected to the "HDMI" terminal via a conversion cable or similar cable. Select also when the HDMI terminal output of a computer or other device is connected to the "HDMI" terminal.



✓Note:

*The optimal setting varies depending on the output setting of the connected external device. Refer to the operation instruction of the external device regarding the output of the external device.*

### Sound

HDMI ..... Select when the HDMI cable is connected, the image and audio are transmitted, and you do not need to connect the audio signal separately.

Computer ... Select when the DVI-D terminal output of an external device (such as a computer) is connected to the "HDMI" terminal via a conversion cable or similar cable. The sound will not be transmitted, the audio signal is input to "AUDIO IN" terminal.

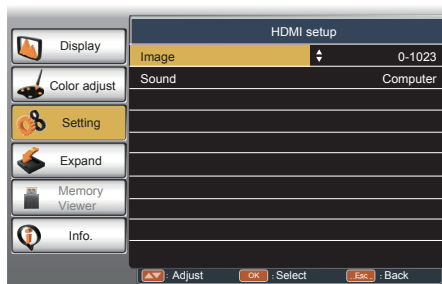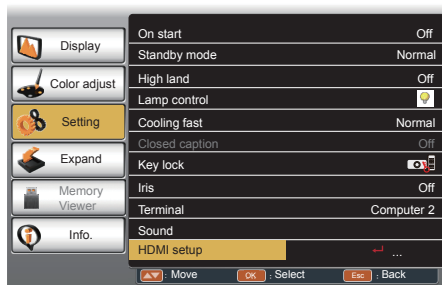

# Expand

The projector has Expand menu that allows you to set the other various expand functions described as follows.


- 1 Press MENU button on the remote control to display screen menu. Press ▲▼ button to select "Expand", then press the OK button.
- 2 Press ▲▼ button to select the item you want to set, press the OK button.
- 3 Press ▲▼ button to adjust the item, then press the OK button.

## Language

This projector provides multi-language screen menu.

You can press▲▼ button to select the language you want.

### Expand menu

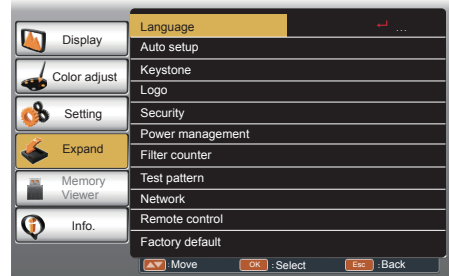

## Auto setup

Press AUTO button on the remote control to execute "Input search", "Auto PC adj." and "Auto keystone" functions.

### Input search

Allows you to automatically detect input signals. It stops when a signal is found. Press ▲▼ button to select an option below:

On ..... Enabled. This function is used to detect input signals automatically and stops when finding a signal.

Off ..... Disabled.

### Auto PC adj.

On ..... Press the AUTO button on the remote control or top control to enable Auto PC adj. function automatically.

Off ..... Cancel Auto PC adj. function.


### Auto keystone

Auto ..... When detecting the projector is tilted, correct the vertical keystone in real time.

Manual ..... When pressing KEYSTONE button on the remote control or top control, perform a vertical keystone.

Off ..... Disabled.

### Auto setup

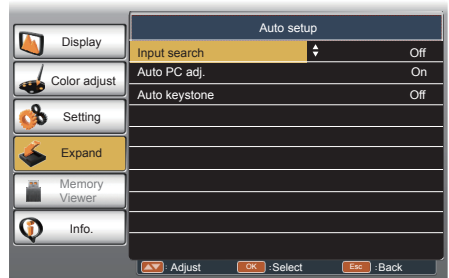

#### ✓ Note:


- "Input search", "Auto PC Adj." and "Auto Keystone" cannot be set to "Off" at the same time. At least one of them is set to "On".
- Sometimes the auto keystone maybe correct image imperfectly, manual keystone is required.
- The Auto keystone function cannot work when "Display" → "Project way" is set to "Ceiling/Front" or "Ceiling/Rear".

## Keystone

This function is used to store or reset the keystone correction when the AC power cord is unplugged.

- 1 Press MENU button on the remote control to display screen menu. Press ▲▼ button to select "Expand", then press the OK button.
- 2 Press▲▼ button to select "Keystone", press the OK button.
- 3 Press▲▼ button to select the item you want to set, press the OK button.

### Keystone menu

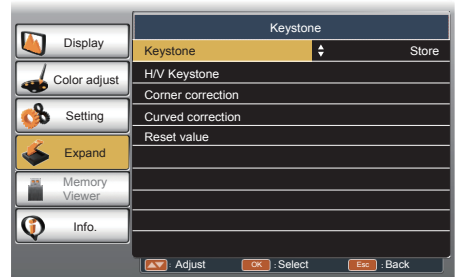

### Keystone

Sets whether or not to keep the keystone correction after turn off the projector or plug out the power cord.

 
Store ..... The keystone correction will be kept when plug out the power cord or turn off the projector.

Reset .... When "Standby mode" is set to "Eco", plug out the power cord or turn off the projector, the keystone correction will be canceled. When "Standby mode" is set to "Normal", plug out the power cord, the keystone correction will be canceled; turn off the projector, the keystone correction will be kept.


### H/V Keystone

Adjust when the horizontal or vertical trapezoid of the projected image is distorted.


Reduce the upper width with ▲ button.




Reduce the lower width with ▼ button.

 

Reduce the left width with ◀ button.

 


Reduce the right width with ▶ button.

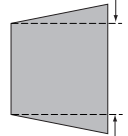

### Corner correction

Adjust when the four corners of the projected image are distorted.

Press▲▼◀▶to adjust the item.

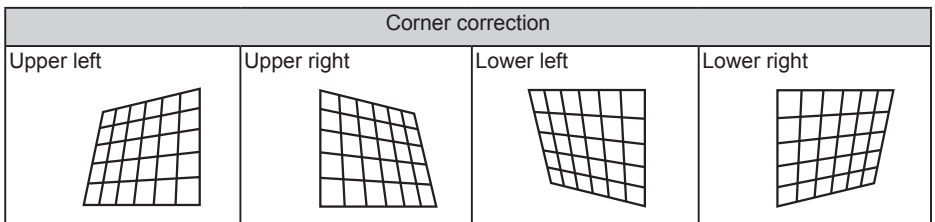









✓ Note:

- The white arrows indicate that there is no correction.
- A red arrow indicates the direction of correction.
- An arrow disappears at the maximum correction.

## Expand
        
### Curved correction

Adjust when the linearity is not uniform or the vertical and horizontal lines are distorted.  
Press ▲ ▼ ◀ ▶ to adjust the item.

Items	Operation	Adjustment		Adjustment range
Barrel correction X/Y Gain	Press the ▶ button	Adjust the right of the width		-40 ~ +40
	Press the ◀ button	Adjust the left of the width		
	Press the ▲ button	Adjust the top of the width		-40 ~ +40
	Press the ▼ button	Adjust the bottom of the width		
Barrel correction X Offset	Press the ▶ button	Adjust the right of the distortion		0 ~ +1365
	Press the ◀ button	Adjust the left of the distortion		
Barrel Correction Y Offset	Press the ▲ button	Adjust the top of the distortion		0 ~ +799
	Press the ▼ button	Adjust the bottom of the distortion		

✓ Note:

- Either "H/V Keystone", "Corner correction" or "Curved correction" setting value is valid. When the "H/V Keystone", "Corner correction" or "Curved correction" adjustment is finished, the adjusted value will be reset when you adjust the other one.
- The "Curved Correction X Offset" and the "Curved Correction Y Offset" can not be adjusted independently. After adjusting the "Curved Correction X/Y Gain" at the beginning, please adjust the "Curved Correction X Offset" and "Curved Correction Y Offset".
- Press the KEYSTONE button on the remote control when the keystone screen is displaying (it includes: H/V Keystone, Corner correction, Curved correction and Reset value), press ▲ ▼ button switch to the other adjustment screen.
- Correcting up to  $\pm 15^\circ$  for the tilt in the vertical direction and  $\pm 15^\circ$  for the tilt in the horizontal direction are available for adjustments with "Keystone". However, the image quality will degrade and it will get harder to focus with more correction. Install the projector so that the correction will be as small as possible.
- Screen size will also change when "H/V Keystone" is used to perform various adjustments.
- Aspect ratio of the image size may shift depending on the correction.

### Reset value

Return the corrected values to the factory default values.

Press ▲ ▼ to select "Reset value", then press the OK button, the state of the keystone correction is released.

## Logo

This function allows you to customize the screen logo with Logo select, Capture, Logo PIN code lock and Logo PIN code change functions.

### Logo Select

This function decides on the starting-up display from following options.

Default .... Show the factory-set logo.

User.....Show the image captured by user.

Off ..... Show the countdown display only.


### Capture

You can capture a projected image as start logo .

Select "Capture" and press the OK button.

Confirmation dialog box appears, select "Yes" to start capturing.

### Logo

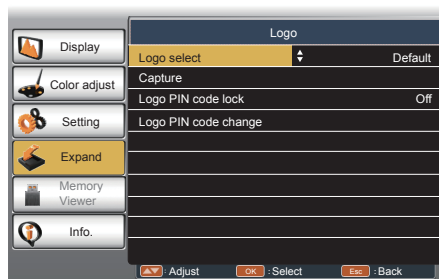

### Logo PIN code Lock

This function prevents an unauthorized person from changing the screen logo.

Off .....The screen logo can be changed freely from the Logo menu.

On .....The screen logo cannot be changed without a Logo PIN code.

If you want to change the Logo PIN code lock setting, press the OK button and the Logo PIN code dialog box appears. Enter a Logo PIN code by following the steps below.

#### PIN code reset

Press ▲▼ button to select a number, and then press the OK button to enter this number, automatically move the cursor to next box. If you fixed an incorrect number, press MENU button to reset it again.

Repeat this step to complete entering a three-digit number.

After entering the three-digit number, automatically move the cursor to "Set", and press the OK button, then you can start to operate the projector.

If you entered an incorrect PIN code, the number (\*\*\*) turn red, it will be reset automatically within one second. Enter the correct PIN code all over again.

### Logo PIN code change

You can change the Logo PIN code (three number). Press the OK button to select Logo PIN code change. Logo Pin code dialog box appears, press ▲▼ button to enter the correct code. The New Logo PIN code input dialog box appears. Set a new Logo PIN code, confirmation box appears, select Yes to set the new Logo Pin code.

Be sure to note the new Logo PIN code and keep it on hand. If you lost the number, you could no longer change the Logo PIN code setting.

### CAUTION:

**WHEN YOU HAVE CHANGED THE LOGO PIN CODE, WRITE DOWN THE NEW PIN CODE IN COLUMN OF THE LOGO PIN CODE NO. MEMO ON PAGE 88, AND KEEP IT SECURELY. SHOULD THE LOGO PIN CODE BE LOST OR FORGOTTEN, THE LOGO PIN CODE SETTING CAN NO LONGER BE CHANGED.**

## Expand

### Security

This function allows you to use the PIN code lock and PIN code change functions to set the security for the projector operation.

#### PIN code lock

This function prevents the projector from being operated by unauthorized persons and provides the following setting options for security.

Off ..... Unlocked.

On ..... Enter the PIN code every time turning on the projector. If you want to change PIN code lock setting or PIN code, you must enter the PIN code. The original PIN code is "111".

If you want to change the PIN code lock setting, press the OK button, then PIN code dialog box appears.

#### Enter PIN code

Press ▲▼ button to select a number, and then press the OK button to enter this number, automatically move the cursor to next box. If you fixed an incorrect number, press MENU button to reset it again.

Repeat this step to complete entering a three-digit number.


After entering the three-digit number, move the cursor to "Set", and press the OK button, then you can start to operate the projector.

If you entered an incorrect PIN code, the number (\*\*\*) turn red, it will be reset automatically within one second. Enter the correct PIN code all over again.

#### PIN code change

The PIN code can be changed to three-digit number. Press ▲▼ button to select PIN code change. Pin code dialog box appears, Press ▲▼ button to enter the correct code. The New PIN code input dialog box appears. Set a new PIN code.

### Security

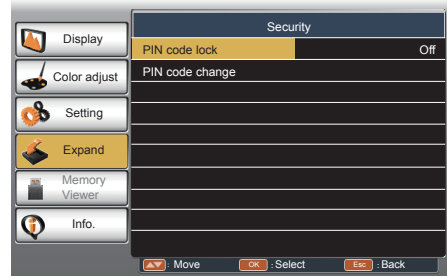


#### **CAUTION:**

**WHEN YOU HAVE CHANGED THE PIN CODE, WRITE DOWN THE NEW PIN CODE IN COLUMN OF THE PIN CODE NO. MEMO ON PAGE 88, AND KEEP IT SECURELY. SHOULD THE PIN CODE BE LOST OR FORGOTTEN, THE PIN CODE SETTING CAN NO LONGER BE CHANGED.**



## Power management

### Power management

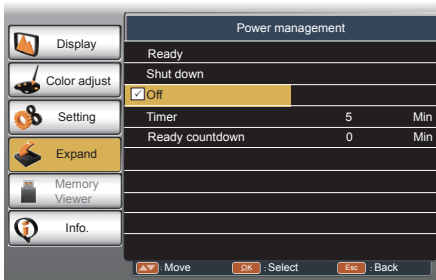

### Power management



Time left before Lamp is off.

✓ *Note:*

*Factory default: "Timer: 5 min",  
"Ready countdown: 0 min".*

For reducing power consumption as well as maintaining the lamp life, the Power management function turns off the projection lamp when the projector is not operated for a certain period. Select one of the following options:

**Ready** ..... When the lamp has been fully cooled down, the POWER indicator changes to green blinking. In this condition, the projection lamp will be turned on if the input signal is reconnected or any button on the remote control or top control is pressed.

**Shut down** ..... When the lamp has been fully cooled down, the power will be turned off.

**Off** ..... Power management function is off.

**Timer** ..... If the input signal is interrupted and no button is pressed for more than 30 seconds, the timer display with No signal appears. It starts the countdown until the lamp is turned off. Press ▲▼ button to set the Timer(1~30min.)

**Ready countdown**..Set the time that ready status transfers to standby status automatically.(0-30min. 0 Min: not transfer automatically)

In ready status, press POWER button to switch to standby status, and press any other button to turn on the projector.

# Expand



## Filter counter

This function is used to set a frequency for filter cleaning.

When the projector reached a specified time between cleanings, a Filter warning icon appears on the screen, notifying the cleaning is necessary. After cleaning the filter, be sure to select RESET and set the timer. The Filter warning icon will not turn off until the filter counter is reset.



- Filter counter ..... Display the using time of the filter.
- Timer ..... Set the time to display the warning icon.
- Filter counter reset ... Reset the filter counter.

## Filter counter

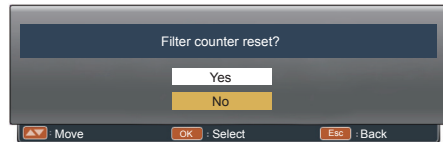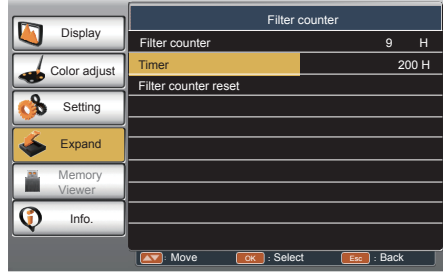

## Test Pattern

This function is used to set the internal test signal: Gray scale 1, Gray scale 2, Gray scale 3, Gray scale 4, Color bar, Red, Green, Blue, Cross hatch, White, Black and Raster gray.

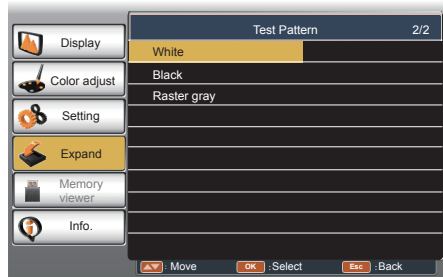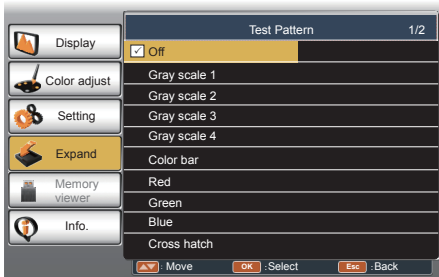

## Network

Function : PC controls projector via LAN.

Preparation:

1. Equipments: PC, projector, cables

2. Connection procedures:

Connect the projector to routers or switches of the LAN by direct or cross cable. If it fails to connect PC and projector by parallel cable, please switch to cross cable as suggested.

3. After the computer is booted and the projector is plugged in, indicator lights of LAN interface on will flash continuously.

Operation procedures:

- 1 Turn on the projector.
- 2 Obtain network address. DHCP set is displayed as On and obtain network address automatically.( If familiar with network, you can set DHCP as Off and obtain network address manually.)
- 3 Enter network settings menu.



(1) Press MENU button on the remote control to display screen menu. Press ▲▼ button to select Expand, then press the OK button.

(2) Press ▲▼ button to select Network, and then press the OK button to enter the network menu.


MAC address ... Displays the MAC address of wired network of this projector.

IP address .....Displays the IP address of wired network of this projector.

(3) When DHCP is set On, IP address, Subnet, Gateway and DNS will be obtained automatically, press the OK at "Set" to confirm the parameters.

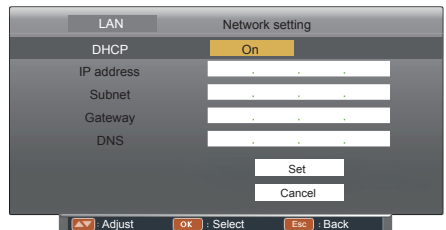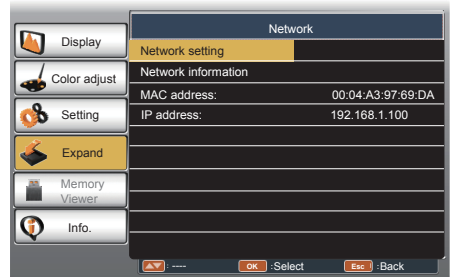

When DHCP is set Off, press the OK button to enter IP address, then press ▼ button to enter Subnet, Gateway and DNS respectively, press the OK at "Set" to confirm the parameters.

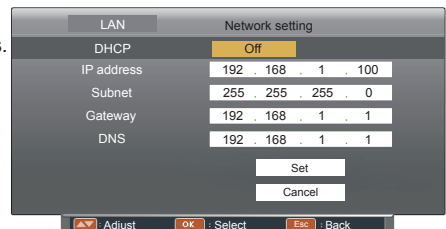

✓ Note:

See page 59 for usage of Network.

## Expand

### Remote control

#### Remote control

This switching function prevents remote control interfering when operating several projectors or video equipment at the same time.

The projector is assigned 10 different remote control codes (Code 0-9), which are default initial code (Code 0) and another 9 codes (code 1-9).

Code set on the projector and remote control should be the same. For example, when using code 7 to operate the projector, the remote control code also must be switched to Code 7.

Change the projector's code: Select "Remote control" in advanced menu.

Change the remote control code: Press the OK button and a number key (0-9) on the remote control for more than 5 seconds to switch the codes. When the light start flashing, it means code is completed.

#### RC sensor

Set RC sensor when using remote control to operate projector.



Front .....Choose the front remote control receiver.

Back .....Choose the back remote control receiver.

Both ..... Choose both front and back remote control receivers.



### Factory default

This function returns all setting values except for the User logo, PIN code lock, Logo PIN code lock, Lamp counter and Filter counter to the factory default settings.

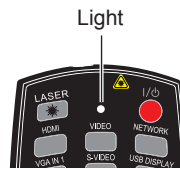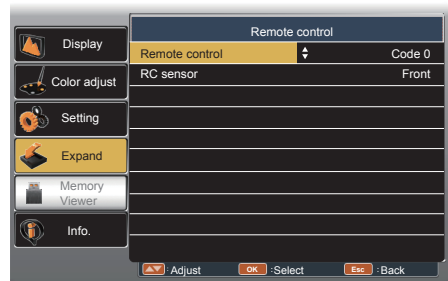

#### ✓ Note:

- If the codes set on the projector and remote control are different, it will not execute any operation. In this case, switch the remote control code to the same code as that of the projector.
- If the battery is removed for a long period of time from the remote control, the remote control code will be reset.

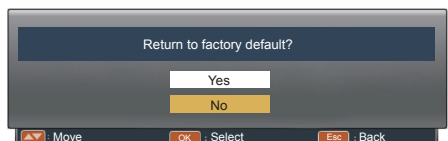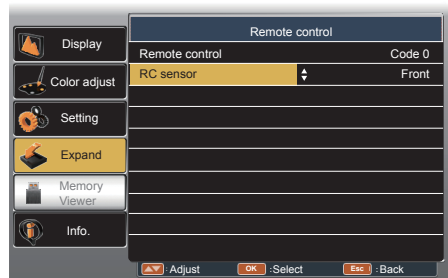




## Lamp counter

Be sure to reset the Lamp counter after the lamp is replaced. When the Lamp counter is reset, the WARNING indicator stops lighting and the Lamp replacement icon disappears.

- 1 Press MENU button on the remote control to display screen menu. Press ▲▼ button to select "Expand", then press the OK button.
- 2 Press ▲▼ button to select "Lamp counter", press the OK button.
- 3 Press ▲▼ button to select "Lamp counter reset" and then press the OK button. "Lamp replacement counter reset? " appears. Select "Yes" to continue.
- 4 Another confirmation dialog box appears, select "Yes" to reset the Lamp counter.

√ **Note:**

Do not reset the Lamp counter without implementing lamp replacement. Be sure to reset the Lamp counter only after replacing the lamp.

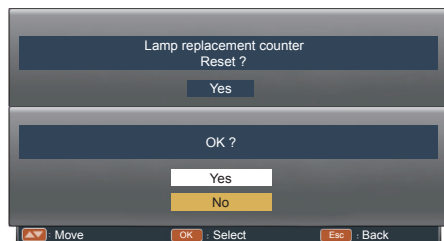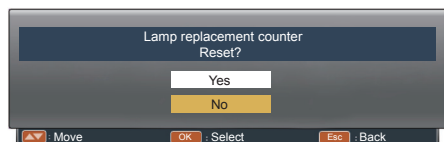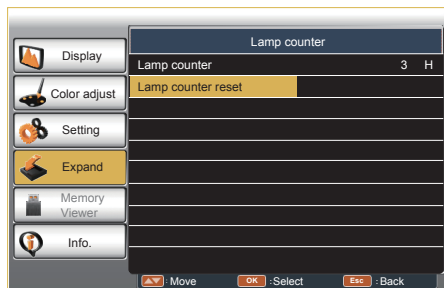

# Memory viewer

The Memory Viewer function makes it possible to project the pictures which are stored in the USB memory when the USB memory is inserted into the projector

- 1 Press MEMORY VIEWER button on the remote control.
- 2 Press MENU button on the remote control to display screen menu. Press ▲▼ button to select "Memory Viewer", then press the OK button.
- 3 Press ▲▼ button to select the item you want to set, press the OK button.
- 4 Press ▲▼ button to adjust the item, then press the OK button.

## Set Slide

Start the slide show.

## Slide transition effect

Set the slide transition effect when the slide show image is switching.

Slide down ... Switch the image from the top to the bottom.

Slide right .....Switch the image from the left to the right.

## Sort Order

Set the sort order of the slide show.

Extend Order ..... Sort files or folders in extended order.

Size Order ..... Sort files or folders in amount of data order.

Time Order ..... Sort files or folders in stored time order.

Name Order ..... Sort files or folders in name order.

Memory Viewer menu



✓ Note:

- The "Memory Viewer" menu is available when input the "Memory Viewer" signal.
- The menu except for "Set Slide" which setting have been changed is not yet effective before the "Apply" is not executed.

✓ Note:

See page 67 for Memory viewer function.

### Rotate

Set the rotate direction of image.

No Rotate ..... Rotate is disabled.

270 Degrees ..... Rotate 270 degrees in  
anti-clockwise direction.

180 Degrees ..... Rotate 180 degrees.

90 Degrees ..... Rotate 90 degrees in anti-  
clockwise direction.

### Best Fit

Set the image whether or not to fit with the  
projected screen.

On ..... Display the image to fit with the  
aspect of the projected screen.

Off ..... Display in the normal pixels of the  
image.

### Repeat

Set whether or not to play the slide show  
repeatedly.

On ..... Repeat broadcast the first file after the  
last file is broadcasted.

Off ..... Return to the thumbnail display after  
the last file is broadcasted.

### Apply

Execute the setting in slide show.

Press ▲▼ to select "Apply", then press the  
OK button, the setting of the items except for  
"Set Slide" will be effective.

# Information

The information menu is used to detect signal of projected image and running state.

## Menu operation

Press MENU button on the remote control or top control to display the screen menu. Press ▲▼ to select Info., the information menu will appear as the right picture.

The information below will display in information menu.

## Input

The selected input source is displayed.

## H-sync freq .

The horizontal frequency of the input signal is displayed in KHz or ---KHz when no signal is detected.

## V-sync freq .

The vertical frequency of the input signal is displayed in Hz or --- Hz when no signal is detected.

## Lamp status

The setting status of "Lamp control" is displayed.

## Lamp counter

The usage time of the lamp is displayed.


## Power management

The setting status of "Power management" is displayed.

## Image mode

The setting status of "Image mode" is displayed.

info. menu

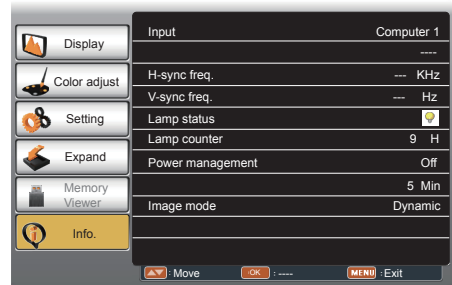



# Network Control Instructions

## LAN control

Function : PC controls projector via LAN.

Preparation:

1. Equipments: PC, projector, cables
2. Connection procedures:

Connect the projector to routers or switches of the LAN by direct or cross cable. If it fails to connect PC and projector by parallel cable, please switch to cross cable as suggested.

3. After the computer is booted and the projector is plugged in, indicator lights of LAN interface and computer interface will flash continuously.

Operation procedures:



- 1 Turn on the projector.
- 2 Obtain network address. DHCP set is displayed as on and obtain network address automatically. If familiar with network, you can set DHCP as close and obtain network address manually.
- 3 Enter network settings menu.

- (1) Press MENU button on top control or remote control to display screen menu. Press ▲▼ button to select "Expand" icon, then press the OK button

- (2) Press ▲▼ button to select "Network" setting and press the OK button enter the network setting.

- (3) Press ▲▼ button to set DHCP as on.

- (4) Press ▲▼ button to "Set" and press the OK button."Please wait..." appears.

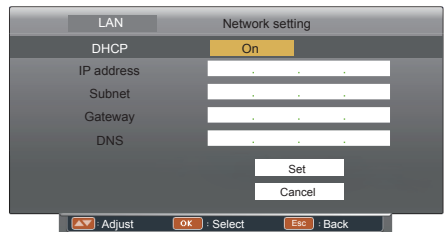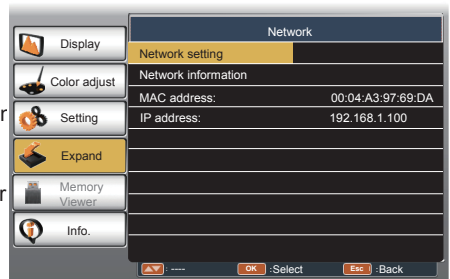

✓ Note:

- When connecting to wireless network, please check the SSID/ ESSID and IP address in "Network information".

## Network Control Instructions

---


4. Activate the Web browser in the personal computer.
5. Enter the IP address set by the projector into the URL input field of the Web browser.
6. Select "Login" to login the Network Display System page. (Both the initial name and passwords are "admin".)



✓ **Note:**

- You can click the upper right corner of the web browser screen to select the display language.
- Do not perform setting or control simultaneously by starting up multiple web browsers. Do not set or control the projector from multiple computers.
- Change the password first. (8 half-width characters). (page 61)
- If the screen for the web control is not displayed, consult your network administrator.

7. Items in Network Display System page including: "System Status", "General Setup", "Picture Setup", "Image Setup" and "Network Setup".

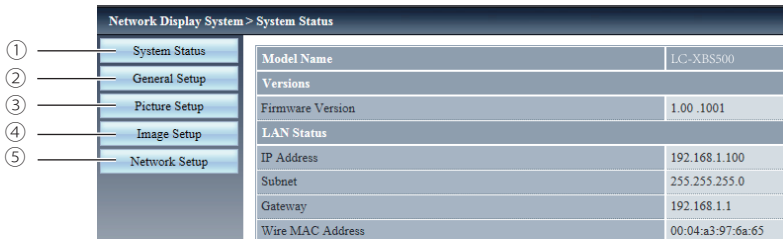

- ① **System Status**  
The "System Status" page is displayed by clicking this item.
- ② **General Setup**  
The "General Setup" page is displayed by clicking this item.
- ③ **Picture Setup**  
The "Picture Setup" page is displayed by clicking this item.
- ④ **Image Setup**  
The "Image Setup" page is displayed by clicking this item.
- ⑤ **Network Setup**  
The "Network Setup" page is displayed by clicking this item.

### "System Status" page

Display the status of the projector for the following items.

Network Display System > System Status	
System Status	Model Name: LC-XB5500
General Setup	<b>Versions</b> Firmware Version: 1.00.1001
Picture Setup	<b>LAN Status</b> IP Address: 192.168.1.100 Subnet: 255.255.255.0 Gateway: 192.168.1.1 Wire MAC Address: 00:04:a3:97:6a:65
Image Setup	
Network Setup	

- |   |  |
|---|--|
| <p>① Model Name<br/>Displays the model No. of the projector.</p> <p>② Versions<br/>Displays the version of the firmware of the projector.</p> | <p>③ LAN Status<br/>Displays the connection status of the LAN.</p> |
|---|--|

### "General Setup" page


Change Password for Webpage is displayed.

Network Display System > General Setup	
System Status	Change Password for Webpage
General Setup	Enter Old password: <input type="text"/>
Picture Setup	Enter New password: <input type="text"/>
Image Setup	Confirm New password: <input type="text"/> <input type="button" value="Apply"/>
Network Setup	<b>Power &amp; Source</b> Power: <input checked="" type="radio"/> On <input type="radio"/> Off Source Select: Computer 1 <input checked="" type="checkbox"/>

- |   |   |
|---|---|
| <p>① Enter Old password<br/>Enters the configured password.</p> <p>② Enter New password<br/>Enters the new password.</p> <p>③ Confirm New password<br/>Enters the wanted new password again for confirmation.</p> | <p>④ Apply<br/>Updates th settings.</p> <p>⑤ Power<br/>Switches on/off the power of the projector.</p> <p>⑥ Source Select<br/>Switches the input source of the projector.</p> |
|---|---|

# Network Control Instructions

## "Picture Setup" page

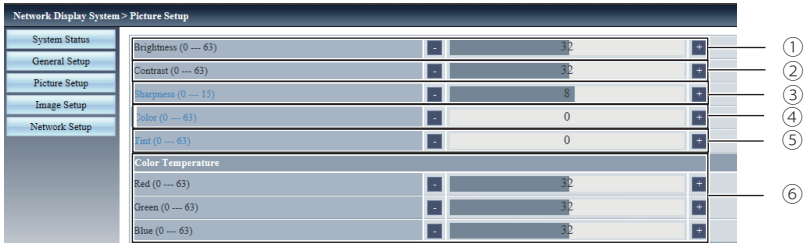

- ① Brightness  
Adjusts the brightness of the projected image.
- ② Contrast  
Adjusts the contrast of the projected image.
- ③ Sharpness  
Adjusts the sharpness of the projected image.
- ④ Color  
Adjusts the color saturation of the projected image.
- ⑤ Tint  
Adjusts the skin tone of the projected image.
- ⑥ Color Temperature  
Adjusts the color temperature of the projected image.


## "Image Setup" page

 Aspect	Normal	
Fine sync (0 --- 31)	0	①
H Position	0	②
V Position	0	③
H.Size (-15 --- 15)	0	④
Freeze	<input type="radio"/> On <input checked="" type="radio"/> Off	⑤
⑥		
V Keystone (-60 --- 60)	0	⑦
H Keystone (-30 --- 30)	0	⑧
Curved correction XGain (-40 --- 40)	0	⑨
Curved correction YGain (-40 --- 40)	0	⑩
Curved correction XOffset_x (0 --- 1279)	640	⑪
Curved correction XOffset_y (0 --- 799)	400	
Curved correction YOffset_x (0 --- 1279)	640	
Curved correction YOffset_y (0 --- 799)	400	
Corner correction TopLeft_x (0 --- 1279)	0	
Corner correction TopLeft_y (0 --- 799)	0	
Corner correction TopRight_x (0 --- 1279)	1279	
Corner correction TopRight_y (0 --- 799)	0	
Corner correction BottomLeft_x (0 --- 1279)	0	
Corner correction BottomLeft_y (0 --- 799)	799	
Corner correction BottomRight_x (0 --- 1279)	1279	
Corner correction BottomRight_y (0 --- 799)	799	

- ① Aspect  
Switches the aspect of the projected image.
- ② Fine sync  
Adjusts the fine sync of the projected image.
- ③ H Positon  
Adjusts the horizontal position of the projected image.
- ④ V Position  
Adjusts the vertical position of the projected image.
- ⑤ H.Size  
Adjusts the total number of dots of the projected.
- ⑥ Freeze  
Switches the freeze function between on and off.
- ⑦ Auto PC adj.  
Executes the Auto PC adj. function.
- ⑧ V Keystone  
Corrects the keystone in vertical direction.
- ⑨ H Keystone  
Corrects the keystone in horizontal direction.
- ⑩ Curved Correction  
Corrects the pincushion or barrel of the projected image.
- ⑪ Corner correction  
Corrects the four corners of the projected image.

# Network Control Instructions

"Network Setup" page



① LAN Setup

Select [Obtain an IP address automatically] if you want to enable the DHCP client.

IP Address

Enter the IP address when not using a DHCP server.

Subnet

Enter the subnet mask when not using a DHCP server.

Gateway

Enter the default gateway address when not using a DHCP server.

DNS


Enter the DNS server when not using a DHCP server.


② Apply


Updates the settings.

8. PwPresenter software: when "Network" is selected in Source Select, you can project the current computer images via network.

Input the IP address of the projector in webpage to enter the Network Display System, click "Download" to download the pwPresenter software according to your operation system.

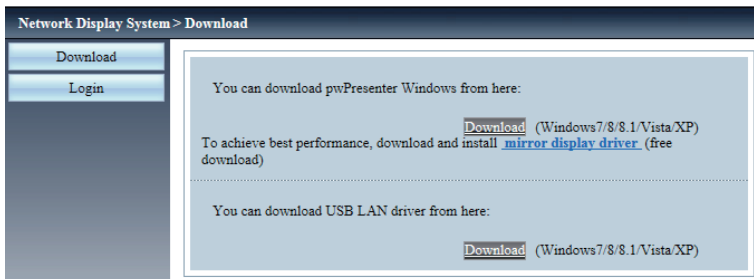

9. Click  icon to access the pwPresenter software.

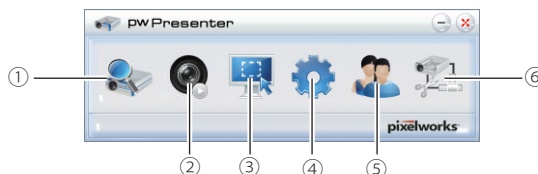



## Network Control Instructions

### ① Search for projector display

Click to enter Search, select the projector and connect it. Please setting the same IP address of the projector in pwPresenter software, (such as: 192.168.1.100). Both the initial name and passwords are "admin".

### ✓Note:

- Before use pwPresenter software to search, you need change Source Select to "Network".

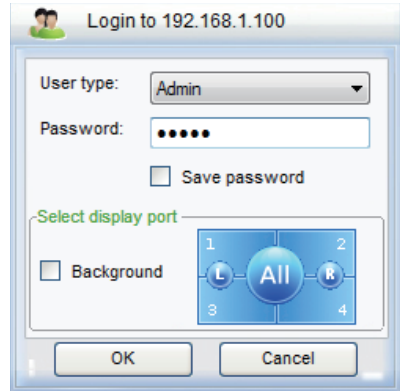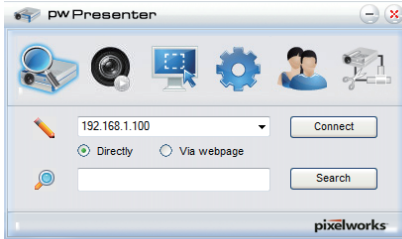

### ② Play/Pause

Play or pause the selected image.



### ③ Choose capture mode

Choose a capture mode from "FullScreen", "FixedSize" or "Alterable."

### ④ Parameters Setting


Basic Setting: setting language,region of capture image etc.,

Advanced Setting: setting image quality, network port etc.,

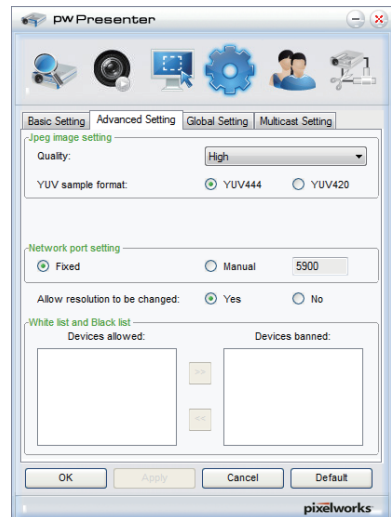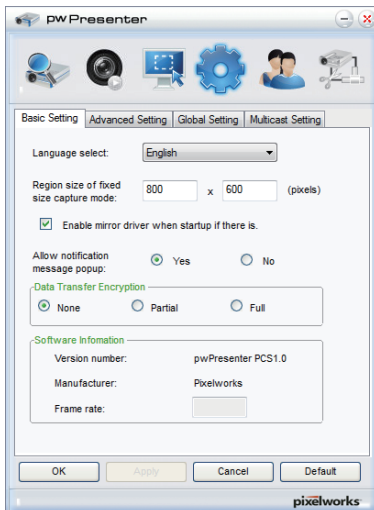


## Network Control Instructions



Global Setting: setting remote control, capture by audio or screen ect.,

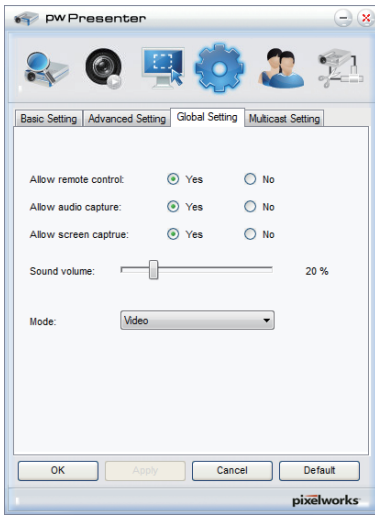

Multicast Setting: setting Sound volume, Bandwidth and Capture rate ect.,

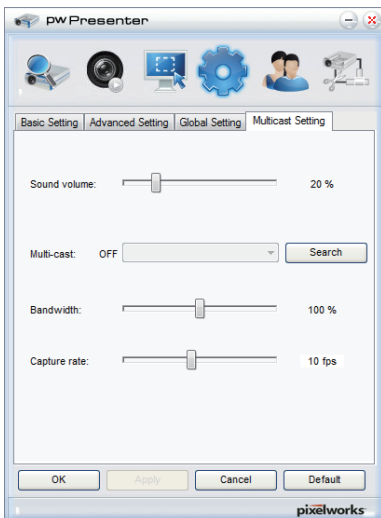

- ⑤ Network Display Management  
Setting device and password management.

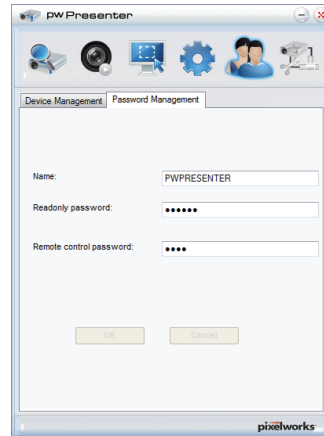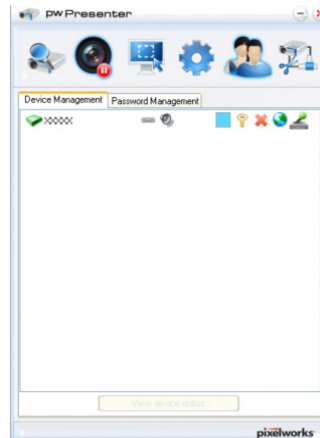

- ⑥ Disconnect the projector.



### Memory Viewer function

The Memory Viewer function is used to project the pictures which are stored in the USB memory when the USB memory is inserted into USB A(VIEWER) terminal of the projector.

Memory Viewer function supports the following image files.

	Extension	Format	Description
Picture	jpg/jpeg	Baseline coding 24 bits	The maximum resolution : 10 000 x 10 000
		Progressive RGB 24 bits	The maximum resolution : resolution of panel
	bmp	Palettle-based1, 4, 8 bits, RGB 24, 32 bits	The maximum resolution : resolution of panel
	png	True color 24 bits/48 bits	The maximum resolution : resolution of panel
	tiff		The maximum resolution : 800 x 600
pdf		-	

### Display the Memory Viewer screen

1. Press the MEMORY VIEWER button on the remote control or INPUT button on the top control to select the input source as Memory Viewer.
2. Insert the USB memory into the USB-A terminal of the projector directly, the standby screen of "please press RC ENTER" appears when the USB memory icon is displayed on the screen.
3. Press the OK button on the remote control, the root directory of the USB memory will appear in thumbnail on the screen.

### Play the pictures

It will display a picture when play the picture manually every time.

- 1 Press ▲▼◀▶ to select a file.
- 2 Press the OK button, the picture will display on the full screen.
- 3 Press ▶ to switch to the next picture, press ◀ to return to the previous picture.
- 4 Press the OK button on the remote control.

### Executing the slide

All pictures in the same folder will play automatically when "Slide Transition Effect" of "Memory Viewer" menu are set to the special setting.

- 1 Press ▲▼◀▶ to select a file.
- 2 Press the "MENU" button to select the "Memory Viewer" → "Set Slide".
- 3 Press the OK button.
  - The picture will display on the full screen.
  - Press the OK button to return to the thumbnail screen.

## Using useful functions

### Play the video

Playing the video file.

press ▲▼◀▶ to select a video file and press the OK button to display the video on the full screen.



	Exit the video playing, and return to the thumbnail screen.
	Paused or go on playing video.
	Forwards or backwards the video(skip 10sec).
	Forwards or backwards the video at double speed.(skip 60 sec)
	The video can be played repeatedly.
	Show play time and total time.

### Play the PDF

Playing the PDF file.

press ▲▼◀▶ to select a PDF file and press the OK button, playing the PDF on the full screen.



	Displays the previous or next page.
	The page number increases or decreases by 5 pages.
	The page number increases or decreases by 1 page.
	Jumps to page number directly.
	Switches PDF file between full screen display or whole page display.
	Switches the display size on 3 levels of magnification. Press ▲▼ on the remote control to move the display screen up and down.
	Remove the display screen up, down, left and right by ▲▼◀▶ button on the remote control.
	Exit the PDF file, and return to the thumbnail screen.

### Termination of the Memory Viewer

1. Press ▲▼◀▶ to the thumbnail which is displayed on the upper left corner.
2. Press the OK button on the remote control to return to the standby screen of "please press RC ENTER".
3. Remove the USB memory directly.

### USB Display function

The USB Display function is used to project the image from the computer which is connected to USB-B(DISPLAY) terminal of the projector by a USB converting cable.


#### ■ When using Windows

Windows operation environment

OS	Windows Vista 32 bit, Windows 7 32/64 bit, Windows 8 32/64 bit
CPU	Intel Core 2 Duo 2.0 GHz or faster, the compatible processor
Amount of memory	256 MB or more (Recommended : 512 MB or more)
Hard-disk free space	20 MB or more
Display	Resolution 640 x 480 or more, 1 600 x 1 200 or less

- There is no guarantee for all computers that meet the above conditions will operate properly.

#### Projecting the USB Display

1. Connect the USB-B terminal of the projector to a computer with a USB converting cable.
2. Press the USB DISPLAY button on the remote control or switch the input source to USB Display.
  - Press the INPUT button on the top control and select the input source in the Input menu.
  - The startup screen will be displayed automatically due to the driver which is built-in the projector, and executes the installation according to the instructions of the screen. The displaying of the auto installation screen depends on the setting of computer. At this time, please select "Run autorun.exe". Please double-click "autorun.exe" in the folder of the USB Display when the automatical startup is disabled.
  - The image on the computer screen is projected.
3. Click the driver icon  in the task bar of computer and select one item in Pop-up menu.
  - Pop-up menu is only displayed in English.
  - The item which is displayed in gray is unavailable.

Active audio/ Disable audio	Set whether to output the audio from the computer.
Play video/ Pause video	Switch between play and pause the image.
Start/Stop	Set whether to display the image from the computer.
Exit	Exit USB Display.

✓ Note:

- The driver is not installed in your computer, and it will be removed from the computer when disconnecting the USB cable.
- It will take a while when you want to project the computer screen.
- Connect a USB cable directly to the USB connector of a computer. It will not work when connecting through a USB hub.

#### Termination of the USB display

When terminate the USB display, remove the USB cable directly. There is no need to follow "Remove hardware safely" when a USB cable is disconnected.

## Using useful functions

---


### ■ When using Mac OS

Mac OS operating environment

OS	Mac OS X 10.5, 10.6, 10.7
CPU	Power PC G4 1GHz or faster
Amount of memory	512 MB or more
Hard-disk free space	20 MB or more
Display	Resolution 640 x 480 or more, 1 600 x 1 200 or less

- There is no guarantee for all computers that meet the above conditions will operate properly.

### Projecting the USB Display

1. Connect the USB-B terminal of the projector to a computer with a USB converting cable.
2. Press the USB DISPLAY button on the remote control or switch the input source to USB Display.
  - Press the INPUT button on the top control and select the input source in the Input menu.
  - The image on the computer screen is projected.
3. Double-click "Monitor.app" in the virtual disk that has been mounted.
4. Right-click the driver icon  in the dock of computer and select one item in Pop-up menu.
  - Pop-up menu is only displayed in English.
  - The item which is displayed in gray is unavailable.

Active audio/ Disable audio	Set whether to output the audio from the computer.
Play video/ Pause video	Switch between playing and pausing the image.
Start/Stop	Set whether to display the image from the computer.
Quit	Terminate the USB Display.

✓ Note:

- It will take a while when you want to project the computer screen.
- Connect a USB cable directly to the USB connector of a computer. It will not work when connecting through a USB hub.

### Termination of the USB display

When terminate the USB display, remove the USB cable directly.

### WARNING indicator

The WARNING indicator shows the state of the function which protects the projector. Check the state of the WARNING indicator to take proper maintenance.

#### The projector is shut down and the WARNING indicator is flashing red.

When the temperature inside the projector exceeds the normal temperature, the projector is automatically shut down to protect internal components. The WARNING indicator is blinking while the projector is being cooled down. When the projector has cooled down enough (to its normal operating temperature), it can be turned on again by pressing the POWER button.

✓ *Note:*

*The WARNING indicator continues to blink even after the temperature inside the projector returns to normal. When the projector is turned on again, the WARNING indicator stops blinking.*

Check the items below:

- Did you provide appropriate space for the projector to be ventilated?  
Check the installing condition to see if ventilation slots are not blocked.
- Has the projector been installed near the duct or vent of an airconditioning?  
Move the installation of the projector away from the duct or vent.
- Are the air filters clean? Clean the air filters periodically.

#### The projector is shut down and the WARNING indicator lights red.

When the projector detects an abnormal condition, it is automatically shut down to protect the internal components and the WARNING indicator lights red. In this case, unplug the AC power cord and plug it, and then turn on the projector once again to verify operation. If the projector cannot be turned on and the WARNING indicator lights red, unplug the AC power cord and contact the service station for servicing and maintenance.




#### Caution

Do not leave the projector with the AC power cord connected under an abnormal condition. It may result in fire or electric shock.

WARNING indicator



WARNING indicator

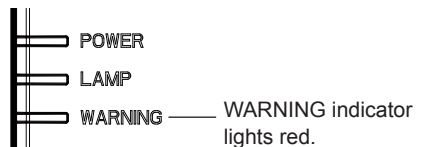


## Maintenance and cleaning

---

### Cleaning the filter

The air filter prevents dust from accumulating on the surface of the optical elements inside the projector. Should the air filter become clogged with dust particles, it will reduce cooling fans' effectiveness and may result in a buildup of internal heat and adversely affects the life of the projector. If the Filter warning icon appears on the screen, the air filter should be cleaned immediately. Clean the air filter following the steps below.

- 1 Turn off the projector, and unplug the AC power cord from the AC outlet.
- 2 Remove the air filter.
- 3 Gently clean the filter with a brush.
- 4 Reinstall the filter into the projector properly.

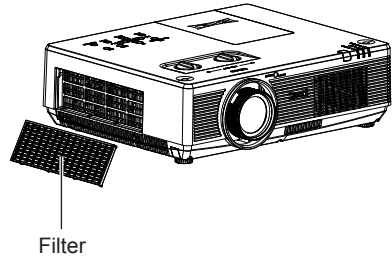

#### Caution

Do not operate the projector with the air filter removed. Dust may accumulate on the optical elements, degrading picture quality.

Do not put any small objects into the air intake vents. Otherwise, it may result in malfunction of the projector.

#### Recommendation

We recommend avoiding dusty/smoky environments when you operate the projector. Usage in these environments may cause poor image quality.

When you use the projector under dusty or smoky conditions, dust may accumulate on the lens, LCD panels, or optical elements inside the projector. When the symptoms above are noticed, contact your authorized dealer or service station for proper cleaning.

### Filter counter reset

Be sure to reset the filter counter after cleaning or replacing the filter.


1. Press Menu on the remote control to display the screen menu. Press ▲▼ to select "Expand", then press the OK button.
2. Press ▲▼ to select "Filter counter", and then press the OK button. Press ▲▼ to select "Filter counter reset" and press the OK button, "Filter counter Reset?" appears on screen, select "Yes" to continue.
3. When another dialog box pops up, select "Yes" to reset the filter.

### Clean the projector lens

Unplug the AC power cord before cleaning.

Gently wipe the projection lens with a cleaning cloth that contains non-abrasive camera lens cleaner, or use a lens cleaning paper or commercially available air blower to clean the lens.

Avoid using an excessive amount of cleaner. Abrasive cleaners, solvents, or other harsh chemicals might scratch the surface of lens.

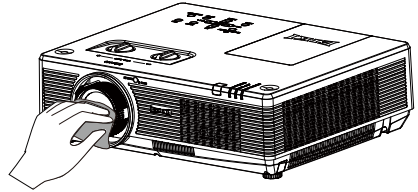


### Clean the cabinet

Unplug the AC power cord before cleaning.

Gently wipe the projector surface with a soft dry cleaning cloth. When the cabinet is heavily soiled, use a small amount of mild detergent and finish with a soft dry cleaning cloth. Avoid using an excessive amount of cleaner. Abrasive cleaners, solvents, or other harsh chemicals might scratch the surface of the cabinet.

When the projector is not in use, put the projector in a pouch to protect it from dust and scratches.

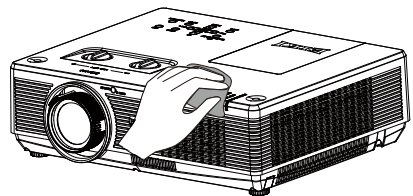


## Maintenance and cleaning

### Replace the lamp

When the projection lamp of the projector reaches its end of life, the Lamp replacement icon appears on the screen and LAMP indicator flashes yellow. Replace the lamp with a new one of the same type promptly. The timing when the LAMP indicator should light is depending on the lamp mode.

Indicator

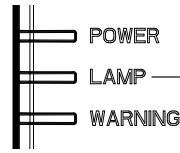

When the projection lamp reaches its end of life, LAMP indicator flashes yellow.

Lamp replacement icon

Lamp replacement



#### CAUTION

As temperature inside the projector is high, you should cool the projector for at least 45 minutes before you open the lamp cover.



#### CAUTION

When the lamp isn't illuminated, it may indicate that the lamp has been damaged. When you replace the lamp in a projector installed on the ceiling, you should stand beside the lamp cover other than under it; for the broken glass may fall down to hurt you. To do that, remove the lamp cover gently to avoid being hurt by falling debris. If debris drops into your eyes or mouth, you should see the doctor immediately.




#### CAUTION

For the sake of safety, only use the lamp of the same model. Never drop the lamp onto the ground nor touch the glass bulb! The glass can shatter and hurt.

### To replace the lamp, follow the steps below:

1. Power off the projector and unplug the power cord. Then let the projector cool for at least 45 minutes.
2. Loosen the screw on the lamp cover to remove the cover.
3. Make sure the lamp is well protected and remove three screws. Hold the handle to take out the lamp.
4. Install a new lamp with the same model and tighten the three screws. Make sure the installation is correct. Put lamp cover in place and then tighten the screw.
5. Plug the AC power cord and power on the projector.

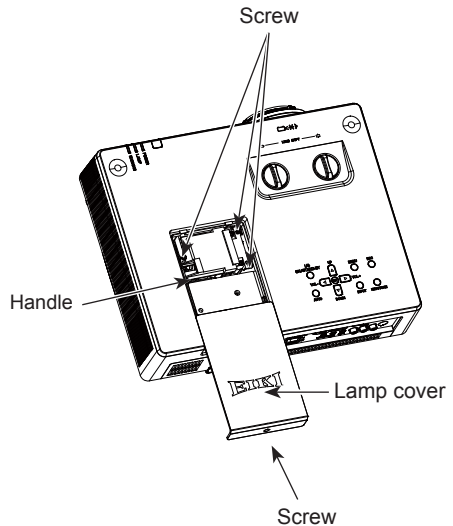



### **ORDER REPLACEMENT LAMP**

Replacement lamp can be ordered through your dealer. When ordering a projection lamp, give the following information to the dealer.

**Replacement Lamp Model No.: 23040049**



### **LAMP HANDLING PRECAUTIONS**

This projector uses a high-pressure lamp which must be handled carefully and properly. Improper handling may result in accidents, injury, or create a fire hazard.

- Lamp life may differ from lamp to lamp and according to the environment of use. There is no guarantee of the same life for each lamp. Some lamps may fail or terminate their life in a shorter period of time than other similar lamps.
- If the projector indicates that the lamp should be replaced, i.e., if the WARNING indicator lights up, replace the lamp with a new one IMMEDIATELY after the projector has cooled down. (Follow carefully the instructions in the Lamp Replacement section of this manual.) Continuous use of the lamp with the WARNING indicator lighted may increase the risk of lamp explosion.
- A Lamp may explode as a result of vibration, shock or degradation as a result of hours of use as its lifetime draws to an end. Risk of explosion may differ according to the environment or conditions in which the projector and lamp are being used.

### **IF A LAMP EXPLODES, THE FOLLOWING SAFETY PRECAUTIONS SHOULD BE TAKEN .**

If a lamp explodes, disconnect the projector's AC plug from the AC outlet immediately. Contact an authorized service station for a checkup of the unit and replacement of the lamp. Additionally, check carefully to ensure that there are no broken shards or pieces of glass around the projector or coming out from the cooling air circulation holes. Any broken shards found should be cleaned up carefully. No one should check the inside of the projector except those who are authorized trained technicians and who are familiar with projector service. Inappropriate attempts to service the unit by anyone, especially those who are not appropriately trained to do so, may result in an accident or injury caused by pieces of broken glass.

# Appendix

## Troubleshooting

Before calling your dealer or service center for assistance, check the items below once again.

- Make sure you have properly connected the projector to peripheral equipment.
- Make sure all equipment is connected to the AC outlet and the power is turned on.
- If the projector does not project an image when it is connected to a PC, restart the PC.

<b>Problems</b>	<b>- Solutions</b>
No power	<ul style="list-style-type: none"><li>- Plug the power cord of the projector into the AC power outlet.</li><li>- Check whether the POWER indicator lights red.</li><li>- Only when the POWER indicator lights red you can power on the projector again.</li><li>- Check the WARNING indicator. If it is blinking red, the projector can not be powered on. (Page 71)</li><li>- Check the projection lamp. (Page 74)</li><li>- Unlock the "Key lock" function. (Page 43)</li></ul>
No initial displaying	<ul style="list-style-type: none"><li>- Make sure that Logo function is not set to "Off". (Page 23, Page 49)</li></ul>
Initial displaying is inconsistent with factory defaults	<ul style="list-style-type: none"><li>- Make sure that Logo function is not set to "Off" or "User". (Page 49)</li></ul>
Input signals are automatically switched (can't be switched)	<ul style="list-style-type: none"><li>- Properly adjust the Input search function.</li></ul>
Ambiguous images	<ul style="list-style-type: none"><li>- Adjust the focus.</li><li>- Set a more proper projection distance.</li><li>- Check whether the lens needs to be cleaned.</li><li>- When moved from an environment with low temperature to the one with higher temperature, water will be condensed on the lens. If so, you have to wait till the condensed water disappears.</li></ul>
Image turns over leftward/rightward Image turns over upward/downward	<ul style="list-style-type: none"><li>- Check the function of "Ceiling/rear". (Page 35)</li><li>- Check the function of "Ceiling".</li></ul>
Image not bright enough	<ul style="list-style-type: none"><li>- Check whether the contrast or brightness is adjusted correctly. (Page 39-40)</li><li>- Check whether the Image mode is properly selected. (Page 38)</li><li>- Check the function of lamp brightness adjusting. (Page 42)</li><li>- Check the LAMP indicator. If the indicator lights yellow, it means the service life of the lamp is over. You should replace the lamp with a new one of the same model immediately.</li></ul>
No image	<ul style="list-style-type: none"><li>- Check the connection between Computer or video equipment and the projector.</li><li>- Check whether the signal from Computer is correct. If connected to certain laptops, the settings of their video adapters need to be changed. You can refer to the operating instructions of the Computer for such modification.</li><li>- Images can show up only about 20 seconds after the projector is powered on.</li><li>- Check the input signal, color system, video system or Computer system mode.</li><li>- Make sure that the temperature doesn't exceed the permitted operating temperature(41°F-104°F [5°C - 40°C] ).</li><li>- If BLANK function is enabled, no image will appear on the screen. You can then press the BLANK button or other button on the remote control.</li></ul>

No Sound	<ul style="list-style-type: none"> <li>- Check the audio cable connection from audio input source.</li> <li>- Adjust the audio source.</li> <li>- Press the VOLUME + button.</li> <li>- Press the Mute button.</li> <li>- When the AUDIO OUT is plugged in, the projector's built-in speaker is not available.</li> <li>- Is the image projected? The sound can only be heard when the image is projected.</li> </ul>
The color is abnormal	<ul style="list-style-type: none"> <li>- Check the input signal, color system, video system or computer system mode.</li> <li>- Make sure that Blackboard is not selected in Image Mode menu.</li> </ul>
Auto PC adj. function does not work.	Check the Input signal. Auto PC adj. function can not work when 480p, 576p, 720p, 480i, 576i, 1080i or 1080p is selected.
The Settings cannot be saved after turning off the projector.	Make sure you have selected "store" after you changed the settings. Some settings can't be saved if "store" is not selected.
Power management function does not work.	Power management function can not work while Freeze or Blank function is running.
Logo function does not work.	Check connections and input source.
Auto setup function does not work.	<ul style="list-style-type: none"> <li>- Make sure no function in the Auto setup menu is set to "Off".</li> <li>- Make sure "On" is not chosen in the Ceiling function.</li> </ul>
The image is distorted or disappears.	Check and adjust "Screen" menu.
PIN code dialog box appears at start-up	- PIN code lock is being set.
The remote control does not work.	<ul style="list-style-type: none"> <li>- Check the batteries.</li> <li>- Make sure no obstruction is between the projector and the remote control.</li> <li>- Make sure you are not too far from the projector when using the remote control. Maximum operating range is 5 m.</li> <li>- Make sure the code of the remote control is conformed to that of the projector.</li> <li>- Unlock the Key lock function in the Setting menu for the remote control.</li> </ul>
Indicators light or flash.	Refer to Indicators and projector condition to check the status of the projector.
Exclamatory mark appears on the screen.	- Your operation is invalid. Operate correctly.
top control cannot be operated.	- Unlock the Key lock in Setting -> Key lock.
Unable to unlock the Logo PIN code, Key lock or PIN code lock.	- Contact the dealer or the service center.

### Warning:

High voltages are used to operate this projector. Do not attempt to open the cabinet.

If problems still persist after following all operating instructions, contact the dealer where you purchased the projector or the service center. Specify the model number and explain about the problem. We will advise you how to obtain service.

## Appendix

### Menu Tree

Main menu	Sub menu	Setting	Note
Display	Auto PC adj.		
	Fine sync	0 to 31	
	H Position	-5 to +5	
	V Position	-5 to +5	
	H.Size	-15 to +15	In different signal, H.Size range will different?
	Aspect	Normal Wide	
	Project way	Front Rear Ceiling/Front Ceiling/Rear	
	Menu positon	Upper left Upper right Center Lower left Lower right	
	Background display	Black Blue	
	System		Auto 1080p 1080i 1035i 720p 575p 575i 480p 480i
Auto PAL SECAM NTSC NTSC4.43 PAL-M PAL-N PAL60			S-video Input Video Input
Color adjust	Image mode	Dynamic Standard Cinema Blackboard(Green) Colorboard User Image	

Main menu	Sub menu	Setting	Note	
Color adjust	Contrast	0-63	Computer input	
	Brightness	0-63		
	Color temp.	High/Mid/Low		
	Red	0-63		
	Green	0-63		
	Blue	0-63		
	Sharpness	0-15		
	Contrast	0-63	Component Input S-video Input Video Input	
	Brightness	0-63		
	Color	0-63		
	Tint	0-63		
	Red	0-63		
	Green	0-63		
	Blue	0-63		
Sharpness	0-15			
Setting	On start	On/Off		
	Standby mode	Normal/Eco		
	High land	On/Off		
	Lamp control	Normal/Eco		
	Cooling fast	Normal/60 sec/0 sec		
	Closed caption	Off, CC1,CC2,CC3, CC4		
	Key lock	Off, Projector, Remote control		
	Iris	On/Off		
	Terminal	Computer2/Monitor out		
	Sound	Sound	0-25	
		Mute	On/Off	
	HDMI setup	Image	64-940	
			0-1023	
		Sound	HDMI	
Computer				
Expand	Language	Multi-language provide		
	Auto setup	Input search	On/Off	
		Auto PC adj.	On/Off	
		Auto keystone	Off	
			Auto	
	Keystone	Manual		
		Keystone	Store/Reset	
		H/V Keystone		
		Corner correction		
		Curved correction		
Reset value				

## Appendix

Main menu	Sub menu	Setting		Note
Expand	Logo	Logo select	Default/User/Off	
		Capture		
		Logo PIN code lock	On/Off	
		Logo PIN code change		
	Security	PIN code lock	On/Off	
		PIN code change		
	Power management	Ready Shut down Off Timer Ready countdown		
	Filter counter	Filter counter Timer Filter counter reset		
	Test Pattern	Off, Gray scale 1(1-4), Colorbar, Red, Green, Blue, Cross hatch, White, Black, Raster gray		
	Network	Network setting	LAN(On/Off) DHCP IP address Subnet Gateway DNS	
		Network information	MAC address IP address	
	Remote control	Remote control	Code 0 (0-9)	
		RC sensor	Front/Back/Both	
	Factory default			
Lamp counter	Lamp counter Lamp counter reset			
Memory Viewer	Set Slide			
	Slide transition effect	Slide down Slide right		
	Sort Order	Extend order Size order Timer order Name order		

Main menu	Sub menu	Setting	Note
Memory Viewer	Rotate	No Rotate 270 Degrees 180 Degrees 90 Degrees	
	Best Fit	On/Off	
	Repeat	On/Off	
	Apply		
Info.	Input		
	H-sync freq.		
	V-sync freq.		
	Lamp status		
	Lamp counter		
	Power management		
	Image mode		

























- Input**
- Computer 1
  - Computer 2\*
  - HDMI
  - Component
  - Video
  - S-video
  - Network
  - Memory Viewer
  - USB Display

\* Computer 2 can't be selected when using the VGA IN 2/VGA OUT terminal as VGA OUT.

## Appendix

### Indicator and projector state

Check the indicator to know about the state of projector.

Indicator			State of projector
POWER Green/Red	LAMP Yellow	WARNING Red	
			In power-off state (AC power cord not connected).
			In standby state. Press POWER to power on the projector.
			In normal working state.
			Ready to be in standby mode or the projection lamp is being cooled. Before you power on the projector, you have to wait till the lamp is cool enough and the power indicator stops flashing.
			In power management ready mode.
			Internal temperature too high, can't be powered on. When the projector is cool enough, the temperature is restored to the normal value and the power indicator is illuminated red, you can then power on the projector.
			Can't be powered on because error is detected. You must unplug the power cord. Then insert it again and power on the projector. If the projector is powered off again, you must cut off the power and contact the local distributor or repair center. In this case, stop the projector. Otherwise, electric shock or fire may occur.
			The service life of the lamp is over. You should replace it with a new one in time.



Green



Red



Yellow



Off



Flash green



Flash red

\* When the lamp reaches the end of its life, the LAMP indicator lights Yellow. In this case, replace the lamp with a new one promptly.



**Compatible computer specifications**

This projector can receive the signals below:

Signal format	Resolution	Scanning frequency		Dot Frequency (Mhz)	Signal			
		horizontal frequency (Khz)	Field Frequency (Hz)		RGB	Component	HDMI	Video/S-Video
NTSC/NTSC4.43/PAL-M/ PAL-60	720x480i	15.7	59.9	-				o
PAL/PAL-N/SECAM	720x576i	15.6	50.0	-				o
525i(480i)	720x480i	15.7	59.9	13.5	o	o		
	720(1440)x480i <sup>+</sup>	15.7	59.9	27.0				o
625i(576i)	720x576i	15.6	50.0	13.5	o	o		
	720(1440)x576i <sup>+</sup>	15.6	50.0	27.0				o
525p(480p)	720x483	31.5	59.9	27.0	o	o	o	
625p(576p)	720x576	31.3	50.0	27.0	o	o	o	
750(720)/60p	1280x720	45.0	60.0	74.3	o	o	o	
750(720)/50p	1280x720	37.5	50.0	74.3	o	o	o	
1125(1080)/60i <sup>+</sup>	1920x1080i	33.8	60.0	74.3	o	o	o	
1125(1080)/50i	1920x1080i	28.1	50.0	74.3	o	o	o	
1125(1080)/24p	1920x1080	27.0	24.0	74.3	o	o	o	
1125(1080)/24sF	1920x1080i	27.0	48.0	74.3	o	o	o	
1125(1080)/25p	1920x1080	28.1	25.0	74.3	o	o	o	
1125(1080)/30p	1920x1080	33.8	30.0	74.3	o	o	o	
1125(1080)/60p	1920x1080	67.5	60.0	148.5	o	o	o	
1125(1080)/50p	1920x1080	56.3	50.0	148.5	o	o	o	
VGA	640x480	31.5	59.9	25.2	o		o	
		35.0	66.7	30.2	o		o	
		37.9	72.8	31.5	o		o	
		37.5	75.0	31.5	o		o	
SVGA	800x600	43.3	85.0	36.0	o		o	
		35.2	56.3	36.0	o		o	
		37.9	60.3	40.0	o		o	
		48.1	72.2	50.0	o		o	
		46.9	75.0	49.5	o		o	
MAC16	832x624	53.7	85.1	56.3	o		o	
		49.7	74.6	57.3	o		o	
XGA	1024x768	48.4	60.0	65.0	o		o	
		56.5	70.1	75.0	o		o	
		60.0	75.0	78.8	o		o	
		68.7	85.0	94.5	o		o	
MXGA	1152x864	67.5	74.9	108.0	o		o	
MAC 21	1152x870	68.7	75.1	100.0	o		o	
1280x720	1280x720	37.1	50.0	60.5	o		o	
		44.8	60.0	74.5	o		o	
1280x768	1280x768	47.8	59.9	79.5	o		o	
		60.3	74.9	102.3	o		o	
		68.6	84.8	117.5	o		o	
1280x800	1280x800	41.3	50.0	68.0	o		o	
		49.7	60.0	83.5	o		o	
		62.8	74.9	106.5	o		o	
		71.6	84.9	122.5	o		o	
MSXGA	1280x960	60.0	60.0	108.0	o		o	
		64.0	60.0	108.0	o		o	
SXGA	1280x1024	78.2	72.0	135.1	o		o	
		80.0	75.0	135.0	o		o	
		91.1	85.0	157.5	o		o	
1366x768	1366x768	39.6	49.9	69.0	o		o	
		47.7	59.8	84.8	o		o	
SXGA+	1400x1050	65.3	60.0	121.8	o		o	
		82.3	74.9	156.0	o		o	

## Appendix

Signal format	Resolution	Scanning frequency		Dot Frequency (MHz)	Signal			
		horizontal frequency (Khz)	Field Frequency (Hz)		RGB	Component	HDMI	Video/S-Video
WXGA+	1440x900 <sup>s</sup>	55.9	59.9	106.5	o		o	
1600x900	1600x900	55.9	60.0	119.0	o		o	
UXGA	1600x1200	75.0	60.0	162.0	o		o	
WSXGA+	1680x1050	65.3	60.0	146.3	o		o	
1920x1080	1920x1080 <sup>s</sup>	66.6	59.9	138.5	o		o	
WUXGA	1920x1200 <sup>s</sup>	74.0	60.0	154.0	o		o	

\*3 Pixel-Repetition signal (dot clock frequency 27.0 MHz) only.

\*4 When a 1125 (1035)/60i signal was input, it is displayed as a 1125 (1080)/60i signal.

\*5 VESA CVT-RB (Reduced Blanking)-compliant.

✓ **Note:**

- "i" added to the resolution value indicates an interlaced signal.
- When interlaced signals are connected, flicker may occur on the projected image.
- The specification is subject to change without any prior notice.

## Technical Specifications

### Mechanical properties

Dimensions (W×H×D)	386.4mmx126.1mmx326.7mm(including the adjustable foot and projector lens)
Net Weight	4.6Kg (with Lens)
Adjustable foot	40mm

### LCD resolution

LCD system	0.63" TFT, active matrix, 3-panel (LC-XBS500) 0.59" TFT active matrix, 3-panel (LC-WBS500)
LCD resolution	XGA 1024X768 (LC-XBS500) / WXGA 1280X800(LC-WBS500)

### Compatible signals

Color standard	PAL, SECAM, NTSC, NTSC4.43, PAL-M, PAL-N and PAL60
HDTV signal	480i, 480p, 575i, 575p, 720p, 1035i, 1080i and 1080p
Scanning frequency	Horizontal frequency: 15 kHz –100 KHz; Vertical frequency: 48 – 85 Hz

### Optical elements

Image size (diagonal lines)	30"-300", adjustable
Projection distance	4:3 0.882m-9.180m(W) 1.482m-15.171m(T) (LC-XBS500) 16:10 0.938m-9.735m(W) 1.573m-16.086m(T) (LC-WBS500)
Lens	F=1.6-2.08, f=19.36-31.94mm; Manual zooming and focusing; Zoom times: 1.65X
Lamp Consumption(W)	280W NSH

### Terminal

VGA IN 1/YCbCr/S-VIDEO IN	Mini D-sub 15 pin x1
VGA IN 2/VGA OUT	Mini D-sub 15 pin x1
HDMI terminal	HDMI A type 19 pin (the number of HDMI terminals varies from model to model. See the real product.)
LAN terminal	100 Base-TX (100Mbps)/10 Base-T (10Mbps) RJ45
USB-B	x1(display)
USB-A	(read+Wifi Dongle)/Wifi Dongle Optional/Microsoft Office/Adobe Reader
RS-232 terminal	D-sub 9 pin x1
Wired remote input terminal	Mini Jack x1(Input)
AUDIO OUT	3.5mm Mini Type Stereo x1
AUDIO IN	3.5mm Mini Type Stereo x1
MONO(R/L)	3.5mm Mini Type Stereo x2
VIDEO IN terminal	3.5mm Mini Type Stereo x1

### Power

Voltage and power consumption	AC 100–240 V, 50/60 Hz
Fuse	250V/10A
Internal audio AMP	7W x 1, single chanel
Internal speaker	10W RMS 8ohm, x1

### Operating Environment

Operating temperature	41°F-104°F (5°C - 40°C)
Storage Temperature	14°F-140°F (-10°C - 60°C)
High land	1400 m

### Remote control

Battery	AA or LR6 1.5V ALKALINE TYPE x 2
Operating Range	16.4' (5 m)/±30
Dimensions	48mm (W) x 26mm (H) x 160mm (D)
Net Weight	67g (including batteries)

### Accessories

 
Power Cord, Owner's Manual(CD), Remote Control & battery, VGA Cable  
Lens Protection Ring

- The aforesaid specification is subject to change without prior notice.
- Liquid crystal panel is made on the basis of high standard, where 99.99% of the pixels are effective. Due to the nature of the liquid crystal panel, a fraction of the pixels (0.01% or less) may be ineffective.

# Appendix


## Configurations of terminals

### COMPUTER IN 1 terminal pin assignments and signal names




1	R/P <sub>B</sub> /S-C	9	+5V
2	G/Y/S-Y	10	GND
3	B/P <sub>B</sub> /-	11	GND
4	----	12	DDC data
5	GND	13	HD/SYNC
6	GND	14	VD
7	GND	15	DDC clock
8	GND		

### COMPUTER IN 2/COMPUTER OUT terminal pin assignments and signal names

 


1	R	9	NC
2	G	10	GND
3	B	11	----
4	----	12	DDC data
5	GND	13	HD/SYNC
6	GND	14	VD
7	GND	15	DDC clock
8	GND		

### RS232 terminal (D-SUB-9 pin)

 


1	----
2	RXD
3	TXD
4	----
5	GND
6	----
7	----
8	----
9	----

### LAN terminal

 


1	TX +	5	----
2	TX -	6	----
3	----	7	RX +
4	----	8	RX -

### HDMI terminal pin assignments and signal names

 

1	T.M.D.S data2+	11	T.M.D.S clock shield
2	T.M.D.S data2 shield	12	T.M.D.S clock-
3	T.M.D.S data2-	13	CEC
4	T.M.D.S data1+	14	----
5	T.M.D.S data1 shield	15	SCL
6	T.M.D.S data1-	16	SDA
7	T.M.D.S data0+	17	DDC/CEC GND
8	T.M.D.S data0 shield	18	+5V
9	T.M.D.S data0-	19	Hot plug detection
10	T.M.D.S clock+		

### USB-B terminal

 

1	V Bus
2	Data -
3	Data +
4	GND

**Content of hazardous substances and elements**

Name of parts	Hazardous substances and elements					
	Pb	Hg	Cd	Cr6+	PBB	PBDE
Optical parts <sup>*1</sup>	×	○	○	○	○	○
Electric parts <sup>*2</sup>	×	○	○	○	○	○
Cabinet, mechanical parts	×	○	○	○	○	○
Lamp unit	×	×	○	○	○	○
Batteries	○	○	○	○	○	○
Others(Remote control, cable and other parts)	×	○	○	○	○	○

○: It means that contents of hazardous substances in all homogeneous materials in this part don't exceed "Required Limitations" specified in SJ/T11363-2006.  
 ×: It means that contents of hazardous substances in at least one homogeneous material in this part exceed "Required Limitations" specified in SJ/T11363-2006.


Note:

\*1 : Optical parts includes optical lens, monitor, reflection lens ect.  
 \*2 : Electric parts includes PCB, internal wires, fans, power supply, sensors etc.

**Dimensions**

Unit: mm

↙ Screw Holes for Ceiling Mount  
 Screw: M4  
 Depth: 10.0

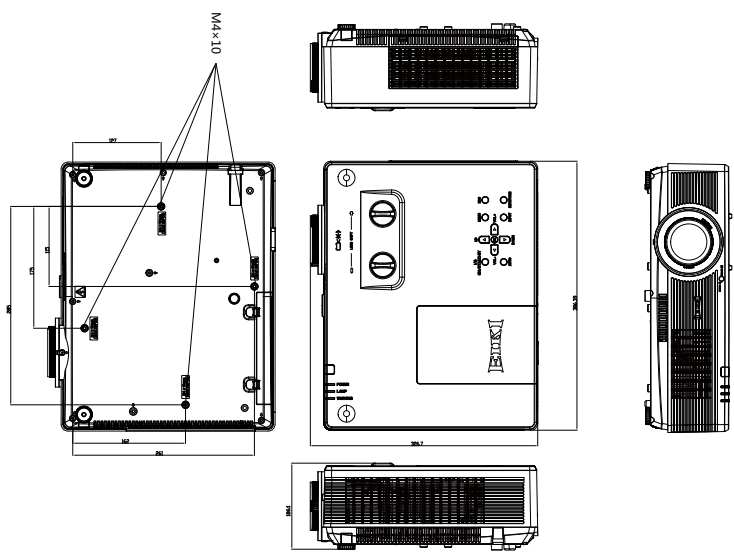

## Appendix

---

### PIN code memorandum

Write down the PIN code in the blank below and keep it, If you forgot or lost the number and unable to operate the projector, contact the service center.

PIN code lock

Factory default PIN code 111\*

--	--	--

Logo PIN code Lock No.

Factory default PIN code 111\*

--	--	--

\*If this 3-digit number is changed,  
the factory default number will be ineffective.

## RS232 Control Method


### 1. Connection

#### 1.1 Port Setting

Item	Value
Method	Asynchronous communication
Bits per seconds	19200
Data bits	8
Parity	none
Stop bits	1
Flow control	none

#### 1.2 Wiring

Connect the computer and projector with RS232 cross cable.

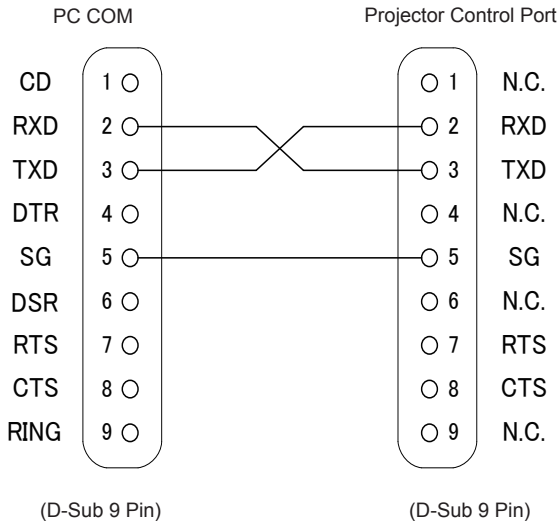

### 2. Commands

Case sensitive, each command end by[CR](Carriage)

Command	Item	Command	Item
C00	POWER ON	C07	Video
C01	POWER OFF(Power off immediately)	C34	S-Video
C02	POWER OFF	C33	Component
C36	HDMI	C15	Network
C05	VGA IN 1	C16	Memory viewer
C06	VGA IN 2	C17	USB Display

## Appendix

---

### 2.1 POWER ON

Command	"C00" [CR] (Hex:0x43 0x30 0x30 0x0d)	
Details	Power ON when projector standby	
Return	OK	[ACK] [CR]
	NG	"?" [CR]

### 2.2 POWER OFF (Power OFF immediately)

Command	"C01" [CR] (Hex:0x43 0x30 0x31 0x0d)	
Details	Power OFF immediately	
Return	OK	[ACK] [CR]
	NG	"?" [CR]

### 2.3 POWER OFF

Command	"C02" [CR] (Hex:0x43 0x30 0x32 0x0d)	
Details	"Power off?" displays while send the command, just like press the "POWER"key.	
Return	OK	[ACK] [CR]
	NG	"?" [CR]

### 2.4 HDMI

Command	"C36" [CR] (Hex:0x43 0x33 0x36 0x0d)	
Details	Change the input to "HDMI".	
Return	OK	[ACK] [CR]
	NG	"?" [CR]

### 2.5 VGA IN 1

Command	"C05" [CR] (Hex:0x43 0x30 0x35 0x0d)	
Details	Change the input to "Computer 1".	
Return	OK	[ACK] [CR]
	NG	"?" [CR]

### 2.6 VGA IN 2

Command	"C06" [CR] (Hex:0x43 0x30 0x36 0x0d)	
Details	Change the input to "Computer 2".	
Return	OK	[ACK] [CR]
	NG	"?" [CR]



2.7 Video

Command	"C07" [CR] (Hex:0x43 0x30 0x37 0x0d)	
Details	Change the input to "Video".	
Return	OK	[ACK] [CR]
	NG	"?" [CR]
	NG	"?" [CR]

2.8 S-video

Command	"C34" [CR] (Hex:0x43 0x33 0x34 0x0d)	
Details	Change the input to "S-Video".	
Return	OK	[ACK] [CR]
	NG	"?" [CR]

2.9 Component

Command	"C33" [CR] (Hex:0x43 0x33 0x33 0x0d)	
Details	Change the input to "Component".	
Return	OK	[ACK] [CR]
	NG	"?" [CR]

2.10 Network

Command	"C15" [CR] (Hex:0x43 0x31 0x35 0x0d)	
Details	Change the input to "Network".	
Return	OK	[ACK] [CR]
	NG	"?" [CR]

2.11 Memory viewer

Command	"C16" [CR] (Hex:0x43 0x31 0x36 0x0d)	
Details	Change the input to "Memory viewer".	
Return	OK	[ACK] [CR]
	NG	"?" [CR]

2.12 USB Display

Command	"C17" [CR] (Hex:0x43 0x31 0x37 0x0d)	
Details	Change the input to "USB Display".	
Return	OK	[ACK] [CR]
	NG	"?" [CR]

# EIKI

## **U.S.A.**

---

EIKI International, Inc.  
30251 Esperanza  
Rancho Santa Margarita  
CA 92688-2132  
U.S.A.  
Tel: 800-242-3454 (949)-457-0200  
Fax: 800-457-3454 (949)-457-7878  
E-Mail: [usa@eiki.com](mailto:usa@eiki.com)

## **Deutschland & Österreich**

---

EIKI Deutschland GmbH  
Am Frauwald 12  
65510 Idstein  
Deutschland  
Tel: +49-6126-9371-0  
Fax: +49-6126-9371-14  
E-Mail: [info@eiki.de](mailto:info@eiki.de)

## **China**

---

EIKI (Shanghai) Co., Ltd.  
LAKESIDE OASIS MIDDLE RING  
BUSINESS CENTRE  
Block 1, Room 606,  
1628, Jin Sha Jiang Road  
Shanghai, 200333  
CHINA  
Tel: 86-21-3251-3993  
Service Hot line: 86-21-3251-3995  
Fax: 86-21-3251-3997  
E-mail: [info@eiki-china.com](mailto:info@eiki-china.com)

## **Australia**

---

EIKI AUSTRALIA PTY LTD  
Level 5, 11 Queens Road, Melbourne,  
Victoria 3004  
Tel: +61 (03) 8530 7048  
Fax: +61(03) 9820 5834  
E-Mail: [sales@eiki.net.au](mailto:sales@eiki.net.au)

## **Canada**

---

EIKI CANADA - Eiki International, Inc.  
P.O. Box 156, 310 First St. - Unit 2,  
Midland, ON, L4R 4K8, Canada  
Tel: 800-563-3454 (705)-527-4084  
Fax: 800-567-4069 (705)-527-4087  
E-Mail: [canada@eiki.com](mailto:canada@eiki.com)

## **Eastern Europe**

---

EIKI CZECH SPOL. s.r.o.  
Nad Cementárnou 1163/4a  
Praha 4, Podolí  
147 00  
Czech Republic  
Tel: +420 241 410 928  
+420 241 403 095  
Fax: +420 241 409 435  
E-Mail: [info@eiki.cz](mailto:info@eiki.cz)

## **South East Asia**

---

EIKI Industrial (M) Sdn Bhd  
No. 11, Nouvelle Industrial Park,  
Lorong Teknologi B, Taman Sains Selangor  
1, Kota Damansara PJU5,  
47810 Petaling Jaya, Selangor Darul Ehsan,  
Malaysia  
Tel: +603-6157-9330  
Fax: +603-6157-1320  
E-Mail: [sales@eiki.my](mailto:sales@eiki.my)

## **Japan & Worldwide**

---

EIKI Industrial Company Limited.  
6-23 Teramoto, Itami-shi, Hyogo,  
664-0026 JAPAN  
Tel: +81-72-782-9492  
Fax: +81-72-781-5435

**WorldWide Website <http://www.eiki.com>**