© 2020 Roland Corporation




V-8HD Remote is a dedicated iPad application for the Roland V-8HD. Connecting the V-8HD and the iPad via USB lets you operate the V-8HD from V-8HD Remote.

\* V-8HD Remote can be used with V-8HD units that are running version 1.03 or later. Be sure to update your V-8HD unit to the latest version.

## Connecting the iPad and the V-8HD

1. Connect the V-8HD's USB port to the iPad.

Using a commercially available connection or an adaptor cable (Lightning-USB camera adaptor), connect the unit to the iPad.

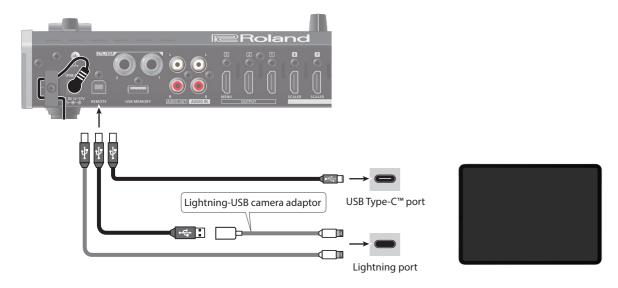

2. Turn on the power to the V-8HD.


# Starting and Quitting V-8HD Remote

### Starting the V-8HD Remote

- 1. Turn on the power to the iPad on which V-8HD Remote is installed.
- 2. Tap the V-8HD Remote icon.



V-8HD Remote starts, and the V-8HD Remote screen appears.

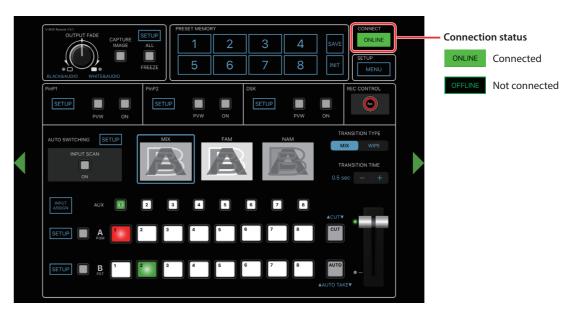

### NOTE


If the connection status does not change to "ONLINE" (connected), re-check the connection between the iPad and the V-8HD unit.

#### Ouitting

1. Press the Home button on the iPad.

V-8HD Remote ends, and the Home screen reappears.


### Part Names and Functions

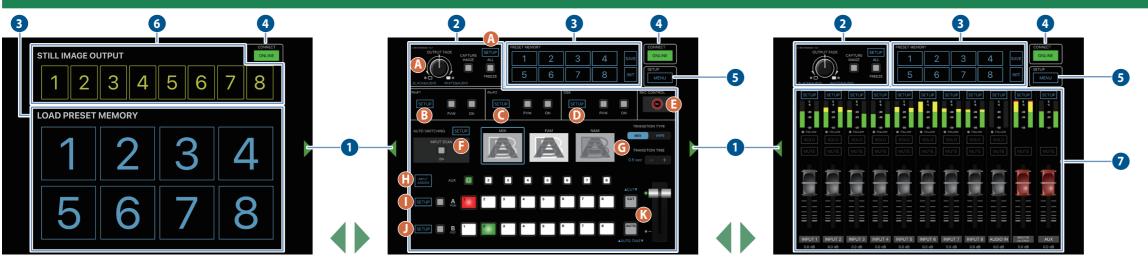

Name

For more details on setting items, refer to the V-8HD Reference Manual, "Menu List" (PDF).

Name		Explanation
1	Display-change button	Tap the button to switch the display.
2	Operation panel	Operates the operation panel on the V-8HD by remote control.
A	[OUTPUT FADE] knob	When you tap the function name shown at the lower left or lower right of the knob, a window opens, allowing you to change the function of turning the knob left or right.
B	FREEZE [SETUP] button	Accesses the freeze function setup screen.    RRECE   STATE   STATE   STATE
<b>G</b>	PinP 1 [SETUP] button	Accesses the PinP 1 and PinP 2 setup screen.    PinP 1
D	PinP 2 [SETUP] button	ABC  CONT FROM NOT 2 SMAP WITH FROM 2
3	DSK [SETUP] button	Accesses the DSK setup screen.    DSK
B	[REC CONTROL] button	If a recorder that supports the "HDMI RECTRIGGER" function is connected to the output of the V-8HD, this controls start/stop for video recording on the recorder.
G	AUTO SWITCHING [SETUP] button	Accesses the auto switching setup screen.  AUTO SWITCHING  AUT
	AUTO SWITCHING [ON] button	Turns the auto switching on/off.
<b>(1)</b>	TRANSITION TYPE [MIX] [WIPE] buttons	Switches to the MIX or WIPE setting items.  MIX  WIPE
	TRANSITION TIME [-] [+] buttons	Specifies the video transition time.

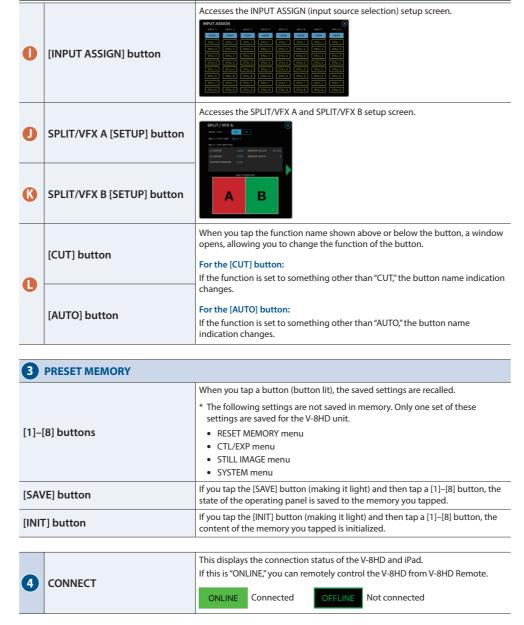

Explanation

