


V-800HD Block Diagram

Input

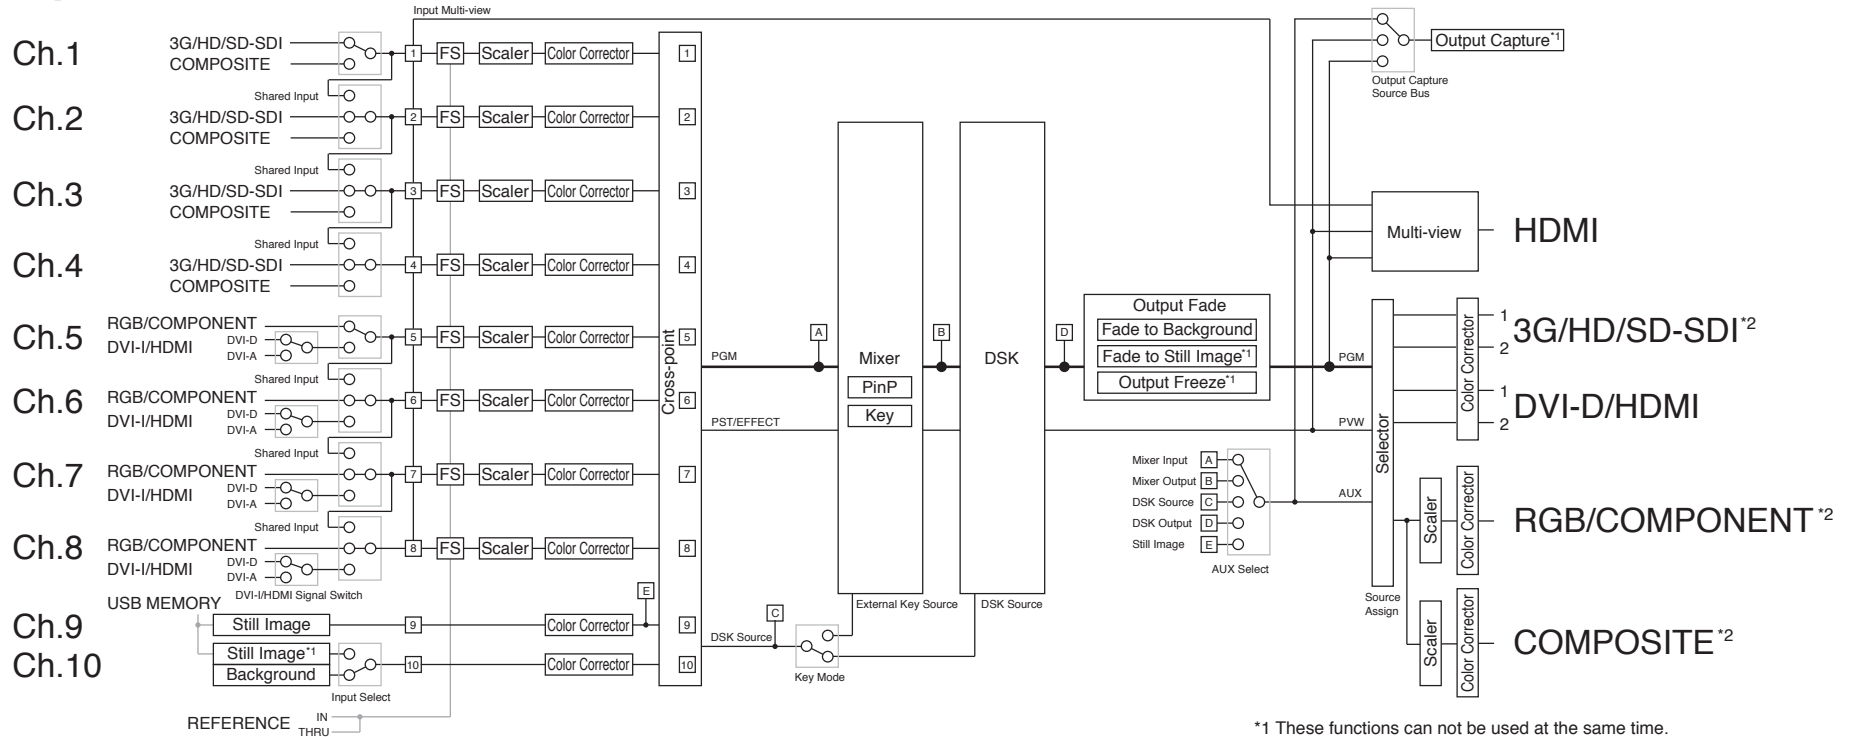

Output

*1 These functions can not be used at the same time.

*2 In HDCP mode, no video signals are output from the analog or SDI connectors.