


Installation Guide

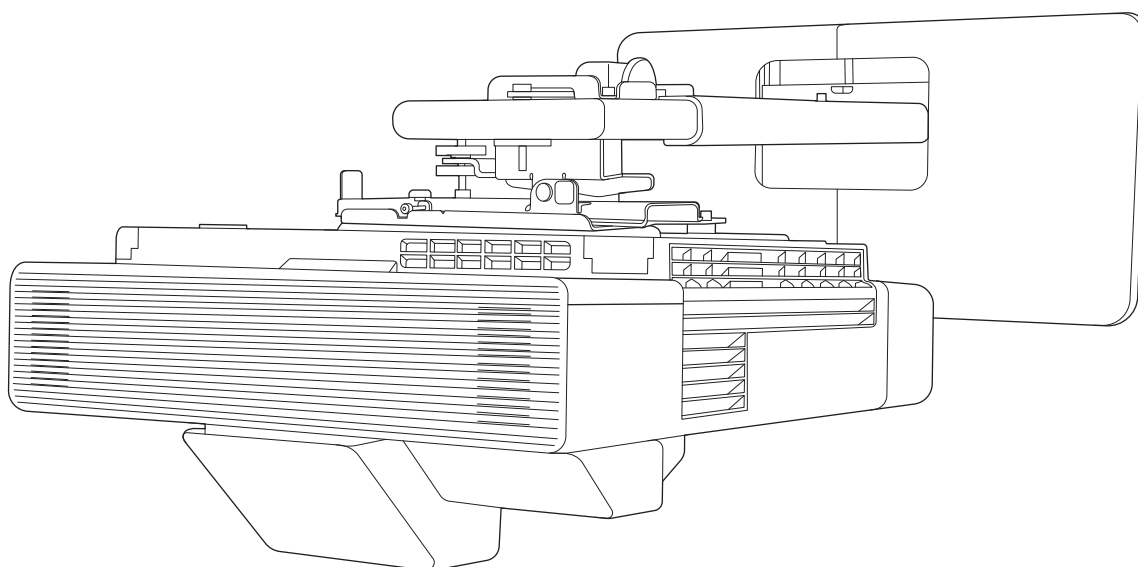

About This Installation Guide

This guide describes how to mount the ultra-short-throw projectors listed below to a wall using the Epson® ELPMB62 wall mount.

The following projectors are covered by this guide:

- BrightLink® 1480Fi/1480Fi+
- BrightLink® 1485Fi/1485Fi+






Safety Instructions

For your safety, read all the instructions in this guide before using the wall mount. Incorrect handling that ignores instructions in this guide could damage the wall mount or could result in personal injury or property damage. Keep this installation guide on hand for future reference.






Read the safety instructions in the *User's Guide* for your projector and follow the instructions in this document.



















Explanation of Symbols







The warning marks shown below are used throughout this installation guide to prevent personal injury or property damage. Make sure you understand these warnings when reading this installation guide.






| | |
|--|--|
|  Warning | This symbol indicates information that, if ignored, could possibly result in personal injury or even death due to incorrect handling. |
|  Caution | This symbol indicates information that, if ignored, could possibly result in personal injury or physical damage due to incorrect handling. |
|  | This symbol indicates related or useful information. |
|  | Symbol indicating an action that must not be done |
|  | Symbol indicating an action that should be done |

Safety Precautions for Installation

|  Warning | |
|--|---|
| The wall mount is designed specifically for mounting a projector to a wall. If anything other than a projector is mounted, the weight may result in damage. If the wall mount falls, it could cause personal injury or property damage. |  |
| The installation work (wall mounting) should be performed by specialists who have technical knowledge and ability. Incomplete or incorrect installation could cause the wall mount to fall and cause personal injury or property damage. |  |
| Follow the steps in this guide to install the wall mount, and be sure to use the bolts and screws specified in this guide If the instructions are not followed, this product may fall, resulting in personal injury or an accident. |  |
| Handle the power cord carefully. Incorrect handling may cause fire or electric shock. Observe the following precautions when handling: <ul style="list-style-type: none">• Do not handle the power plug with wet hands.• Do not use a power cord that is damaged or modified.• Do not pull the power cord with too much force when routing the cable through the wall mount. |  |

|  Warning | |
|---|---|
| Do not install the wall mount in a place where it might be subjected to vibration or shock. Vibration or shock could cause damage to the projector or mounting surface. It could also cause the wall mount or projector to fall and cause personal injury or property damage. |  |
| The installation work should be performed by at least two qualified service personnel. If you need to loosen any screws during installation, be careful not to drop the wall mount. If the wall mount or projector falls, it could cause personal injury or property damage. |  |
| Make sure you use the included safety wire kit when mounting your projector. |  |
| Install the wall mount so that it can sufficiently support the weight of the projector and wall mount, and resist any horizontal vibration. Use M10 or 3/8 inch nuts and bolts and make sure to use appropriate wall anchors for your wall type. Nuts and bolts smaller than M10 or 3/8 inch could cause the wall mount to fall. Epson accepts no responsibility for any damage or injury caused by lack of wall strength or inadequate installation. |  |
| When you mount the projector on the wall with the wall mount, the wall must be strong enough to hold the projector and the wall mount. The maximum combined weight of the projector and wall mount is approximately 18.9 kg (41.7 lb). If the wall is not strong enough, reinforce the wall before installation. |  |
| The installation work should be performed by at least two qualified service personnel. If you need to loosen any screws during installation, be careful not to drop this product. If this product falls, it could cause damage or injury. |  |
| Inspect the wall mount on a regular basis to ensure there are no broken parts or loose screws. If there are any broken parts, stop using the wall mount immediately. If the wall mount or projector falls, it could cause personal injury or property damage. |  |
| Never modify the wall mount. |  |
| Do not hang on the wall mount or hang a heavy object on the wall mount. If the projector or wall mount falls, it could cause personal injury or property damage. |  |
| Do not use adhesives, lubricants, or oils to install or adjust the wall mount. If you use adhesives to prevent the screws from loosening or things such as lubricants or oils on the part of the projector attached to the slide plate, the case may crack and cause the projector to fall, resulting in personal injury or property damage. |  |
| Tighten all screws firmly after adjustment. Otherwise, the projector or wall mount may fall and cause personal injury or property damage. |  |
| Never loosen the bolts and nuts after installation. Confirm that the screws have not become loose on a regular basis. If you find any loose screws, tighten them firmly. Otherwise, the projector or wall mount may fall and cause personal injury or property damage. |  |
| When performing wiring, make sure the cable does not come into contact with any screws or bolts. Handling the cable incorrectly may cause fire or electric shock. |  |
| Do not install in a location subject to oily smoke or smoke for events. If oils stick to the slide plate fixing part of the projector, the case may crack and cause the projector to fall, resulting in personal injury or property damage. |  |
| Follow the instructions in this guide to install and operate the touch unit. If the touch unit is not installed and operated properly, the light emitted from the laser could cause injury to eyesight. |  |
| Never modify the control pad or touch unit. |  |
| When performing wiring, make sure the cable does not come into contact with any screws or bolts. Handling the cable incorrectly may cause fire or electric shock. |  |

|  Warning | |
|---|---|
| Do not apply optical devices such as a magnifying glass or telescope to the laser light diffused from the touch unit. If such optical devices are applied, it could cause personal injury or fire. |  |
| Do not look into the touch unit's laser diffusion ports. This could cause injury to eyesight. Extra care should be taken when children are present. |  |
| Do not view the laser light using optical devices such as a magnifying glass within a range of 2.75 inches (70 mm). Viewing at close range could cause injury to eyesight. |  |
| Connect the touch unit to BrightLink 1480Fi/1480Fi+/1485Fi/1485Fi+ models only. Do not connect it to any other projectors or devices. |  |
| Do not use the touch unit if you are using or are near medical equipment such as a pacemaker. The magnet within the touch unit generates electromagnetic interference which could cause medical equipment to malfunction. |  |


|  Caution | |
|--|---|
| Do not install the wall mount in a location where the operating temperature for your projector model may be exceeded. Such an environment may damage the projector. |  |
| Install the wall mount in a place free from excessive dust and humidity to prevent the lens or optical components from becoming dirty. |  |
| Do not use excessive force when adjusting the wall mount. The wall mount may break, resulting in personal injury. |  |
| Keep magnetic storage media (for example, magnetic cards or electronic devices such as computers, digital watches, or cell phones) away from the touch unit. The magnet within the touch unit generates electromagnetic interference which could corrupt data or cause the media or device to malfunction. |  |

Installation Location


- Before installing the projector, verify the power supply wiring for the installation location.
- If you want to hide the projector power plug under the wall plate cover, make sure the power outlet is located in the empty space to the left or right of the wall plate.
- Install the projector away from other electric devices such as fluorescent lights or air conditioners. Some kinds of fluorescent lights could interfere with the remote control of the projector.
- Install the projector away from direct sunlight and other bright light sources.
- Make sure there is at least 20 inches (50 cm) of space between the wall and the projector's air exhaust and intake vents on the left and right.
- It is recommended to keep VGA computer cable length less than 65 feet (20 meters) to reduce external noise.
- Install the projector at an angle of no more than 3° horizontally or vertically in relation to the projection surface.
- Install the projector in a location where the projected image is within reach.
- When installing two or more projectors, check the following:
 - Make sure the temperature of the surrounding environment is less than 95°F (35°C). If the environment is too hot, the projectors may overheat and the power may turn off without warning.
 - Make sure you leave a gap of at least 47.2 inches (120 cm) between the projectors.




If the projectors are installed closer than 47.2 inches (120 cm) apart, install a partition to block the heat from the projector's exhaust vent. The partitions should be larger than the exhaust vent and installed approximately 15.7 inches (400 mm) from the exhaust vent and 7.9 inches (200 mm) from the intake vents.

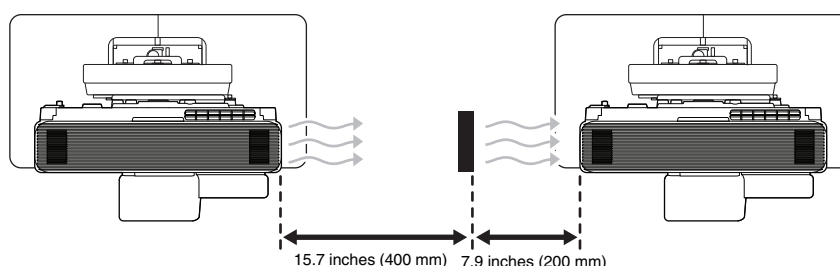

- Before installing the touch unit, verify that the installation location meets the following conditions:
 - The touch unit can be secured to the surface with magnets or screws, or the optional touch unit bracket.
 - The surface is flat, smooth, and unwarped with no more than 0.2 inch (5 mm) of unevenness in any direction on the screen surface.

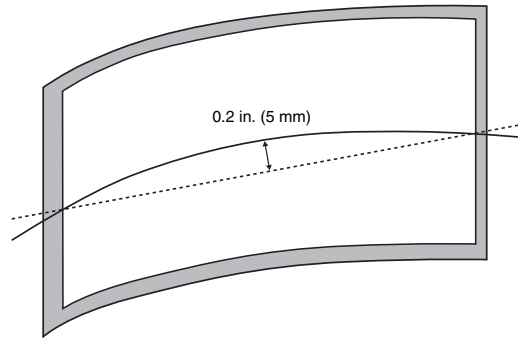

- When installing the touch unit within the frame of the whiteboard, secure the touch unit with magnets or screws. Make sure there are no obstacles, such as cables, or protruding objects such as whiteboard trays, pen holders, or thick frames in the shaded areas in the following figure. The touch unit will not operate correctly if anything is obstructing the infrared signal. If there is an obstacle that cannot be removed, you can use the supplied infrared deflectors to prevent laser detection issues.

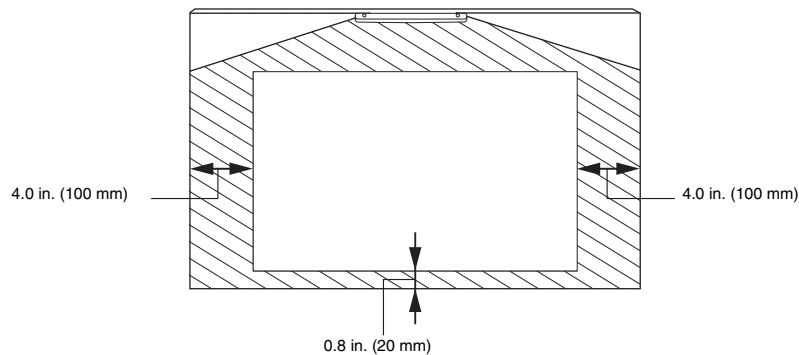


- When installing the touch unit above the frame of a whiteboard, use the optional touch unit bracket.
 - If the distance from the wall to the surface of the whiteboard is greater than 2 inches (51 mm), you must install the touch unit on the whiteboard.
 - If the frame of the whiteboard extends more than 0.1 inch (3 mm) away from the board surface, you must install the touch unit on the whiteboard or screen.

| | | |
|----------|---|-----------|
| 1 | Package Contents | 9 |
| 2 | Specifications | 13 |
| 3 | Connecting Devices | 19 |
| 4 | Positioning the Projector | 21 |
| | Installation worksheet for projecting on a pre-installed wall-mounted board | 22 |
| | Installation worksheet for projecting on a plain wall | 24 |
| | Projection distance worksheets | 25 |
| | Diagonal image size and mounting position | 26 |
| | Distance from top of projected image to wall plate | 27 |
| | Installation measurement tables | 27 |
| 5 | Installing the Projector | 33 |
| | Assemble the parts | 33 |
| | Install the wall plate on the wall | 35 |
| | Determine the projection distance and pull out the mount arm slider | 37 |
| | Route the cables through the wall mount arm | 38 |
| | Attach the mount arm to the wall plate | 38 |
| | Adjust the vertical slide position of the arm | 40 |
| | Attach the projector to the wall mount | 41 |
| | Connect the power cord and other cables to the projector | 42 |
| 6 | Adjusting the Image | 45 |
| | Turn on the projector | 45 |
| | Select the screen type | 45 |
| | Adjust the focus | 45 |
| | Display the test pattern | 47 |
| | Use adjustment dial 1 on the left side to adjust the horizontal roll | 47 |
| | Use adjustment dial 2 on the top to adjust the horizontal rotation | 48 |
| | Use adjustment dial 3 on the front to adjust the vertical tilt | 48 |
| | Adjust the horizontal slide | 49 |
| | Adjust the forward/backward slide | 49 |
| | Adjust the vertical slide | 50 |
| | Re-adjust the focus | 50 |
| | Turn off the display of the test pattern | 51 |

| | | |
|-----------|--|-----------|
| 7 | Attaching the Covers | 52 |
| | Attach the wall plate cover and end cap | 52 |
| | Attach the cable cover to the projector | 53 |
| 8 | Installing the Touch Unit | 55 |
| | Installing the touch unit on a whiteboard | 56 |
| | Install infrared deflectors along any obstacles | 56 |
| | Display the installation pattern | 57 |
| | Determine the installation position for the touch unit | 58 |
| | Install the touch unit | 60 |
| | Turn on the touch unit | 62 |
| | Adjust the angle | 63 |
| | Installing the touch unit above a whiteboard | 68 |
| | Install infrared deflectors along any obstacles | 68 |
| | Turn on the projector | 69 |
| | Display the installation pattern | 69 |
| | Determine the installation position for the bracket | 70 |
| | Drill holes for the bracket | 71 |
| | Install the bracket | 71 |
| | Turn on the touch unit | 74 |
| | Adjust the angle | 75 |
| 9 | Installing the Control Pad and Pen Stand (BrightLink 1485Fi/1485Fi+ Only) | 80 |
| | Check the installation location | 80 |
| | Remove the front cover | 81 |
| | Connect the power cable | 82 |
| | Attach the control pad | 81 |
| | Secure the AC adapter | 82 |
| | Connect the projector cables to the control pad | 82 |
| | Attach the front cover | 83 |
| | Install the pen stand | 84 |
| 10 | Appendix | 85 |
| | Using the Easy Interactive Function | 85 |
| | Using Auto Screen Adjustment | 85 |
| | Making Additional Screen Adjustments | 88 |
| | Attaching a Security Cable | 92 |



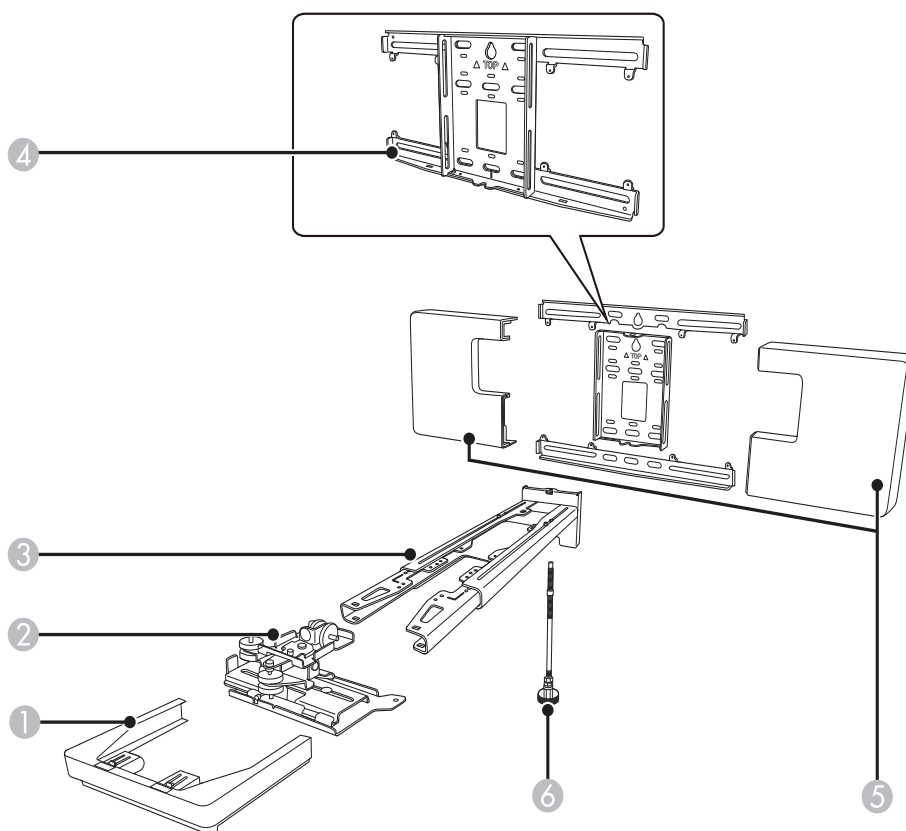

1 Package Contents

Wall Mount




| # | Part name |
|---|--|
| 1 | End cap |
| 2 | 3-axis adjustment unit and slide plate (attached when shipped) |
| 3 | Wall mount |
| 4 | Wall plate |
| 5 | Wall plate cover |
| 6 | Hexagonal shaft |

Hardware


| Shape | Name | Quantity | Application |
|---|---|----------|--|
|  | M4 × 12 mm hexagon socket head cap bolt with washer/spring washer | 5 | For wall plate assembly |
| | | 4 | For 3-axis adjustment unit/wall mount installation |
| | | 4 | For slide plate/projector installation |
|  | M6 × 20 mm hexagon shoulder head bolt with washer/spring washer | 1 | For wall mount/wall plate installation |
|  | M6 × 20 mm cross recessed head shoulder screw with plastic washer | 3 | |
|  | M3 × 6 mm cross recessed head shoulder screws | 4 | For Mini PC plate installation |

- Use the bolts or screws supplied with the wall mount to install it as directed in this guide. Do not substitute these bolts with any other types.
- You need to use commercially available M10 × 60 mm or 3/8 inch anchors (at least 4) and one M10 screw to attach the wall plate to the wall.
- Gather the tools and parts you need before you begin installation, including a #3 cross-head screwdriver.

Accessories

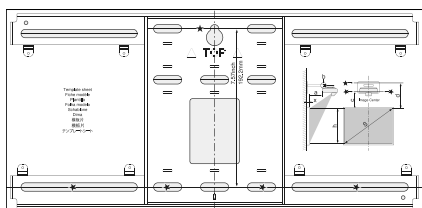


Template sheet
(for installing the wall plate)




Safety wire installation kit (for securing the projector)



Mini PC band

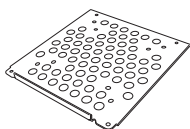


Mini PC plate



Corner markers*



Magnets for corner markers*



Masking sticker



Open-ended wrench
13 mm (for M8 and M6) × 6 mm
(for hexagonal shaft)




Hexagon wrench (for M4)


**Included with the projector.*

Touch unit (included with BrightLink 1485Fi/1485Fi+)

The following parts are packaged with your projector (BrightLink 1485Fi/1485Fi+) and are necessary when attaching the touch unit. When installing the touch unit on a non-magnetic screen or whiteboard, you will also need three M4 screws.

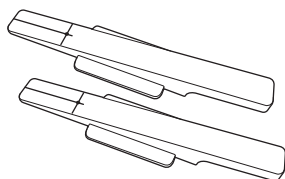

Marker (x2)

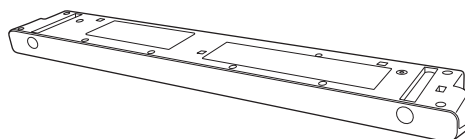

Touch unit




Spacer for screw holes (x3)




Tape (approx. 2.4 inches [6 cm]) for securing the markers (x12)




Label (x4)

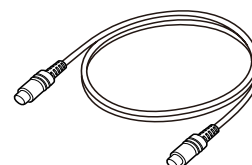

Touch unit connection cable

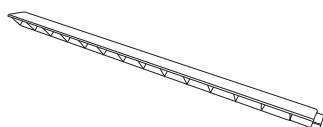


Infrared deflector (approx. 11.2 inches [28.5 cm]) (x12)

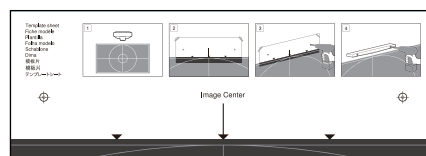


Touch unit template sheet

Optional touch unit bracket


The following parts are packaged with the optional touch unit bracket and are necessary when attaching the touch unit above the frame of a whiteboard. When installing the bracket, you will also need four (4) M4 wood screws or M4 anchor bolts (not included).

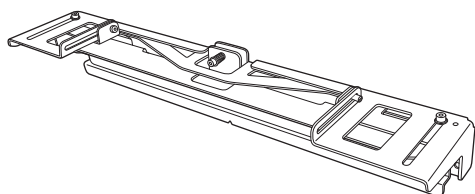


Touch unit bracket



Bracket template sheet




M4 x 25 mm hexagon socket head cap bolt (x2)




Hexagon wrench (for M4 bolts)

Control pad (BrightLink 1485Fi/1485Fi+ only)


The following parts are packaged with your projector (BrightLink 1485Fi/1485Fi+ only) and are necessary when attaching the control pad. When installing the control pad on a wall, you will also need four commercially available M4 × 20 mm screws.

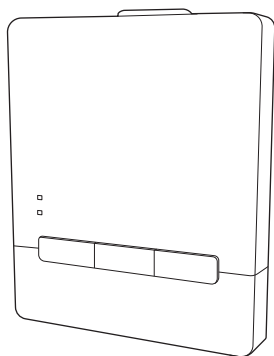

Control pad

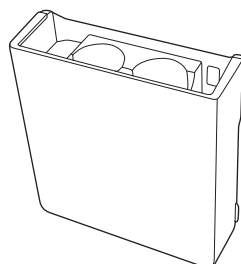


Pen stand and cover

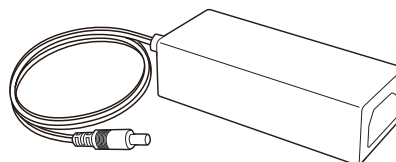


AC adapter




Spacer for screw holes (x3)

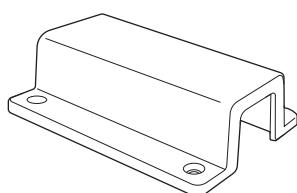

AC adapter holder

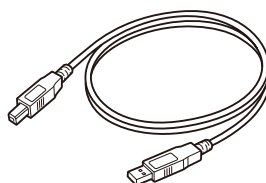

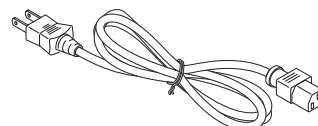


USB cable




Power cable

2 Specifications


| Item | Specification | Additional information | Reference page |
|--|-----------------------------|--|---|
| Wall mount weight (including the 3-axis adjustment unit, slide plate, wall plate, wall plate cover, and end cap) | Approx. 20.3 lb (9.2 kg) | — | — |
| Maximum load capacity | 33.1 lb (15.0 kg) | — | — |
| Vertical slide adjustment range | ±1.6 in. (40 mm) | — | Refer to the illustration on page 14 |
| Horizontal slide adjustment range | ±1.8 in. (45 mm) | — | Refer to the illustration on page 14 |
| Forward/backward slide adjustment range | 0 to 15.1 in. (0 to 383 mm) | Determine adjustment unit installation position based on screen size | Refer to the illustration on page 15 |
| Horizontal roll adjustment range | ±3° | Fine adjustments possible with adjustment dial |  p. 47 |
| Horizontal rotation adjustment range | ±8° | Fine adjustments possible with adjustment knob |  p. 48 |
| Vertical tilt adjustment range | ±3° | Fine adjustments possible with adjustment dial |  p. 48 |

Wall plate cover

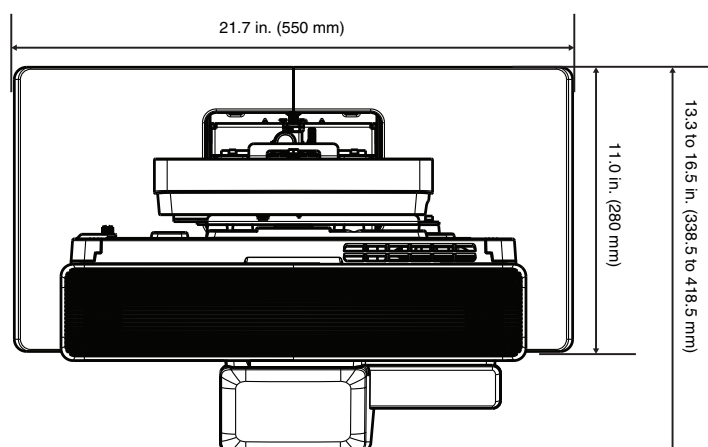


Wall plate


The wall plate is in three pieces when shipped. Use the included M4 × 12 mm bolts (×5) to attach the separate pieces together before mounting the projector. See page 33 for instructions.

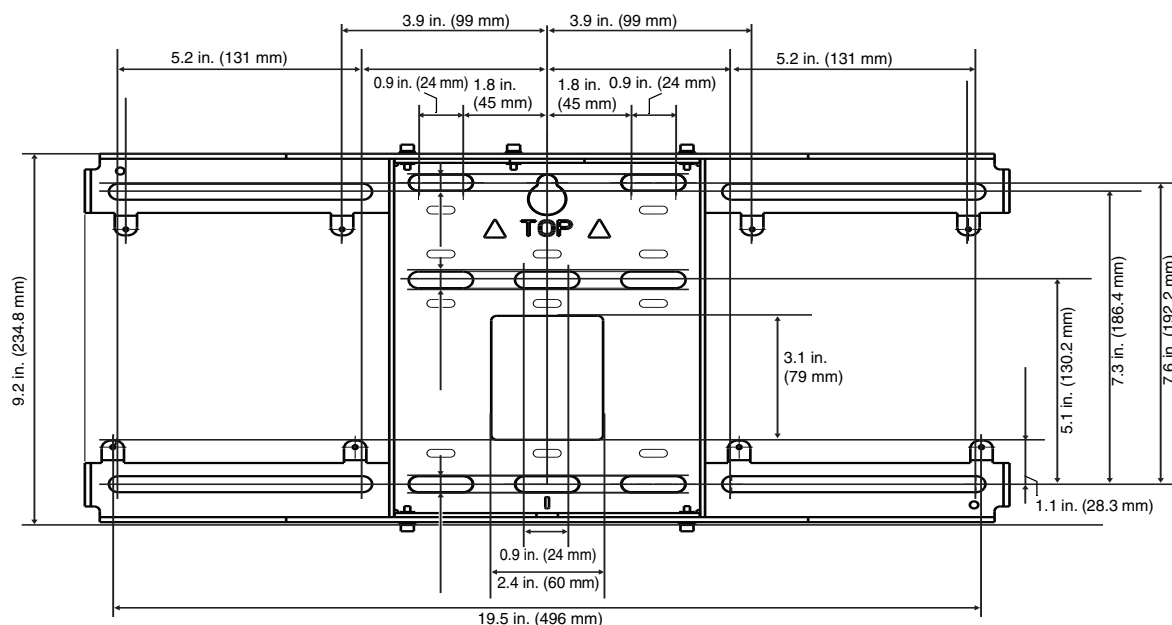

Vertical slide adjustment range

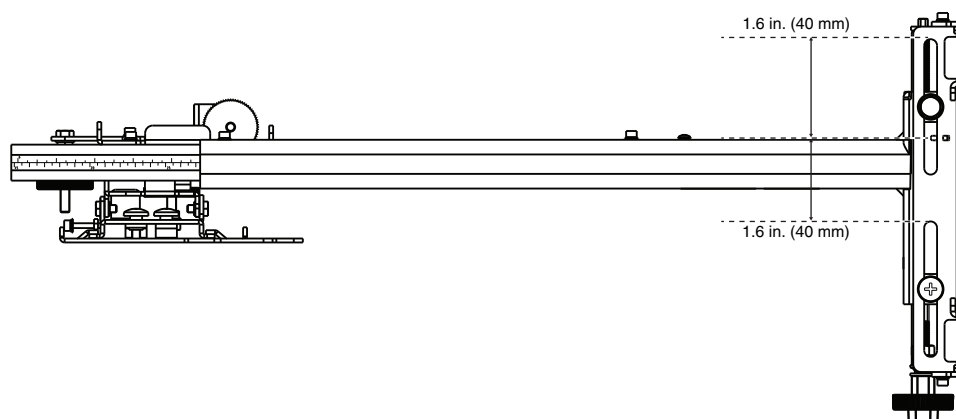


Horizontal slide adjustment range

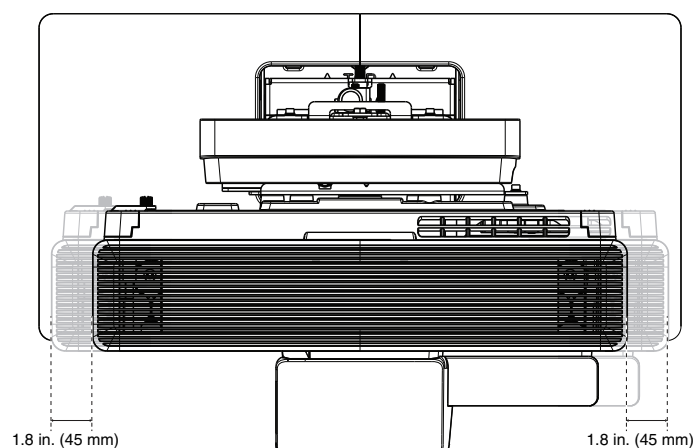

Forward/backward slide adjustment range


Arm slide adjustment range

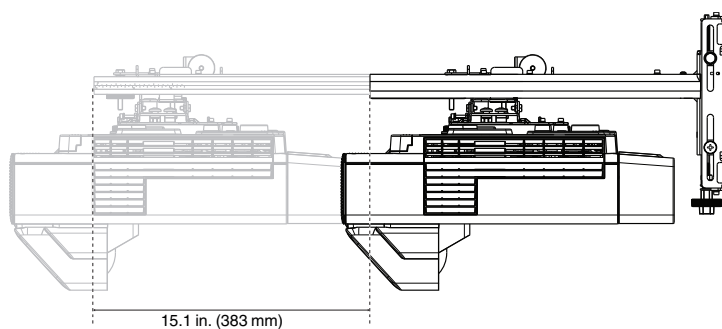


Adjustment from 3-axis adjustment unit installation position

By changing the installation position of the 3-axis adjustment unit to the front or back, you can adjust the installation position of the projector.

When the screen size is less than 80 inches, install it at the position marked with a ○ stamp on the mount arm.

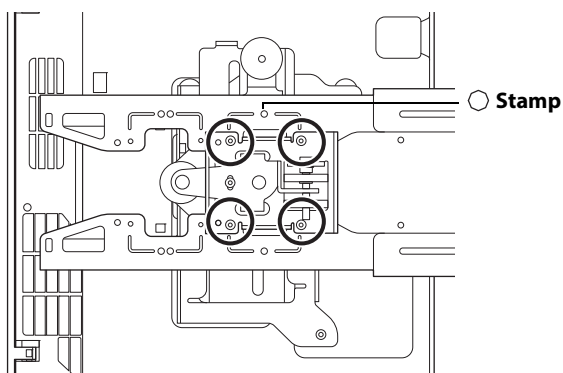

When the screen size is 80 inches or more, install it at the position marked with a ○○ stamp on the mount arm.

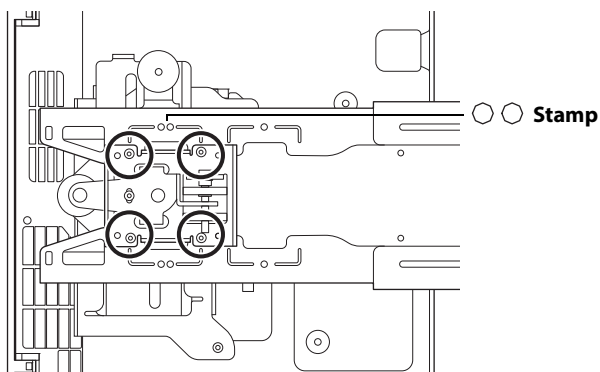


To see these stamps, you need to remove the two top bolts and slide out the arm extension.

Touch unit (included with BrightLink 1485Fi/1485Fi+)

External dimensions and weight

The touch unit weighs approximately 21.2 ounces (600 g).

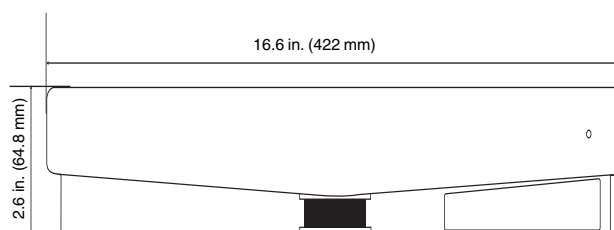

Attached labels

The touch unit is a Class 1 laser product that conforms to the IEC/EN60825-1:2014 standard. There are warning labels affixed to the touch unit to indicate that it is a Class 1 laser product. The labels contain the following information:


- Class 1 laser product
- Warning: Never open any covers on this unit. Laser product inside.
- Warning:
 - Caution: Class 3B invisible laser radiation when open.
 - Avoid exposure to the beam.



Laser diffusion port

The laser beam is diffused from the laser diffusion ports on the bottom of the touch unit.


- Light source output: Max. 285 W
- Wavelength: 932 to 952 nm

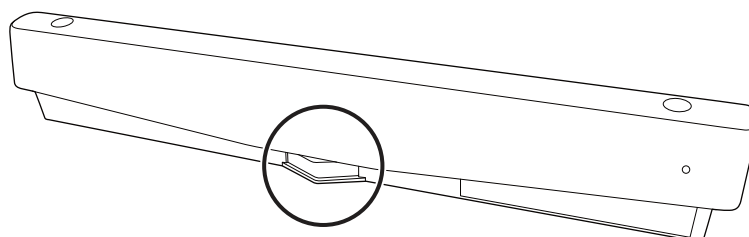

Control pad (BrightLink 1485Fi/1485Fi+ only)


External dimensions and weight

The control pad weighs approximately 22.2 ounces (630 g).

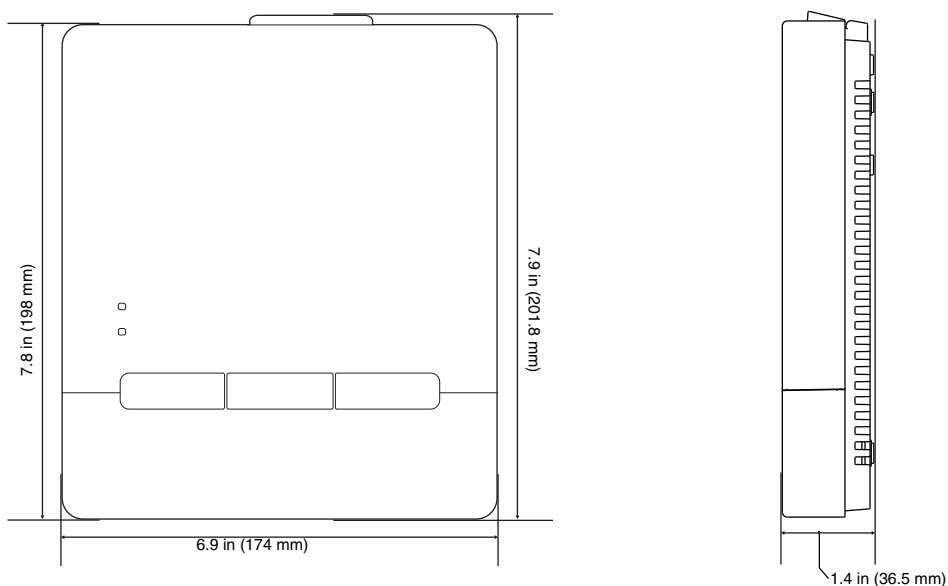



Cable routing holes

When routing cables, use the positions (**A**) in the following figure as the cable routing holes. Route the power cable along the groove on the back of the control pad (**B**).

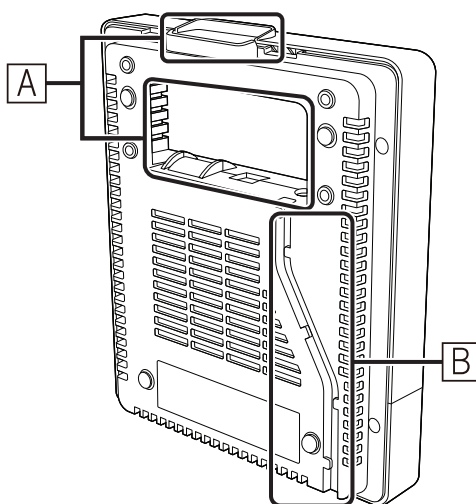

Pen stand external dimensions and weight

The pen stand weighs approximately 3.3 ounces (93 g).

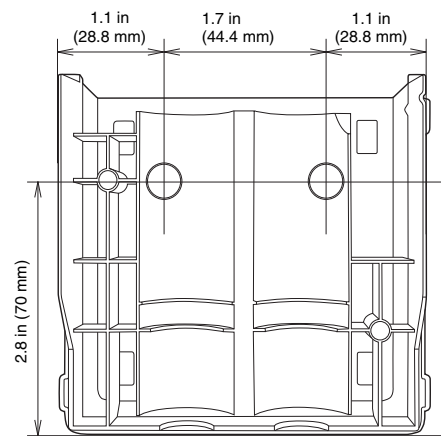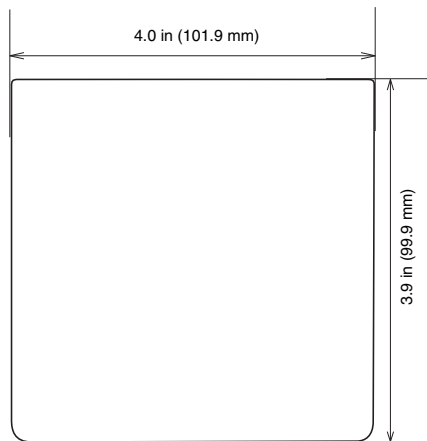


3 Connecting Devices

Make sure you have the power cord, computer cable, and other parts at the location where the wall mount is to be installed. Make sure you also have all necessary cables for the Touch Unit (if applicable) and other devices, such as a document camera or microphone, that you will connect to the projector. Your projector's connection panel may differ slightly from the model in the illustrations. For details, refer to the online *User's Guide* for your projector.



The connection example below shows the control pad (included with the BrightLink 1485 Fi/Fi+ only).

Connection Example

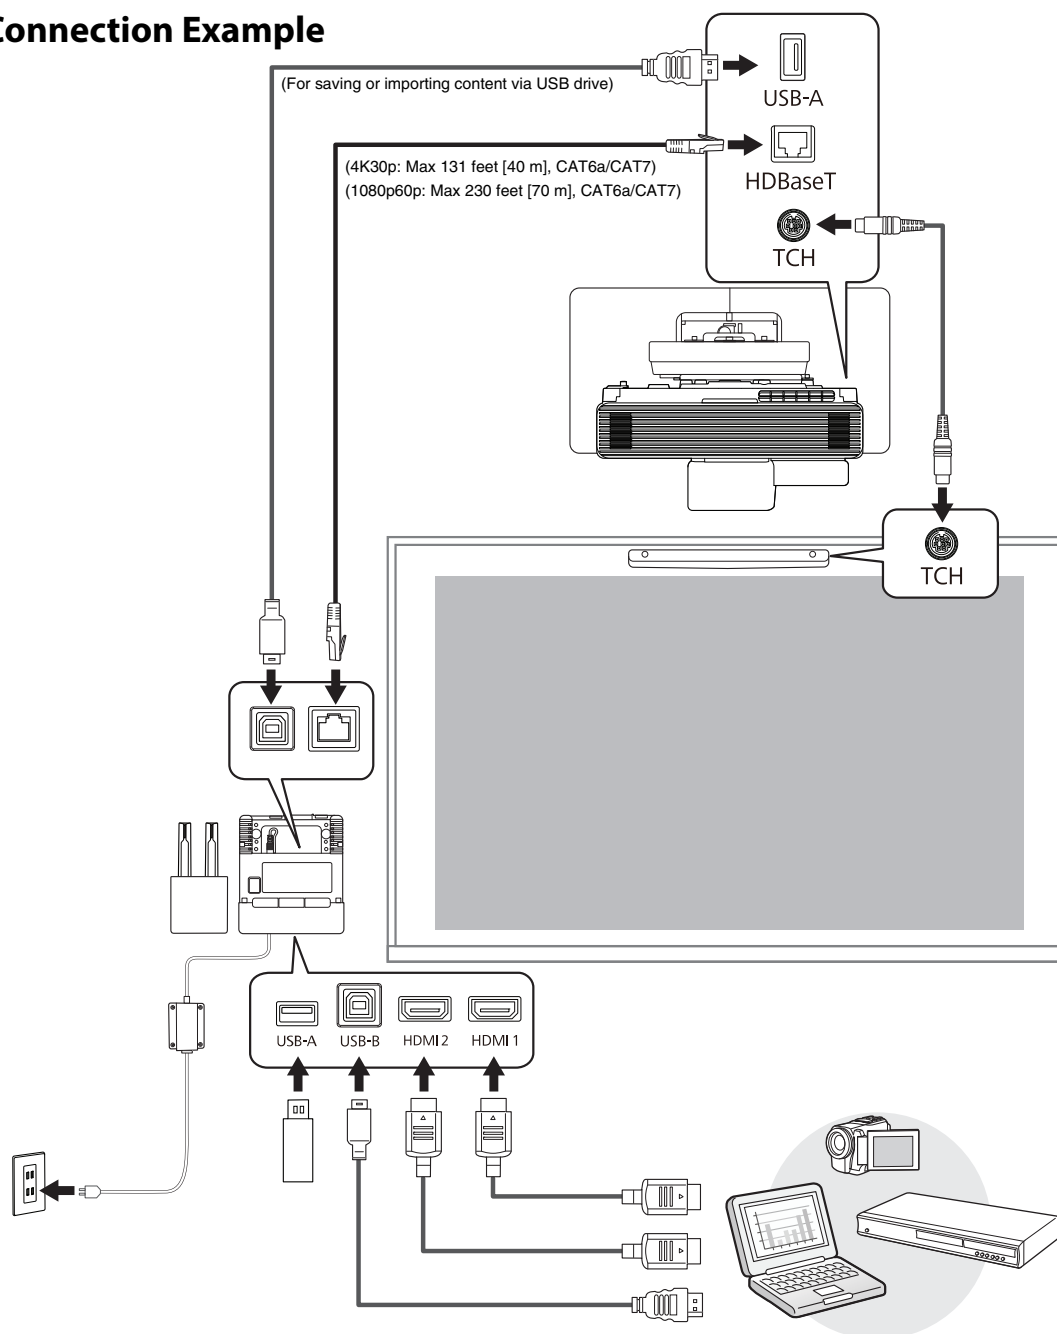

For Interactive Use

When interacting with a computer, you also need a USB cable that runs from the computer to the projector. However, when using the projector's built-in toolbar, you do not need this USB cable.

Connecting the Control Pad

The Control Pad is included with the BrightLink Pro 1485Fi/Fi+. It provides a convenient alternative for turning on and controlling your projector.

You must install the projector before installing the control pad. See page 80 for instructions.

4 Positioning the Projector

The BrightLink 1480Fi/1480Fi+/1485Fi/1485Fi+ can project a 16:10 image up to 90 inches diagonally, a 16:9 image up to 100 inches diagonally, a 4:3 image up to 80 inches diagonally, or a 16:6 (BrightLink 1485Fi/1485Fi+ only) or 21:9 image up to 120 inches diagonally.



This guide covers select image sizes. For other image sizes, use the Throw Distance Calculator at www.epson.com/support (U.S.), www.epson.ca/support (Canada), or www.epson.com.jm/support (Latin America).

You can project onto a pre-installed whiteboard or directly onto a plain wall.

The height of the included wall mount determines the maximum image size and how high the image appears on the wall or whiteboard. The distance of the projector from the wall (once it is mounted on the adjustable arm of the wall mount) also affects image size and position.

If you want to install the Touch Unit outside of the frame of a whiteboard, use the optional Touch Unit Bracket. If the distance from the wall to the surface of the whiteboard is greater than 2 inches (51 mm) or the frame of the whiteboard extends more than 0.1 inch (3 mm) away from the board surface, you must install the Touch Unit on the whiteboard or screen.

If you are planning to project on a whiteboard, the image may not fill the entire board, depending on the aspect ratio. If you match the image height to the board's height, gaps may appear on the sides of the board.

Use the following worksheets to determine the proper location of the wall plate on the wall. If you are projecting onto a pre-installed whiteboard, use the worksheet on page 22. If you are projecting on a plain wall, use the worksheet on page 24.




When installing the Touch Unit on a whiteboard (if applicable), make sure there are no cables, whiteboard trays, pen holders, or thick frames in the following areas around the edge of the board:

- ☐ **From the top of the projected image to the bottom of the Touch Unit: 0.79 to 2 inches (20 to 50 mm) for 16:6 (BrightLink 1485Fi/1485Fi+ only) and 21:9 aspect ratios; 0.22 to 2 inches (5.7 to 50 mm) for all other aspect ratios**
- ☐ **From the edges of the projected image to the edges of the board: at least 4 inches (100 mm) left and right**
- ☐ **From the bottom of the projected image to the bottom of the board: 0.8 inch (20 mm)**

If there are obstacles such as within the areas listed above, the Touch Unit will not operate properly.

Installation worksheet for projecting on a pre-installed wall-mounted board

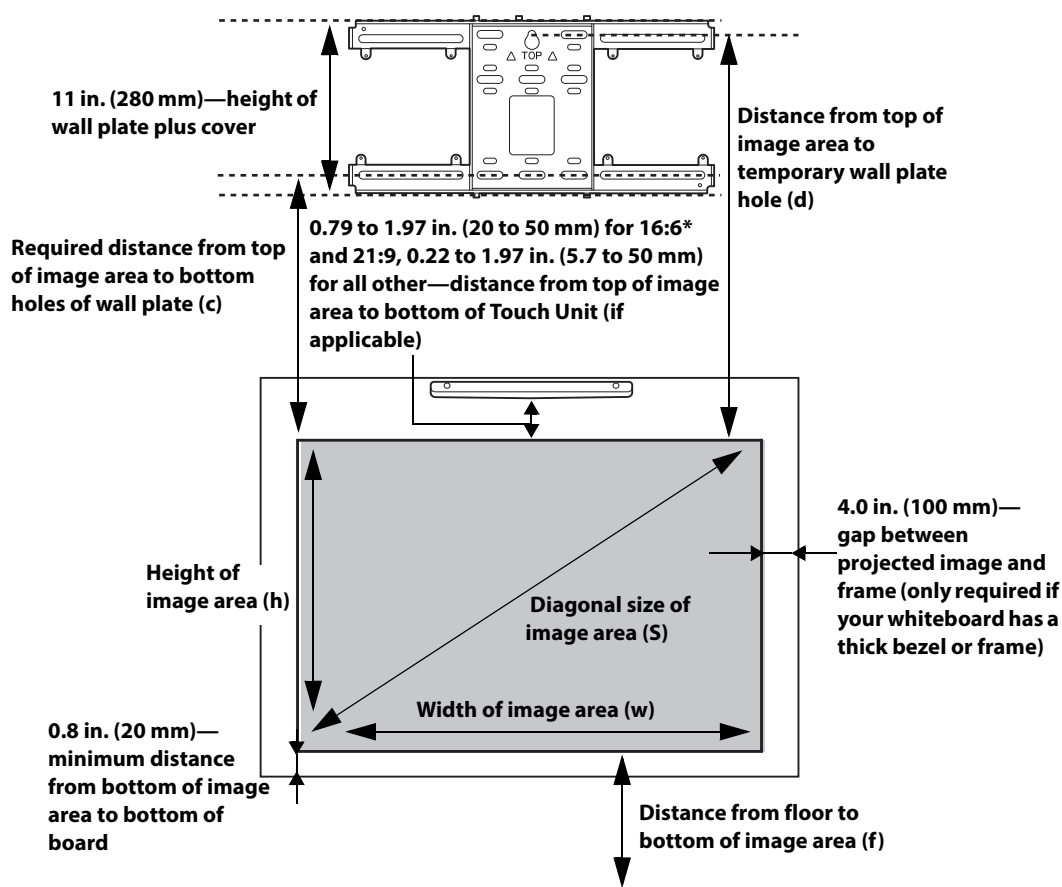

*BrightLink 1485Fi/1485Fi+ only.



If you want to install the Touch Unit outside of the frame of a whiteboard, use the optional Touch Unit Bracket. If the distance from the wall to the surface of the whiteboard is greater than 2 inches (51 mm) or the frame of the whiteboard extends more than 0.1 inch (3 mm) away from the board surface, you must install the Touch Unit on the whiteboard or screen.

See page 55 for details on mounting the Touch Unit.

1. Measure the ceiling height (distance from the floor to the ceiling). _____
2. Measure the height of the board's image area (h). _____ (h)
3. Measure the width of the board's image area (w). _____ (w)
4. Measure the distance from the floor to the bottom of the board's image area (f). _____ (f)
5. Measure the thickness of the board (distance from the projection surface to the wall) _____ (x).

6. Determine the aspect ratio of the board or of the images that will be projected. You may need to consult your IT department for this information.


___ 4:3 XGA ___ 16:10 WXGA/WUXGA ___ 16:9 Widescreen ___ 16:6* ___ 21:9

**BrightLink 1485Fi/1485Fi+ only.*

If your desired aspect ratio does not match the native aspect ratio of your product, use the Throw Distance Calculator at www.epson.com/support (U.S.), www.epson.ca/support (Canada), or www.epson.com.jm (Latin America) to determine the correct measurements.

7. Using the tables on pages 30 to 32 and your desired image height (h), find the required distance between the top of the image area and the bottom holes of the wall plate (c). _____ (c)
8. Using the tables on pages 30 to 32 and your desired image height (h), find the required distance between the top of the image area and the temporary wall plate hole (d). _____ (d)
9. Determine the position for your projector installation by adding the values for (f), (h), and (c), plus an additional 10 inches for the height of the wall plate plus the cover. _____ (f)
 _____ (h)
 _____ (c)
 If the ceiling height of your room (as noted in step 1) does not meet the minimum ceiling height required for your board, you may need to select a smaller image size or move the board to a lower position on the wall. ± 11 inches
 _____ total
10. After confirming your image size, use tape or a pencil to mark the distance (c) from the top of the image area on the board to the bottom holes of the wall plate.
11. Align the ★ line (horizontal) on the template sheet with the (c) mark, then align the center line on the template sheet with the center of the image area. Follow the instructions on page 33 to install the projector.

Installation worksheet for projecting on a plain wall

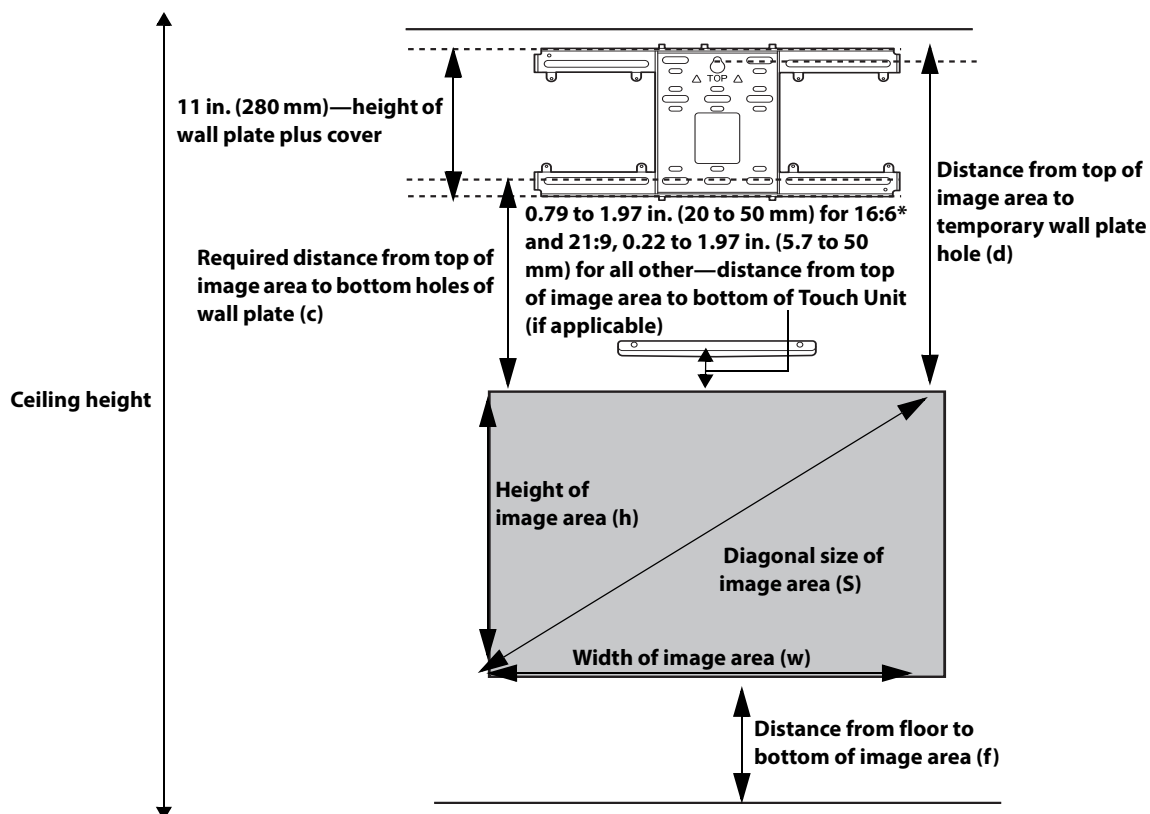

**BrightLink 1485Fi/1485Fi+ only.*

1. Measure the ceiling height (distance from the floor to the ceiling). _____
2. Determine the aspect ratio of the board or of the images that will be projected. You may need to consult your IT department for this information.

___ 4:3 XGA ___ 16:10 WXGA/WUXGA ___ 16:9 Widescreen ___ 16:6* ___ 21:9

**BrightLink 1485Fi/1485Fi+ only.*

If your desired aspect ratio does not match the native resolution of your product, use the Throw Distance Calculator at www.epson.com/support (U.S.), www.epson.ca/support (Canada), or www.epson.com.jm (Latin America) to determine the correct measurements.

3. Using the tables on pages 30 to 32, select the largest image size available for your ceiling height.
 - Image height (h) _____ (h)
 - Image width (w) _____ (w)
4. Determine the desired distance from the floor to the bottom of the image area (f). _____ (f)

The recommended minimum distance is 30 inches (762 mm). Images appearing less than 28 inches (711 mm) from the floor may be obstructed for some viewers.
5. Find the top of the projected image area by adding distances (f) and (h). _____
6. Use the tables on pages 30 to 32 to determine the required distance from the top of the image area to the bottom holes of the wall plate (c). _____ (c)
7. Use the tables on pages 30 to 32 to determine the required distance between the top of the image area and the temporary wall plate hole (d). _____ (d)


8. Add:
- | | |
|--|--------------------|
| Required distance from top of image area to bottom holes of wall plate (c) | _____ (c) |
| Height of image area (h) | _____ (h) |
| Distance from floor to bottom of image area (f) | _____ (f) |
| Height of wall plate plus cover | <u>+ 11</u> inches |
| If the total exceeds the ceiling height, you will need to reduce the image size or reduce the distance from the floor to the bottom of the image area. | _____ total |
9. After confirming your image size, use tape or a pencil to mark the distance (c) from the top of the image area on the board to the bottom holes of the wall plate.
10. Align the ★ line (horizontal) on the template sheet with the (c) mark, then align the center line on the template sheet with the center of the image area. Follow the instructions on page 33 to install the projector.

Projection distance worksheets

The tables on the following pages provide installation information for select image sizes. The minimum ceiling height is based on an image 30 inches (762 mm) from the floor; if the image is lower, the minimum ceiling height is reduced by the corresponding measurement.


Use the worksheets, the illustrations, and the information in the tables on the following pages to determine the projection distance and placement of the wall plate.

Diagonal image size and mounting position

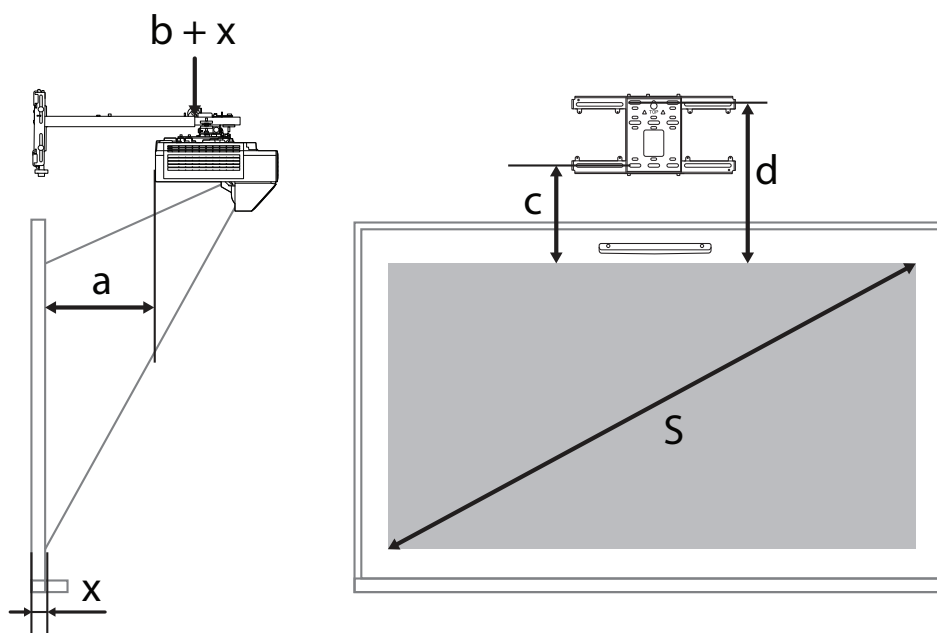


In order to see the stamp and the numbers on the slider scale (b), you need to slide out the arm extension.

When the diagonal image size is 80 inches or more, mount the 3-axis adjustment unit at the position marked with a ○ ○ stamp.

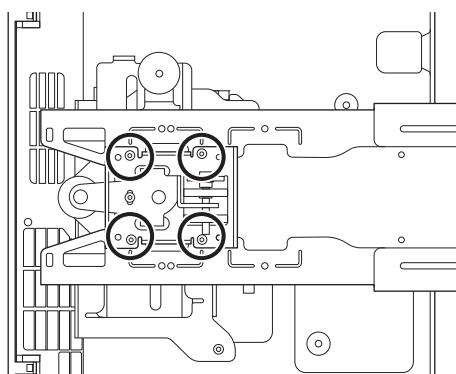


When the diagonal image size is less than 80 inches, mount the 3-axis adjustment unit at the position marked with a ○ stamp.

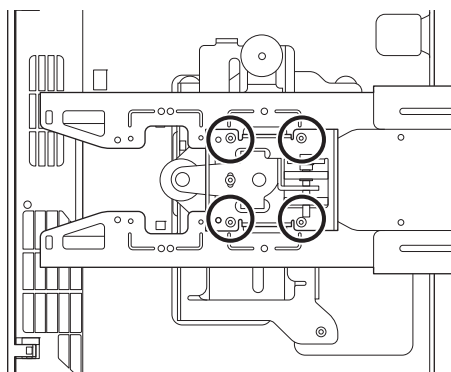

Distance from top of projected image to wall plate

The distance (c) from the top of the projected image to the bottom mounting holes on the wall plate is the number given when the vertical slide is set to the base position, as shown below.

Match the notch on the wall mount to the position of the stamp on the wall plate.

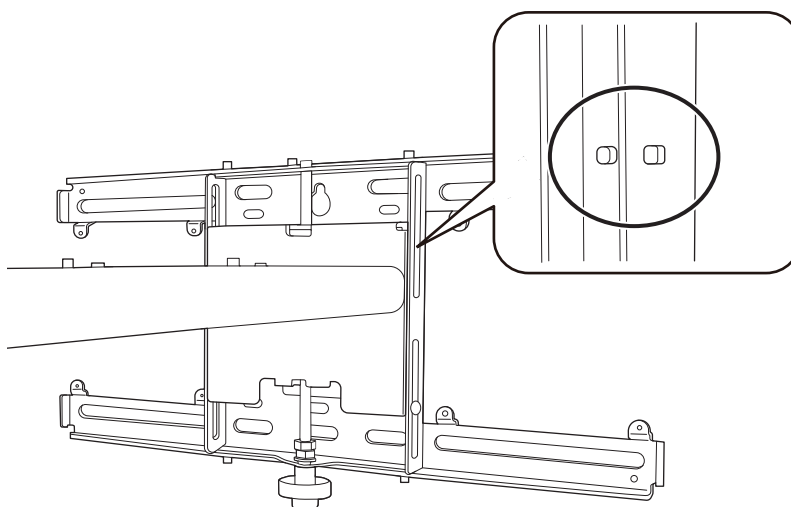

Installation measurement tables

Use the following installation measurement tables for your projector.



The measurements may differ depending on the location where you place the projector. When projecting in Tele mode, the quality of the projected images may decrease.

When projecting in the 16:6 or 21:9 aspect ratio, the projected image has black bars above and below it by default. You can use the Screen Position setting to move the projected image to the top of the screen and the black bars below the image. Note that the distance from the top of the image to the bottom wall plate holes (c) or temporary wall plate hole (d) will vary if you change the Screen Position setting. The distance tables for the 16:6 and 21:9 aspect ratios include measurements for both the default Screen Position setting and measurements for an image that has been adjusted to sit at the top of the projection screen.

Measurements in Inches for 16:9 Aspect Ratio

| Diagonal image size (S) | Min. ceiling height* | Image width (w) | Image height (h) | Min. projection distance (a) | Sliderscale mark (b) | Distance from top of image to bottom wall plate holes (c) | Distance from top of image to temporary wall plate hole (d) |
|-------------------------|----------------------|-----------------|------------------|------------------------------|----------------------|---|---|
| 65" | 80.8 | 56.7 | 31.9 | 6.2 | 5.8 | 7.9 | 15.5 |
| 70" | 83.6 | 61.0 | 34.3 | 7.5 | 7.1 | 8.2 | 15.8 |
| 75" | 85.8 | 65.4 | 36.3 | 8.7 | 8.3 | 8.5 | 16.0 |
| 80" | 89.1 | 69.7 | 39.2 | 10.0 | 6.1 | 8.9 | 16.4 |
| 85" | 91.8 | 74.1 | 41.7 | 11.2 | 7.4 | 9.2 | 16.7 |
| 90" | 94.6 | 78.4 | 44.1 | 12.4 | 8.6 | 9.5 | 17.0 |
| 95" | 97.4 | 82.8 | 46.6 | 13.7 | 9.9 | 9.8 | 17.4 |
| 100" | 100.1 | 87.2 | 49.0 | 15.0 | 11.1 | 10.1 | 17.7 |

* Based on an image 30 inches from the floor; if the image is lower, the minimum ceiling height is reduced by the corresponding measurement.

Measurements in Centimeters for 16:9 Aspect Ratio

| Diagonal image size (S) | Min. ceiling height* | Image width (w) | Image height (h) | Min. projection distance (a) | Sliderscale mark (b) | Distance from top of image to bottom wall plate holes (c) | Distance from top of image to temporary wall plate hole (d) |
|-------------------------|----------------------|-----------------|------------------|------------------------------|----------------------|---|---|
| 65" | 205.2 | 143.9 | 80.9 | 15.8 | 14.8 | 20.1 | 39.3 |
| 70" | 212.3 | 155.0 | 87.2 | 19.0 | 18.0 | 20.9 | 40.1 |
| 75" | 218.0 | 166.0 | 92.1 | 22.1 | 21.1 | 21.7 | 40.7 |
| 80" | 226.3 | 177.1 | 99.6 | 25.3 | 15.6 | 22.5 | 41.7 |
| 85" | 233.3 | 188.2 | 105.8 | 28.5 | 18.8 | 23.3 | 42.5 |
| 90" | 240.4 | 199.2 | 112.1 | 31.6 | 21.9 | 24.1 | 43.3 |
| 95" | 247.4 | 210.3 | 118.3 | 34.8 | 25.1 | 24.9 | 44.1 |
| 100" | 254.4 | 221.4 | 124.5 | 38.0 | 28.3 | 25.7 | 44.9 |

* Based on an image 76.2 cm from the floor; if the image is lower, the minimum ceiling height is reduced by the corresponding measurement.

Measurements in Inches for 16:6 Aspect Ratio (BL 1485Fi/1485Fi+)

| Diagonal image size (S) | Min. ceiling height* | Image width (w) | Image height (h) | Min. proj. distance (a) | Sliderscale mark (b) | Default Screen Position | | Screen Position max. (top) | |
|-------------------------|----------------------|-----------------|------------------|-------------------------|----------------------|---|---|---|---|
| | | | | | | Distance from top of image to bottom wall plate holes (c) | Distance from top of image to temporary wall plate hole (d) | Distance from top of image to bottom wall plate holes (c) | Distance from top of image to temporary wall plate hole (d) |
| 65" | 77.7 | 60.9 | 22.8 | 7.4 | 7.0 | 13.9 | 21.5 | 8.2 | 15.7 |
| 70" | 80.3 | 65.6 | 24.6 | 8.8 | 8.4 | 14.7 | 22.2 | 8.5 | 16.1 |
| 75" | 82.8 | 70.2 | 26.3 | 10.1 | 9.7 | 15.5 | 23.0 | 8.9 | 16.5 |
| 80" | 85.3 | 74.9 | 28.1 | 11.5 | 7.6 | 16.3 | 23.8 | 9.2 | 16.8 |
| 85" | 87.9 | 79.6 | 29.8 | 12.8 | 9.0 | 17.0 | 24.6 | 9.6 | 17.2 |
| 90" | 90.4 | 84.3 | 31.6 | 14.1 | 10.3 | 17.8 | 25.4 | 9.9 | 17.5 |
| 95" | 93.0 | 88.9 | 33.3 | 15.5 | 11.7 | 18.6 | 26.2 | 10.3 | 17.8 |
| 100" | 95.5 | 93.6 | 35.1 | 16.8 | 13.0 | 19.4 | 26.9 | 10.6 | 18.1 |
| 105" | 98.0 | 98.3 | 36.9 | 18.1 | 14.3 | 20.2 | 27.7 | 10.9 | 18.5 |
| 110" | 100.6 | 103.0 | 38.6 | 19.5 | 15.7 | 20.9 | 28.5 | 11.3 | 18.9 |
| 115" | 103.1 | 107.7 | 40.4 | 20.8 | 17.0 | 21.7 | 29.3 | 11.6 | 19.2 |
| 120" | 105.6 | 112.4 | 42.1 | 22.2 | 18.3 | 22.5 | 30.1 | 12.0 | 19.6 |

* Based on an image 30 inches from the floor; if the image is lower, the minimum ceiling height is reduced by the corresponding measurement.

Measurements in Centimeters for 16:6 Aspect Ratio (BL 1485Fi/1485Fi+)

| Diagonal image size (S) | Min. ceiling height* | Image width (w) | Image height (h) | Min. proj. distance (a) | Sliderscale mark (b) | Default Screen Position | | Screen Position max. (top) | |
|-------------------------|----------------------|-----------------|------------------|-------------------------|----------------------|---|---|---|---|
| | | | | | | Distance from top of image to bottom wall plate holes (c) | Distance from top of image to temporary wall plate hole (d) | Distance from top of image to bottom wall plate holes (c) | Distance from top of image to temporary wall plate hole (d) |
| 65" | 197.5 | 154.6 | 58.0 | 18.9 | 17.9 | 35.3 | 54.5 | 20.8 | 40.0 |
| 70" | 203.9 | 166.5 | 62.4 | 22.3 | 21.3 | 37.3 | 56.5 | 21.7 | 40.9 |
| 75" | 210.4 | 178.4 | 66.9 | 25.7 | 24.7 | 39.3 | 58.5 | 22.6 | 41.8 |
| 80" | 216.8 | 190.3 | 71.3 | 29.1 | 19.4 | 41.3 | 60.5 | 23.5 | 42.7 |
| 85" | 223.3 | 202.2 | 75.8 | 32.5 | 22.8 | 43.3 | 62.5 | 24.4 | 43.6 |
| 90" | 229.8 | 214.0 | 80.3 | 35.9 | 26.2 | 45.3 | 64.5 | 25.2 | 44.4 |
| 95" | 236.2 | 225.9 | 84.7 | 39.3 | 29.6 | 47.3 | 66.5 | 26.1 | 45.3 |
| 100" | 242.6 | 237.8 | 89.2 | 42.7 | 33.0 | 49.2 | 68.4 | 26.9 | 46.1 |
| 105" | 249.0 | 249.7 | 93.6 | 46.1 | 36.4 | 51.2 | 70.4 | 27.8 | 47.0 |
| 110" | 255.5 | 261.6 | 98.1 | 49.5 | 39.8 | 53.2 | 72.4 | 28.7 | 47.9 |
| 115" | 262.0 | 273.5 | 102.6 | 52.9 | 43.2 | 55.2 | 74.4 | 29.6 | 48.8 |
| 120" | 268.4 | 285.4 | 107.0 | 56.3 | 46.6 | 57.2 | 76.4 | 30.5 | 49.7 |

* Based on an image 76.2 cm from the floor; if the image is lower, the minimum ceiling height is reduced by the corresponding measurement.

Measurements in Inches for 16:10 Aspect Ratio

| Diagonal image size (S) | Min. ceiling height* | Image width (w) | Image height (h) | Min. projection distance (a) | Sliderscale mark (b) | Distance from top of image to bottom wall plate holes (c) | Distance from top of image to temporary wall plate hole (d) |
|-------------------------|----------------------|-----------------|------------------|------------------------------|----------------------|---|---|
| 61" | 81.3 | 51.7 | 32.3 | 6.5 | 6.1 | 8.0 | 15.5 |
| 65" | 83.7 | 55.1 | 34.4 | 7.5 | 7.1 | 8.2 | 15.8 |
| 70" | 86.7 | 59.4 | 37.1 | 8.9 | 8.5 | 8.6 | 16.1 |
| 75" | 89.7 | 63.6 | 39.8 | 10.2 | 9.8 | 8.9 | 16.5 |
| 80" | 92.7 | 67.8 | 42.4 | 11.6 | 7.8 | 9.3 | 16.9 |
| 85" | 95.6 | 72.1 | 45.0 | 12.9 | 9.1 | 9.6 | 17.2 |
| 90" | 98.7 | 76.3 | 47.7 | 14.3 | 10.5 | 10.0 | 17.5 |

* Based on an image 30 inches from the floor; if the image is lower, the minimum ceiling height is reduced by the corresponding measurement.

Measurements in Centimeters for 16:10 Aspect Ratio

| Diagonal image size (S) | Min. ceiling height* | Image width (w) | Image height (h) | Min. projection distance (a) | Sliderscale mark (b) | Distance from top of image to bottom wall plate holes (c) | Distance from top of image to temporary wall plate hole (d) |
|-------------------------|----------------------|-----------------|------------------|------------------------------|----------------------|---|---|
| 61" | 206.5 | 131.4 | 82.1 | 16.4 | 15.4 | 20.2 | 39.4 |
| 65" | 212.6 | 140.0 | 87.5 | 19.1 | 18.1 | 20.9 | 40.1 |
| 70" | 220.2 | 150.8 | 94.2 | 22.6 | 21.6 | 21.8 | 41.0 |
| 75" | 227.9 | 161.5 | 101.0 | 26.0 | 25.0 | 22.7 | 41.9 |
| 80" | 235.5 | 172.3 | 107.7 | 29.4 | 19.7 | 23.6 | 42.8 |
| 85" | 243.0 | 183.1 | 114.4 | 32.8 | 23.1 | 24.4 | 43.6 |
| 90" | 250.7 | 193.9 | 121.2 | 36.3 | 26.6 | 25.3 | 44.5 |

* Based on an image 76.2 cm from the floor; if the image is lower, the minimum ceiling height is reduced by the corresponding measurement.

Measurements in Inches for 4:3 Aspect Ratio

| Diagonal image size (S) | Min. ceiling height* | Image width (w) | Image height (h) | Min. projection distance (a) | Sliderscale mark (b) | Distance from top of image to bottom wall plate holes (c) | Distance from top of image to temporary wall plate hole (d) |
|-------------------------|----------------------|-----------------|------------------|------------------------------|----------------------|---|---|
| 65" | 88.8 | 52.0 | 39.0 | 9.8 | 9.4 | 8.8 | 16.4 |
| 70" | 92.2 | 56.0 | 42.0 | 11.4 | 11.0 | 9.2 | 16.8 |
| 75" | 95.6 | 60.0 | 45.0 | 12.9 | 12.5 | 9.6 | 17.2 |
| 80" | 99.0 | 64.0 | 48.0 | 14.4 | 10.6 | 10.0 | 17.6 |

* Based on an image 30 inches from the floor; if the image is lower, the minimum ceiling height is reduced by the corresponding measurement.

Measurements in Centimeters for 4:3 Aspect Ratio

| Diagonal image size (S) | Min. ceiling height** | Image width (w) | Image height (h) | Min. projection distance (a) | Sliderscale mark (b) | Distance from top of image to bottom wall plate holes (c) | Distance from top of image to temporary wall plate hole (d) |
|-------------------------|-----------------------|-----------------|------------------|------------------------------|----------------------|---|---|
| 65" | 225.7 | 132.1 | 99.1 | 25.0 | 24.0 | 22.4 | 41.6 |
| 70" | 234.3 | 142.2 | 106.7 | 28.9 | 27.9 | 23.4 | 42.6 |
| 75" | 242.9 | 152.4 | 114.3 | 32.8 | 31.8 | 24.4 | 43.6 |
| 80" | 251.5 | 162.6 | 121.9 | 36.6 | 26.9 | 25.4 | 44.6 |

* Based on an image 76.2 cm from the floor; if the image is lower, the minimum ceiling height is reduced by the corresponding measurement.

Measurements in Inches for 21:9 Aspect Ratio

| Diagonal image size (S) | Min. ceiling height* | Image width (w) | Image height (h) | Min. projection distance (a) | Sliderscale mark (b) | Default Screen Position | | Screen Position max. (top) | |
|-------------------------|----------------------|-----------------|------------------|------------------------------|----------------------|---|---|---|---|
| | | | | | | Distance from top of image to bottom wall plate holes (c) | Distance from top of image to temporary wall plate hole (d) | Distance from top of image to bottom wall plate holes (c) | Distance from top of image to temporary wall plate hole (d) |
| 65" | 78.7 | 59.8 | 25.6 | 7.1 | 6.7 | 12.1 | 19.7 | 8.1 | 15.7 |
| 70" | 81.3 | 64.3 | 27.6 | 8.4 | 8.0 | 12.8 | 20.3 | 8.5 | 16.0 |
| 75" | 84.0 | 68.9 | 29.5 | 9.7 | 9.3 | 13.4 | 21.0 | 8.8 | 16.4 |
| 80" | 86.6 | 73.5 | 31.5 | 11.1 | 7.2 | 14.1 | 21.6 | 9.1 | 16.7 |
| 85" | 89.2 | 78.1 | 33.5 | 12.4 | 8.5 | 14.7 | 22.3 | 9.5 | 17.0 |
| 90" | 91.8 | 82.7 | 35.4 | 13.7 | 9.8 | 15.4 | 22.9 | 9.8 | 17.4 |
| 95" | 94.4 | 87.3 | 37.4 | 15.0 | 11.2 | 16.0 | 23.5 | 10.1 | 17.7 |
| 100" | 97.1 | 91.9 | 39.4 | 16.3 | 12.5 | 16.7 | 24.2 | 10.5 | 18.1 |
| 105" | 99.7 | 96.5 | 41.4 | 17.6 | 13.8 | 17.3 | 24.8 | 10.8 | 18.4 |
| 110" | 102.3 | 101.1 | 43.3 | 18.9 | 15.1 | 17.9 | 25.5 | 11.1 | 18.7 |
| 115" | 104.9 | 105.7 | 45.3 | 20.2 | 16.4 | 18.6 | 26.1 | 11.5 | 19.1 |
| 120" | 107.5 | 110.3 | 47.3 | 21.6 | 17.8 | 19.2 | 26.8 | 11.8 | 19.4 |

* Based on an image 30 inches from the floor; if the image is lower, the minimum ceiling height is reduced by the corresponding measurement.

Measurements in Centimeters for 21:9 Aspect Ratio

| Diagonal image size (S) | Min. ceiling height* | Image width (w) | Image height (h) | Min. projection distance (a) | Sliderscale mark (b) | Default Screen Position | | Screen Position max. (top) | |
|-------------------------|----------------------|-----------------|------------------|------------------------------|----------------------|---|---|---|---|
| | | | | | | Distance from top of image to bottom wall plate holes (c) | Distance from top of image to temporary wall plate hole (d) | Distance from top of image to bottom wall plate holes (c) | Distance from top of image to temporary wall plate hole (d) |
| 65" | 200.0 | 151.8 | 65.0 | 18.1 | 17.1 | 30.8 | 50.0 | 20.6 | 39.8 |
| 70" | 206.6 | 163.4 | 70.0 | 21.4 | 20.4 | 32.4 | 51.6 | 21.5 | 40.7 |
| 75" | 213.3 | 175.1 | 75.0 | 24.7 | 23.7 | 34.1 | 53.3 | 22.4 | 41.6 |
| 80" | 219.9 | 186.8 | 80.0 | 28.1 | 18.4 | 35.7 | 54.9 | 23.2 | 42.4 |
| 85" | 226.6 | 198.4 | 85.0 | 31.4 | 21.7 | 37.4 | 56.5 | 24.1 | 43.3 |
| 90" | 233.2 | 210.1 | 90.0 | 34.7 | 25.0 | 39.0 | 58.2 | 24.9 | 44.1 |
| 95" | 239.9 | 221.8 | 95.1 | 38.1 | 28.4 | 40.6 | 59.8 | 25.7 | 44.9 |
| 100" | 246.6 | 233.5 | 100.1 | 41.4 | 31.7 | 42.3 | 61.5 | 26.7 | 45.9 |
| 105" | 253.2 | 245.1 | 105.1 | 44.8 | 35.1 | 43.9 | 63.1 | 27.5 | 46.7 |
| 110" | 259.8 | 256.8 | 110.1 | 48.1 | 38.4 | 45.5 | 64.7 | 28.3 | 47.5 |
| 115" | 266.5 | 268.5 | 115.1 | 51.4 | 41.7 | 47.2 | 66.4 | 29.2 | 48.4 |
| 120" | 273.1 | 280.2 | 120.1 | 54.8 | 45.1 | 48.8 | 68.0 | 30.0 | 49.2 |

* Based on an image 76.2 cm from the floor; if the image is lower, the minimum ceiling height is reduced by the corresponding measurement.

5 Installing the Projector

Make sure to follow the steps below to install the wall mount. If you ignore these steps, the wall mount could fall and cause personal injury or property damage.



Warning


- ❑ When you mount the projector on the wall with the wall mount, the wall requires enough strength to hold the projector and the wall mount, as well as the Control Pad and the Touch Unit, if applicable.
This wall mount should be installed on a concrete wall. Confirm the weight of the projector and the wall mount before installation, and maintain the strength of the wall. If the wall is not strong enough, reinforce the wall before installation.
- ❑ The maximum combined weight of the projector and the wall mount is about 41.7 lb (18.9 kg).
- ❑ Do not hang cables over the wall mount.
- ❑ Install the wall mount so that it can sufficiently support the weight of the projector and wall mount, and resist any horizontal vibration. Use M10 or 3/8 inch nuts and bolts and make sure to use appropriate wall anchors for your wall type. Nuts and bolts smaller than M10 or 3/8 inch could cause the wall mount to fall.
- ❑ Epson accepts no responsibility for any damage or injury caused by lack of wall strength or inadequate installation.




1 Assemble the parts

1. Assemble the wall plate.

Assemble the wall plate and two frames into one unit, and secure them with the M4 × 12 mm hexagon socket head cap bolts (×5) supplied.

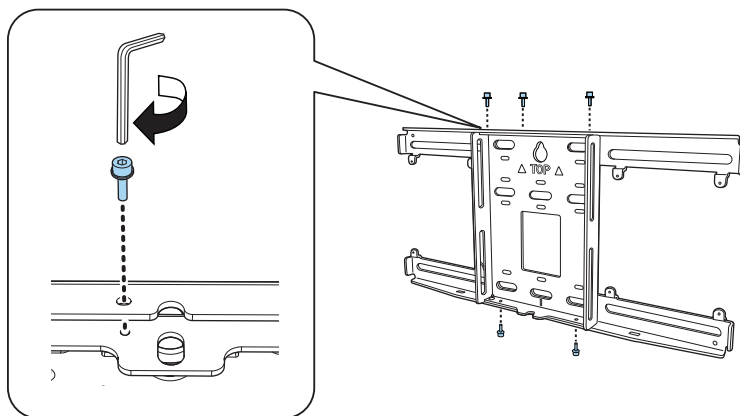


2. Loosen the two screws with a cross-head screwdriver and remove the cable cover from the projector.

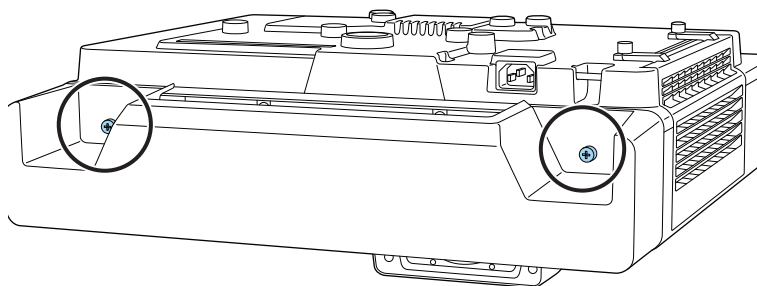


3. Align the 3-axis adjustment unit with the slide plate's alignment mark.

If the 3-axis adjustment unit is not aligned, loosen the M4 × 12 mm hexagon socket head cap bolt (①) and correct the alignment (②). Then, tighten the M4 × 12 mm hexagon socket head cap bolt.

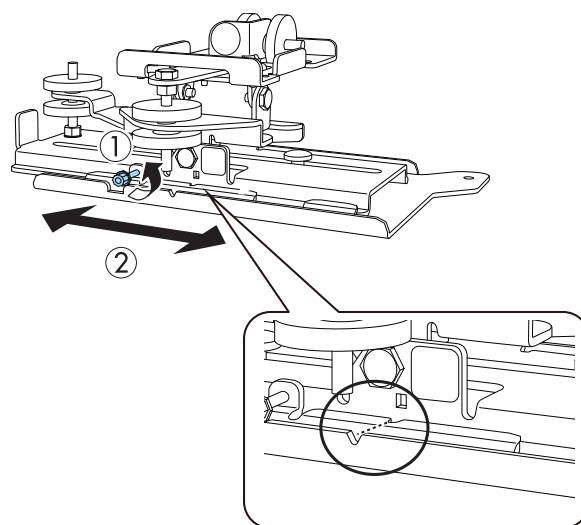


4. Attach the 3-axis adjustment unit and slide plate to the projector.

Attach the 3-axis adjustment unit and slide plate to the projector using the M4 × 12 mm hexagon socket head cap bolts (×4) supplied.

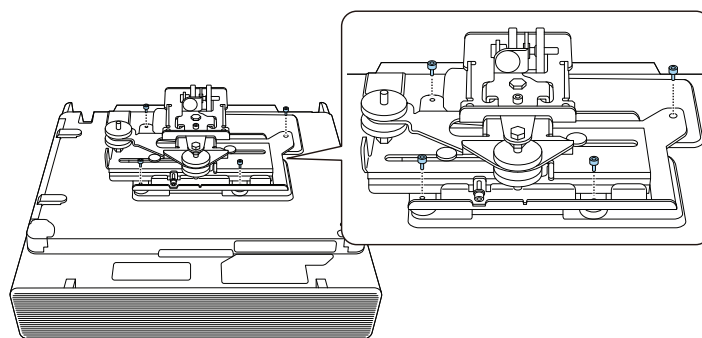


2 Install the wall plate on the wall

1. Determine the template sheet position and attach it to the wall.
 - Confirm where the beams or studs are within the wall that can support the projector and wall mount.
 - From the projection distance table, confirm the screen size (S), the distance between the projection image and wall plate bottom holes (c), and the distance between the projection image and temporary wall plate hole (d).
 - Align the center line (vertical) of the template sheet with the center line (vertical) of the projection surface.
 - Align the ★ lines (horizontal) on the template with the height of (c) and (d).

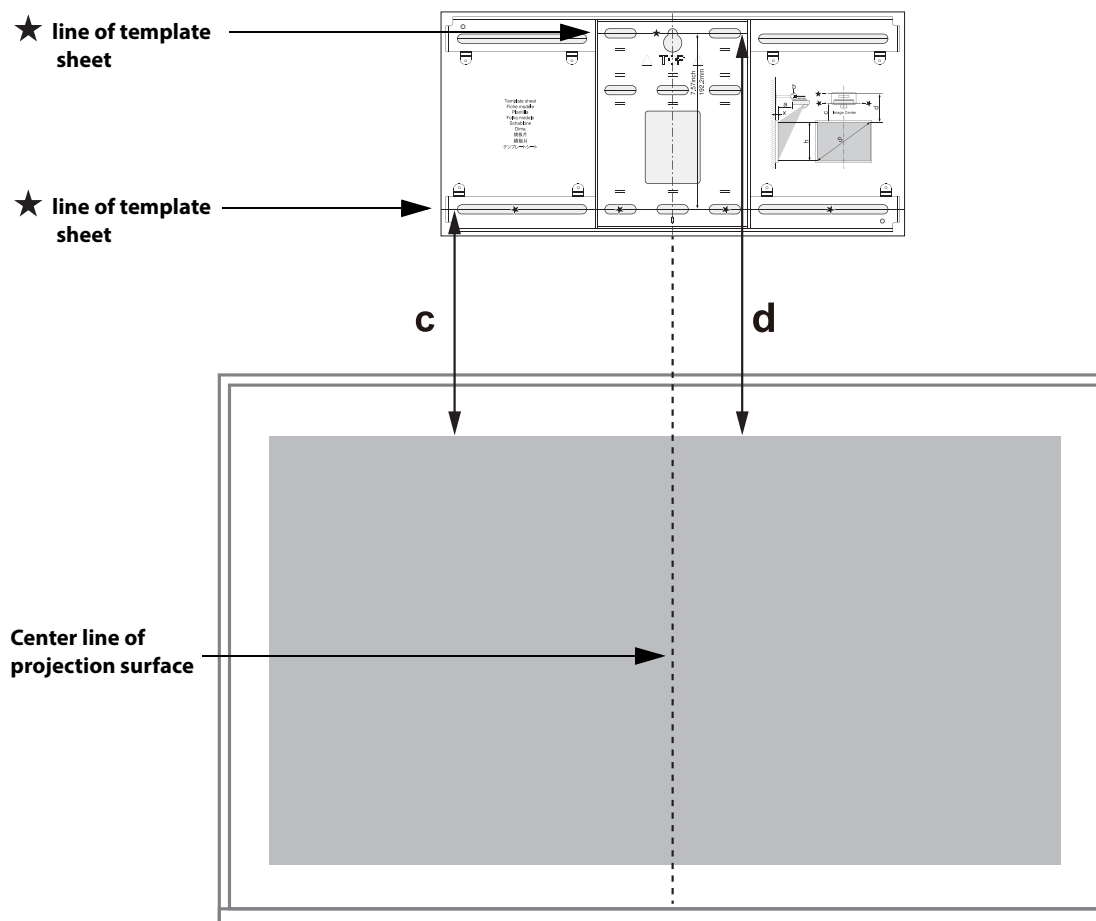


If you want to hide the projector power plug under the wall plate cover, make sure the power outlet is located in the empty space to the left or the right of the wall plate.

2. Drive an M10 screw (not included) into the temporary wall plate hole.
Leave at least 0.2 inch (6 mm) between the screw head and the wall.

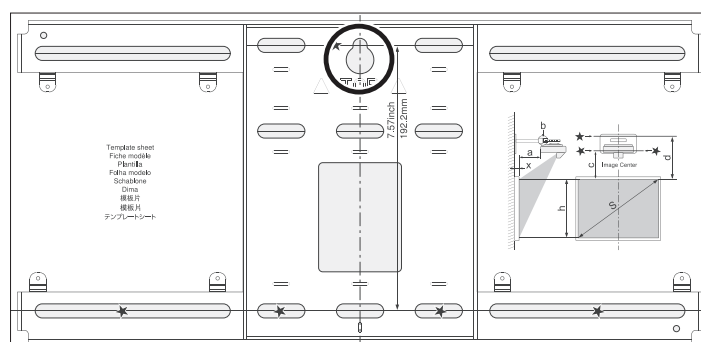


- Determine the position of the wall plate's mounting holes.
Use at least four mounting holes for proper balance.

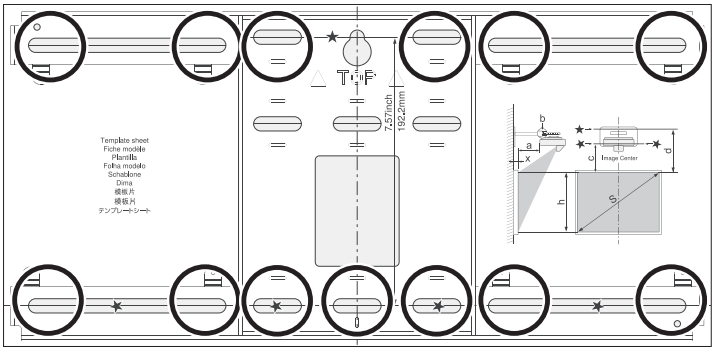


- Drill holes of the following diameters and depths.


| | |
|--------------------------|---|
| Drill diameter | 3/8 inch anchor bolts: 0.39 in. (10 mm) M10 anchor bolts: 0.41 in. (10.5 mm) |
| Pilot hole depth | 1.8 in. (45 mm) |
| Anchor hole depth | 1.6 in. (40 mm) |

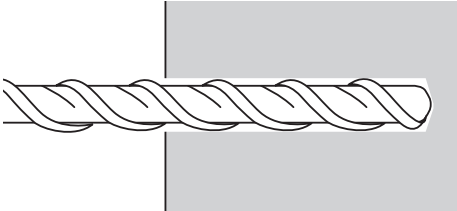


- Remove the template sheet.
- If necessary, use a device such as a dust pump to clean out concrete dust from the hole.

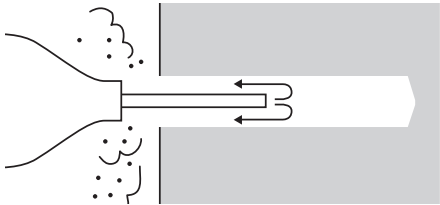

- Position the wall plate on the temporary wall plate screw.

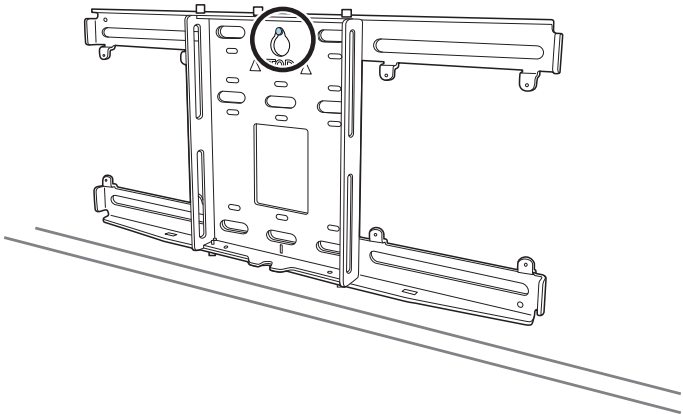

8. Insert commercially available M10 × 60 mm or 3/8 inch anchors into the holes and secure them in place.

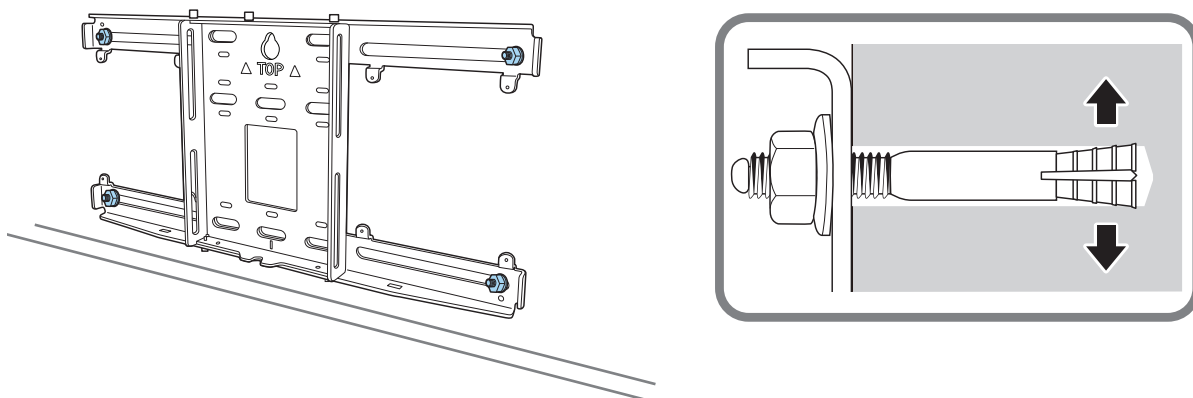


9. Remove the temporary wall plate screw.

3 Determine the projection distance and pull out the mount arm slider


1. Using the tables on pages 30 to 32, check the number for the slider measure (b).
2. Loosen the M4 × 12 mm hexagon socket head cap bolts (×2), and then pull out the slider on the wall mount.

Align the slider with the measure (b+x) that is equal to the slider measure (b) plus the thickness of the projection screen (x).

For an illustration of how to measure the thickness of the projection screen (x), see page 26.

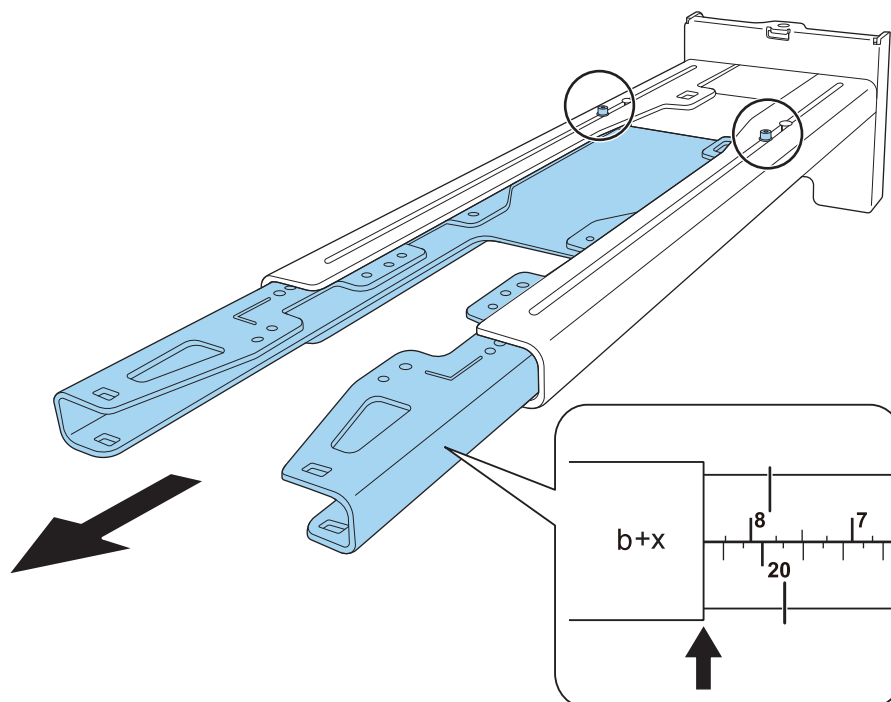


4 Route the cables through the wall mount arm

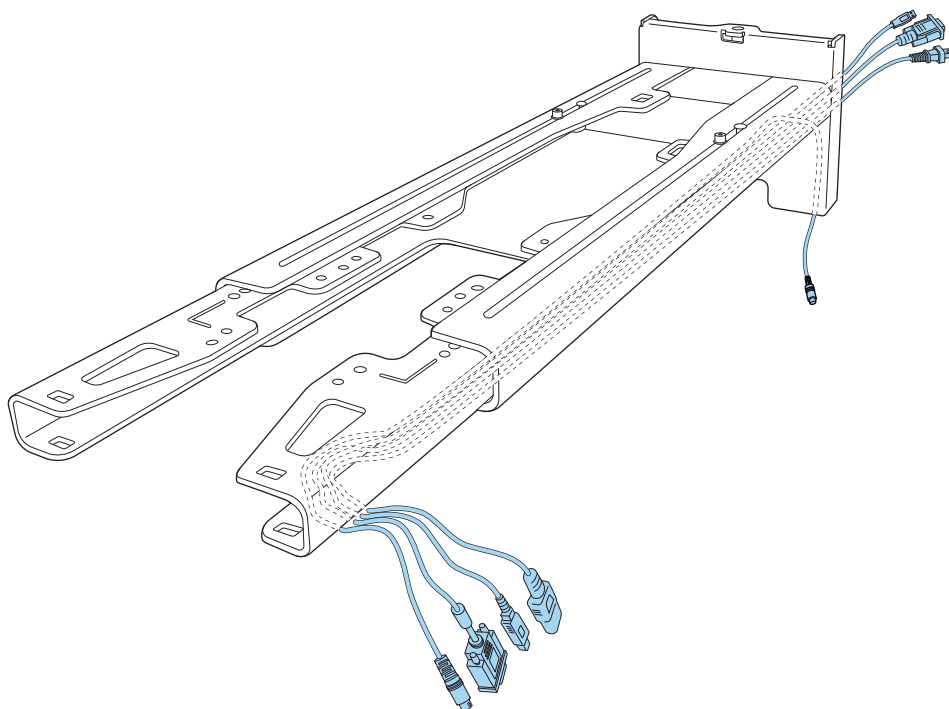

BrightLink 1485 Fi/Fi+: Make sure to route the Touch Unit connection cable through the wall mount arm. Route the Touch Unit connection cable so that the end that connects to the Touch Unit appears from the lower part of the wall mount as shown above.

5 Attach the mount arm to the wall plate


1. Insert the hexagonal shaft into the wall mount ((1)).
2. Insert and turn the hexagonal shaft at the top of the mount arm into the slot on the wall plate ((2)).

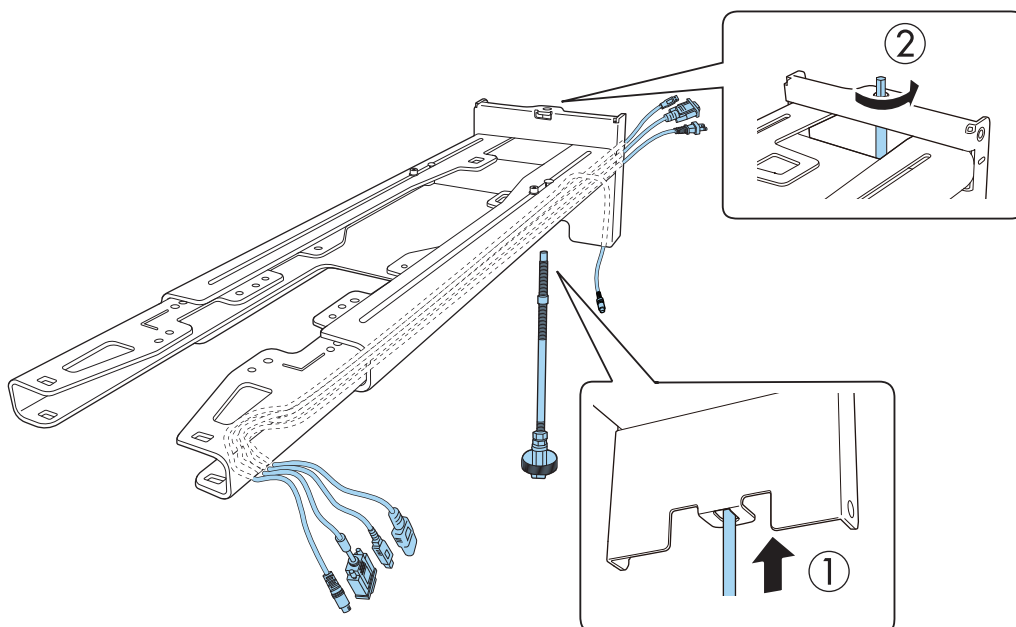


3. Insert the hexagonal shaft into the slot at the top of the wall plate (①).
4. Insert the hexagonal shaft into the slot at the bottom of the wall plate (②).

Caution

- ❑ **Make sure the Touch Unit connection cable is not wired into the wall with the other cables.**
- ❑ **Take care not to trap the cables between the mount arm and wall plate.**

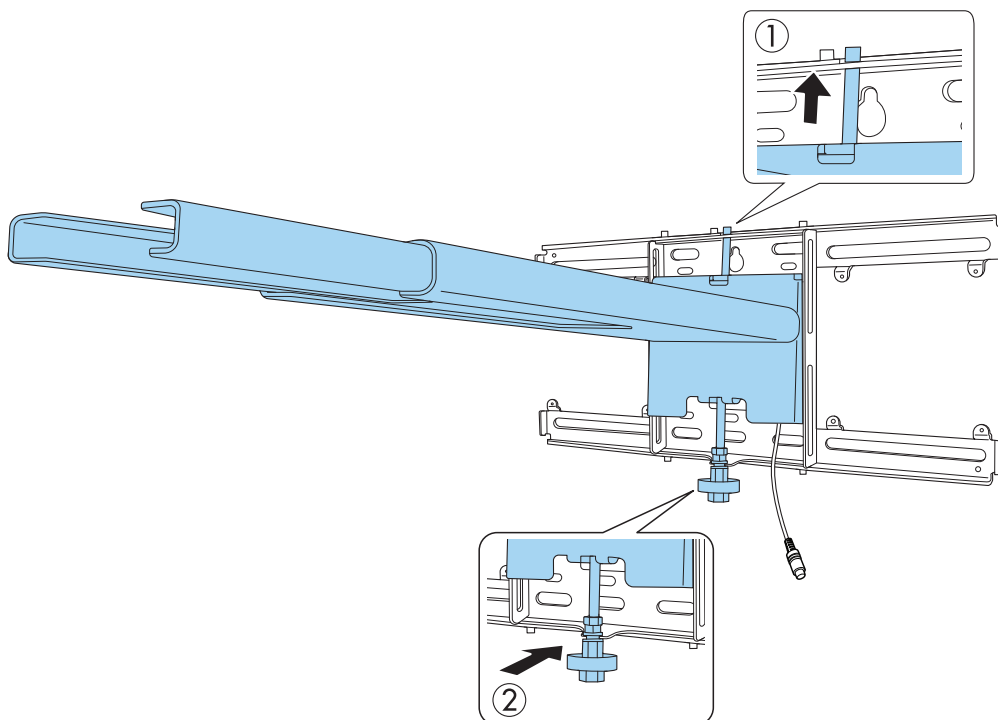

5. Secure the mount arm to the wall plate by tightening the supplied M6 × 20 mm cross recessed head shoulder screws (×3) with the #3 cross-head screwdriver.

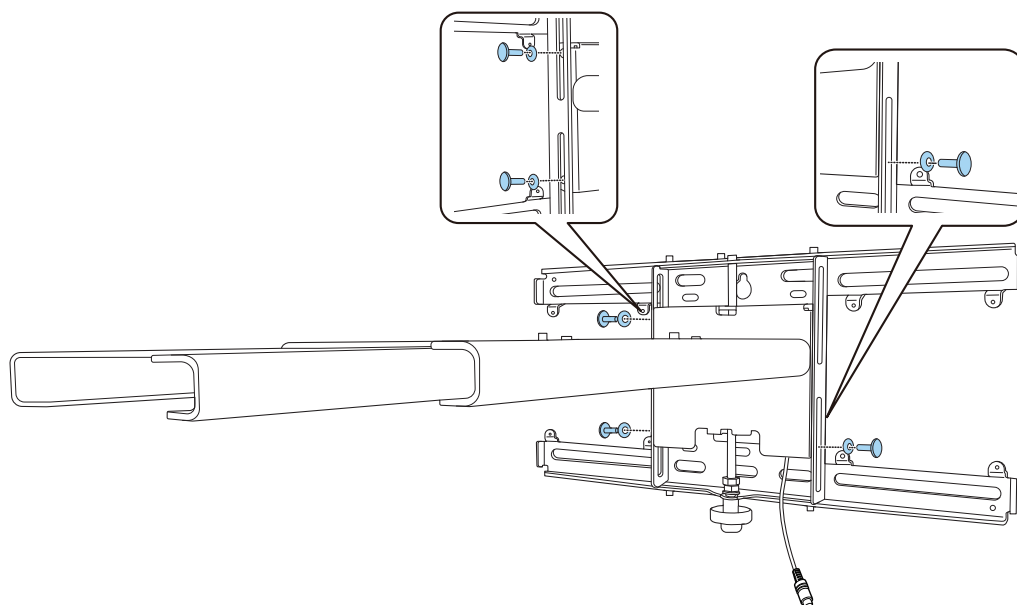


Make sure you use the included plastic washers. If you don't use the plastic washers, you may damage the M8 hexagon bolt as you adjust the vertical slide position.

6 Adjust the vertical slide position of the arm


1. Adjust the vertical slide with the M8 hexagon bolt at the bottom of the wall mount ((2)), or the hexagonal shaft at the top of the wall mount ((1)). Start by aligning the notch on the arm with the alignment mark on the wall plate as shown below ((3)).

Tightening the M8 hexagon bolt lowers the wall mount, and loosening the bolt raises it ((2)).

Tightening the hexagonal shaft raises the wall mount, and loosening the shaft lowers it ((1)).

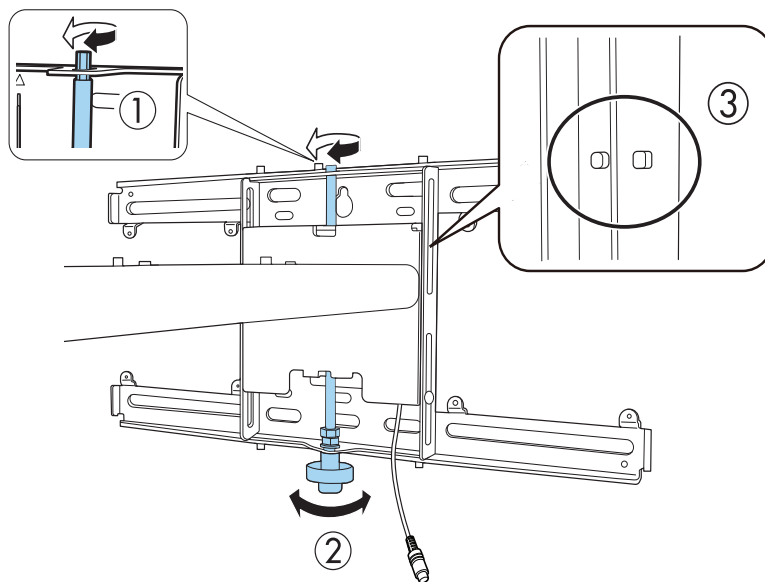

2. Secure the wall mount with the M6 × 20 mm hexagon shoulder bolt.

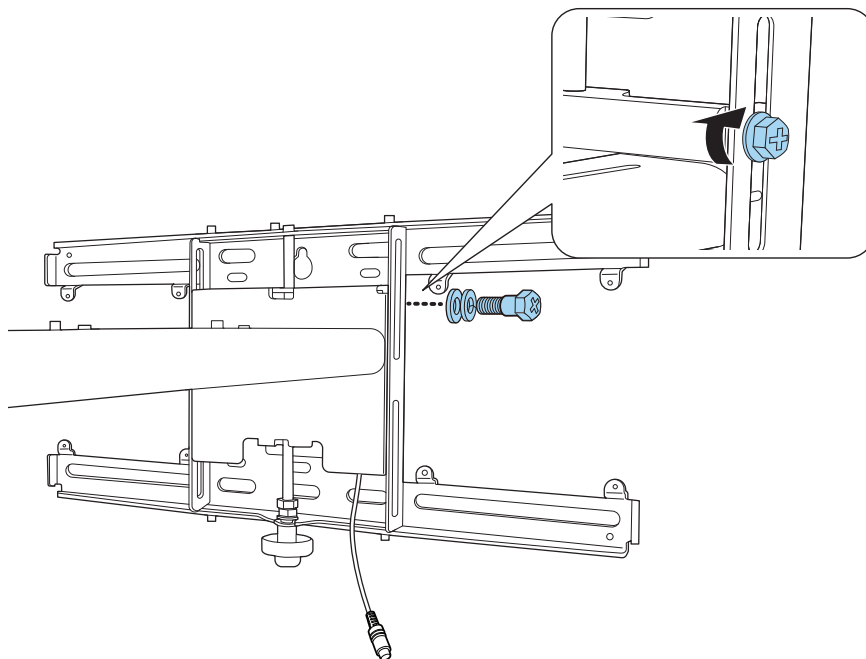


7 Attach the projector to the wall mount


Attach the 3-axis adjustment unit with the projector to the wall mount arm.

- Decide which position you want to use for installing the 3-axis adjustment unit.

Mount it at the ○ stamp when the image is less than 80 inches diagonally, or at the ○○ stamp when the projected image is 80 inches or more diagonally.

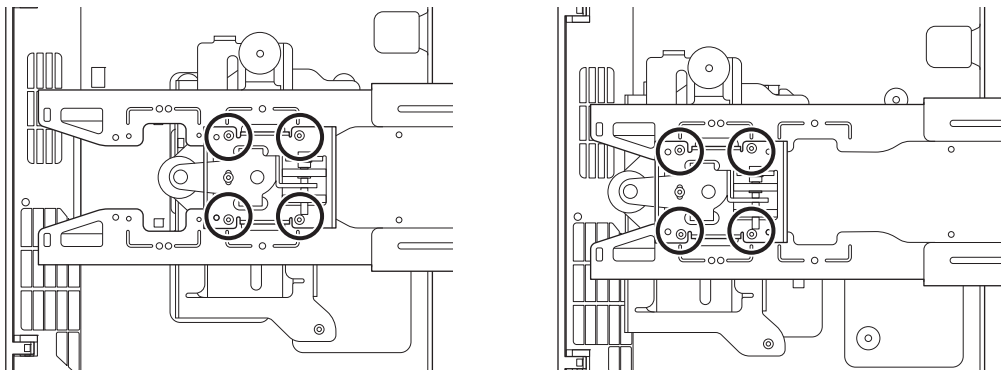

- Tighten the M4 × 12 mm hexagon socket head cap bolts (×4) supplied to install the 3-axis adjustment unit.

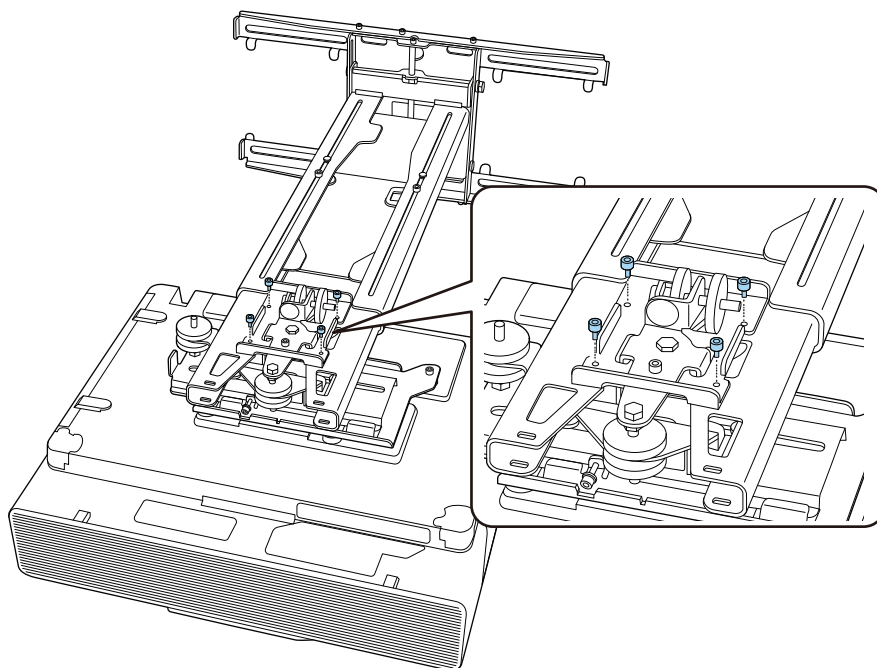

⚠ Warning


When installing or adjusting the wall mount, do not use adhesives to prevent the screws from loosening and do not use lubricants or oils on the projector slide plate. This may cause the case to crack and the projector to fall, resulting in personal injury or property damage.



Connect the power cord and other cables to the projector

Connect any necessary cables such as the computer cable, HDMI cable, USB cable, Touch Unit connection cable (if applicable), Control Pad cables (if applicable), and power cord to the projector. See your projector's *User Guide* for detailed connection information.

Use M4 screws (not included) to secure any additional devices or accessories, such as external tuners, to the mounting point on the wall mount.

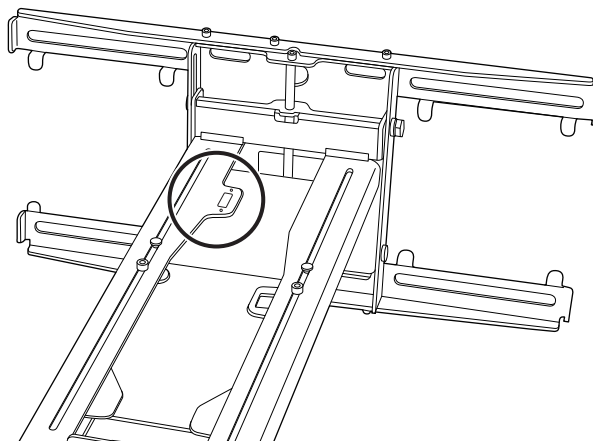

If you are planning to run the cables inside the wall, make sure you follow all local electrical codes. If you are running the cables outside the wall, use a cable management system to keep the cables from obstructing the image. An optional cable management system is available from Epson (part number ELPCK01).


9 Attach a Mini PC or Stick PC if necessary

You can secure a Mini PC or Stick PC to the left or the right side of the wall plate.




Attach the Mini PC so that the air exhaust vents of the PC are not blocked. Install the PC so that the air exhaust vents are at the top and the air intake vents are at the bottom.

If your Mini PC has screw holes that line up with the holes in the Mini PC plate, you can secure it with the M3 × 6 mm screws (×4) supplied.

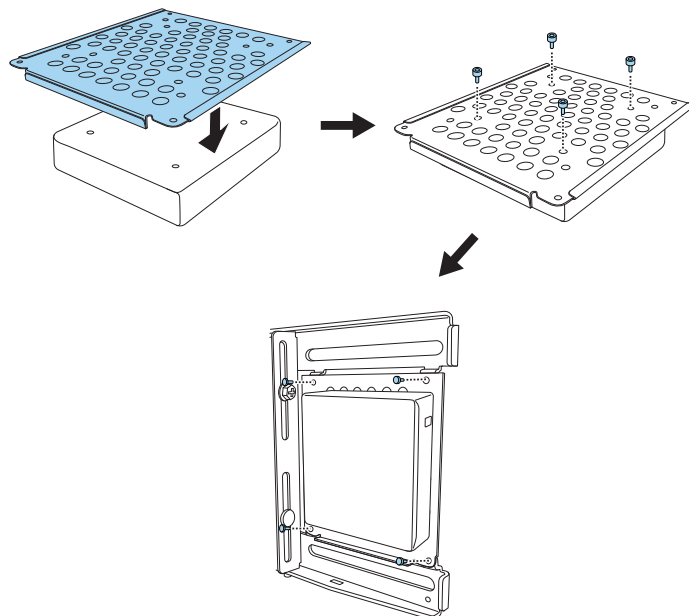


If your Mini PC does not have screw holes or they do not line up with the holes on the Mini PC plate, you can secure it with the included Mini PC band.


1. Wrap the band around the Mini PC plate.

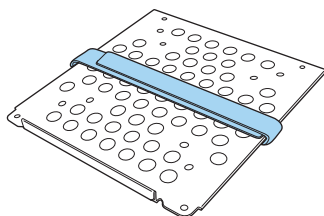

2. Secure the Mini PC plate to the wall plate using the M3 × 6 mm screws (×4) supplied.

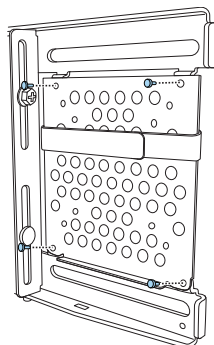

3. Rest the PC on the lip of the Mini PC plate and secure it with the band.

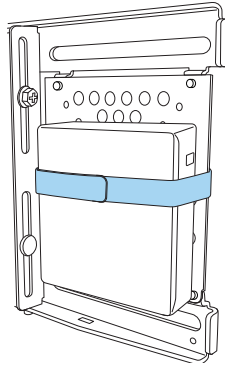

6 Adjusting the Image

To ensure the best image quality, follow the steps below to adjust the projected image. You can also use the Auto Screen Adjustment feature to automatically adjust the image. See page 85 for more information.



If possible, avoid adjustments with the Auto Screen Adjustment, Quick Corner, or Keystone functions of the projector. Doing so may result in a reduction in image quality and pen or finger touch calibration.

Follow these guidelines for setting up the projector:

- Make sure the image is evenly rectangular, without distortion.
- Make sure the projector is tilted no more than 3° vertically and horizontally in relation to the projected image.




Your remote control or projector control panel may look different from the illustrations in this section, but the instructions are the same except where noted.

1 Turn on the projector

Press the power button on the remote control or the projector.

2 Adjust the focus

1. Open the front cover ((1)).
2. Use the focus lever to adjust the focus ((2)).

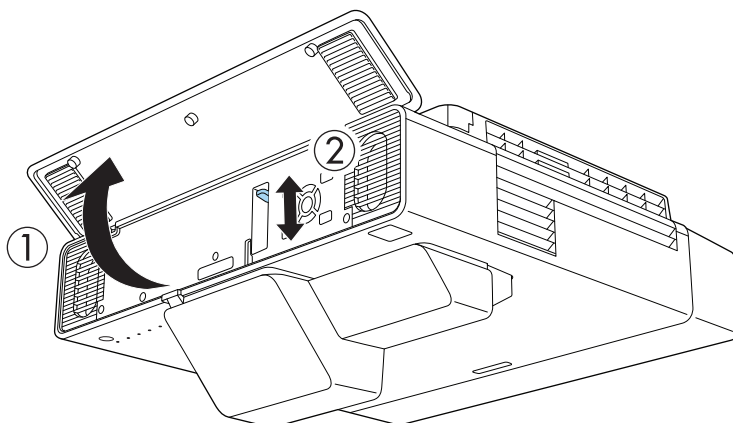


3. After you finish making the adjustment, close the front cover.


3 Select the screen type

1. Press the [Menu] button on the remote control or control panel.

Remote Control

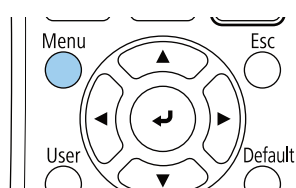

Control Panel

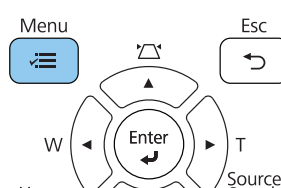

2. Select **Installation**.

3. Select **Screen Type**.


| | |
|-----------------------|--------------------------------------|
| Frequently Used Items | Installation |
| Image | Fixed Installation Off |
| Signal I/O | Test Pattern |
| Installation | Setting Plate Installation Guide |
| Display | Vertical Installation No |
| Operation | Projection Front/Upside Down |
| Management | Auto Screen Adjustment |
| Network | Geometry Correction Point Correction |
| Pen/Touch | Digital Zoom |
| Interactive | Connect ELPCB02 Off |
| Multi-Projection | Touch Unit |
| Memory | Remote Receiver Off |
| ECO | Screen Type 16:9 |
| Initial/All Settings | High Altitude Mode Off |
| | Reset Installation Settings |
| | Display |
| | Pattern Display |
| | Pattern Type |

4. Select the setting that matches the aspect ratio of your projection surface.

If necessary, you can press the [Aspect] button on the remote control to temporarily change the aspect ratio as necessary to match the input signal.



You will need to project content from a connected device in order to change the aspect ratio.

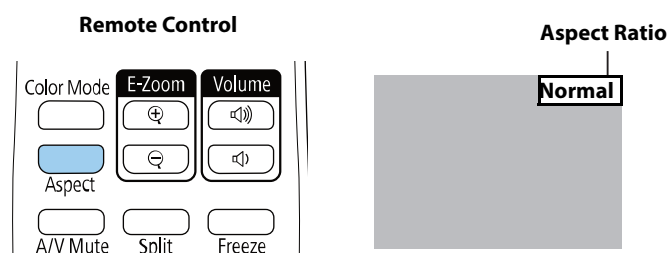


The following is a list of available aspect settings:


- **Auto:** Automatically sets the aspect ratio according to the input signal and the **Resolution** setting.
 - **Full:** Displays images using the full width of the projection area, but does not retain the aspect ratio. 4:3 ratio images are elongated horizontally.
 - **Zoom:** Displays images using the full width of the projection area and maintains the aspect ratio of the image. The image may be cut off on the top and bottom depending on its aspect ratio.
 - **Native:** Displays images as is (aspect ratio and resolution are maintained). Black bands may appear or images may be cut off, depending on the resolution.
5. If you selected the 16:6 (BrightLink 1485Fi/1485Fi+ only) or 21:9 **Screen Type** setting and want to eliminate the black bar at the top of the screen, select the **Installation > Screen Position** setting and then press and hold the up arrow button on the remote until the image rests at the top of the screen.

4 Display the test pattern

1. Press the [Menu] button on the remote control or control panel.

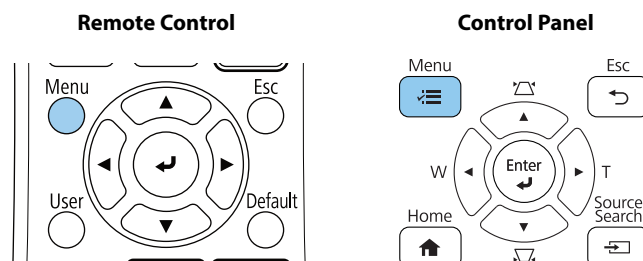

2. Select **Installation**.
3. Select **Setting Plate Installation Guide**.
4. The installation guide and test pattern are displayed. Use these to monitor the image as you make the adjustments in steps 5 to 10.


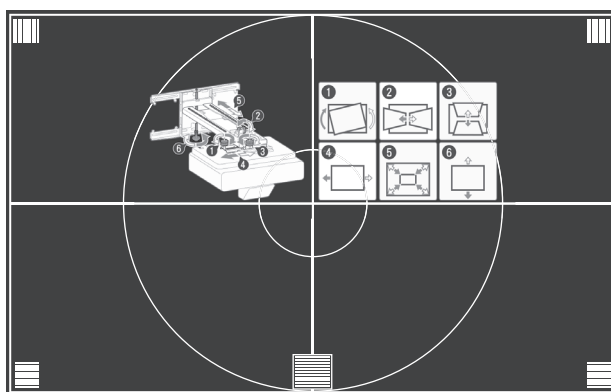


5 Use adjustment dial 1 on the left side to adjust the horizontal roll



Repeat steps 5 to 10 as necessary.


1. Loosen the lower adjustment dial (1).

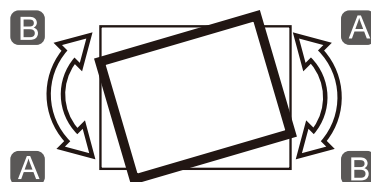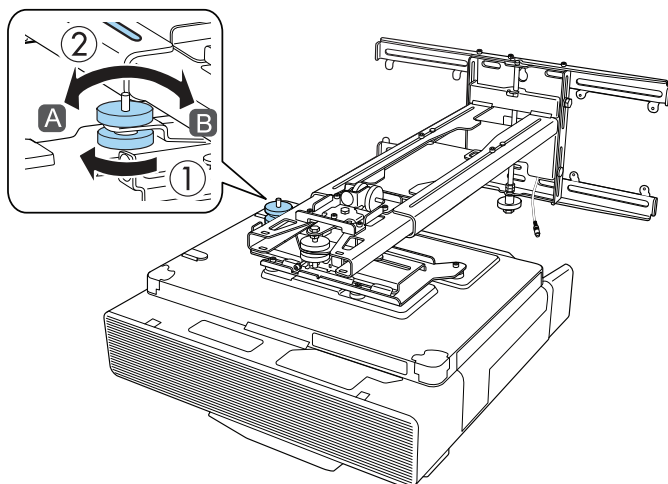

2. Turn the upper adjustment dial to adjust the horizontal roll (2).
3. After you finish making all of the adjustments in steps 5 to 10, tighten the lower adjustment dial you loosened in 1.

⑥ Use adjustment dial 2 on the top to adjust the horizontal rotation


1. Loosen the screw to unlock the adjustment dials (①).

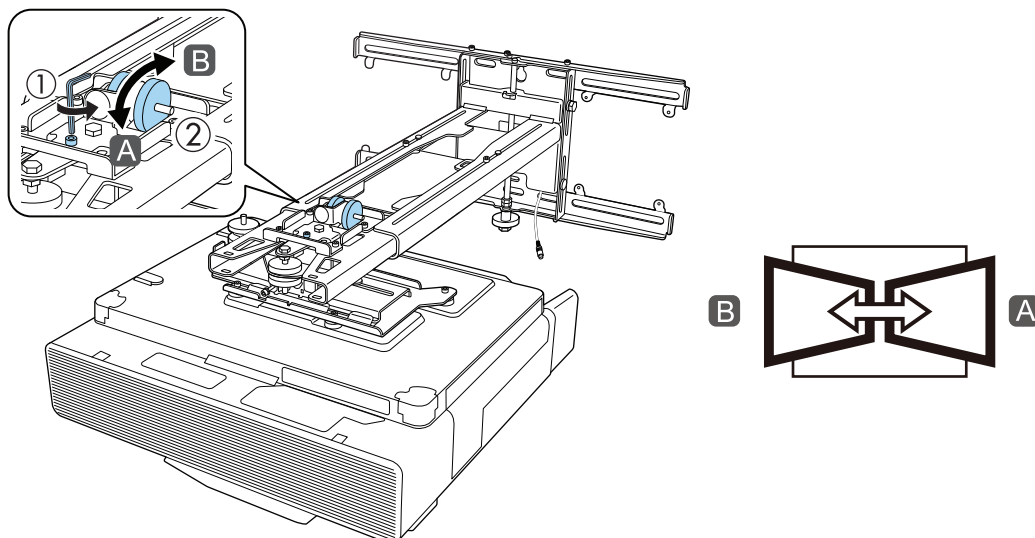

2. Turn the adjustment dials to adjust the horizontal rotation (②).
3. After you finish making all of the adjustments in steps ⑤ to ⑩, tighten the screw you loosened in ①.

⑦ Use adjustment dial 3 on the front to adjust the vertical tilt


1. Loosen the lower adjustment dial (①).

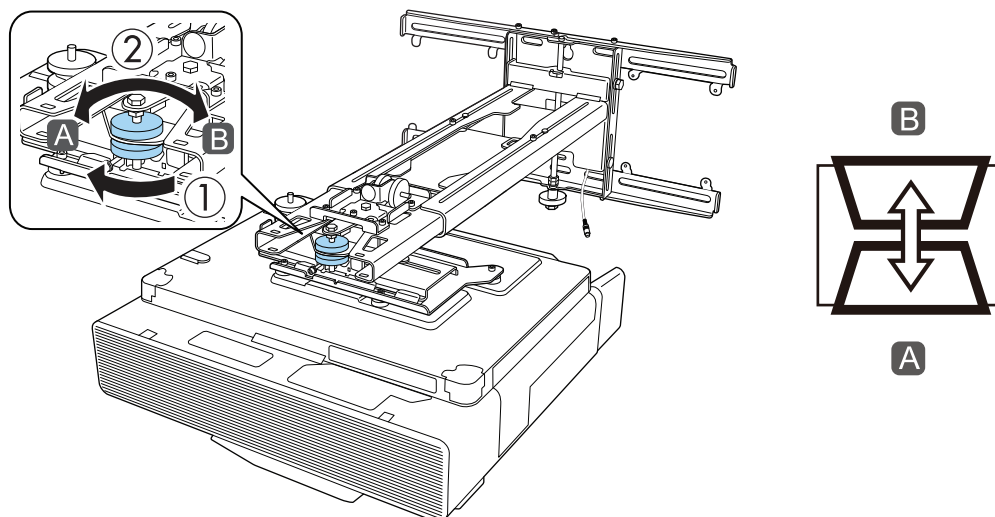

2. Turn the upper adjustment dial to adjust the vertical tilt (②).
3. After you finish making all of the adjustments in steps ⑤ to ⑩, tighten the lower adjustment dial you loosened in ①.

8 Adjust the horizontal slide



1. Loosen the M4 × 12 mm hexagon socket head cap bolt (①).
2. Adjust the slider for the slide plate (②).

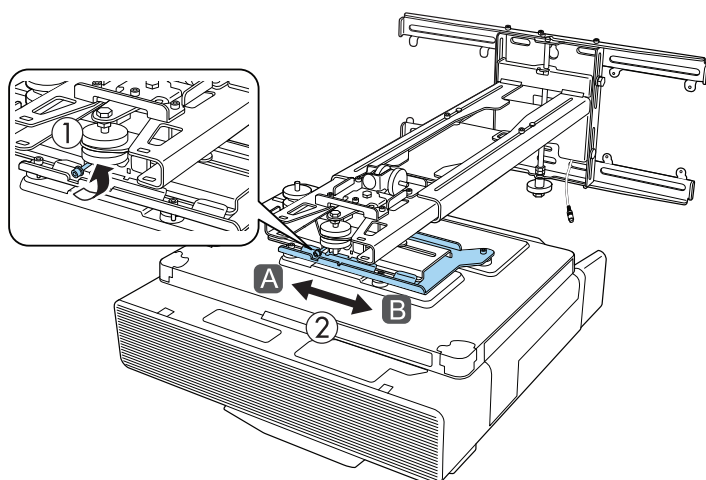

3. After you finish making all of the adjustments in steps (5) to (10), tighten the M4 × 12 mm hexagon socket head cap bolt you loosened in (1).

9 Adjust the forward/backward slide

1. Loosen the M4 × 12 mm hexagon socket head cap bolts (×2) (①).
2. Adjust the slider for the wall mount (②).

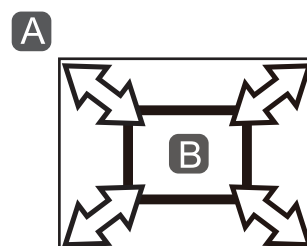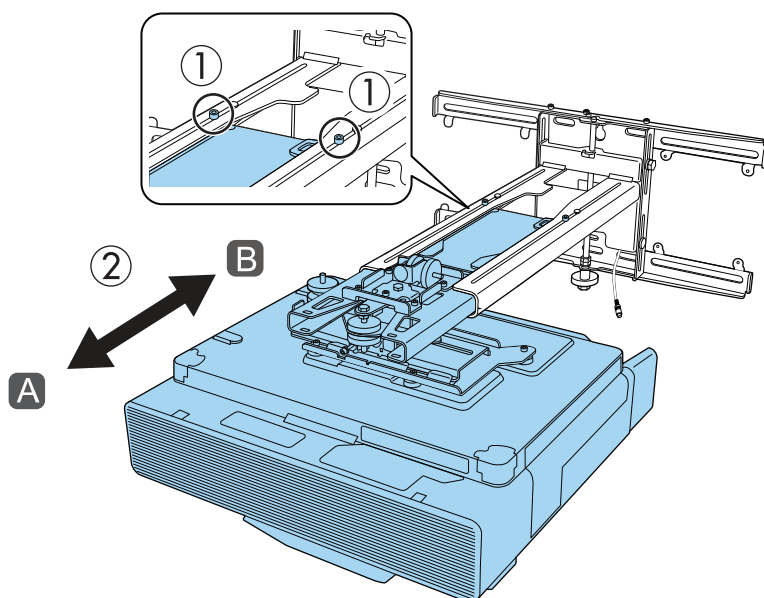


3. After you finish making all of the adjustments in steps (5) to (10), tighten the M4 × 12 mm hexagon socket head cap bolts (×2) you loosened in (1).

10 Adjust the vertical slide

1. Loosen the M6 × 20 mm hexagon shoulder bolt (①).
2. Adjust the vertical slide with the M8 hexagon bolt at the bottom of the wall mount, or the hexagonal shaft at the top of the wall mount (②).

Tightening the M8 hexagon bolt lowers the wall mount, and loosening the bolt raises it.


Tightening the hexagonal shaft raises the wall mount, and loosening the shaft lowers it.

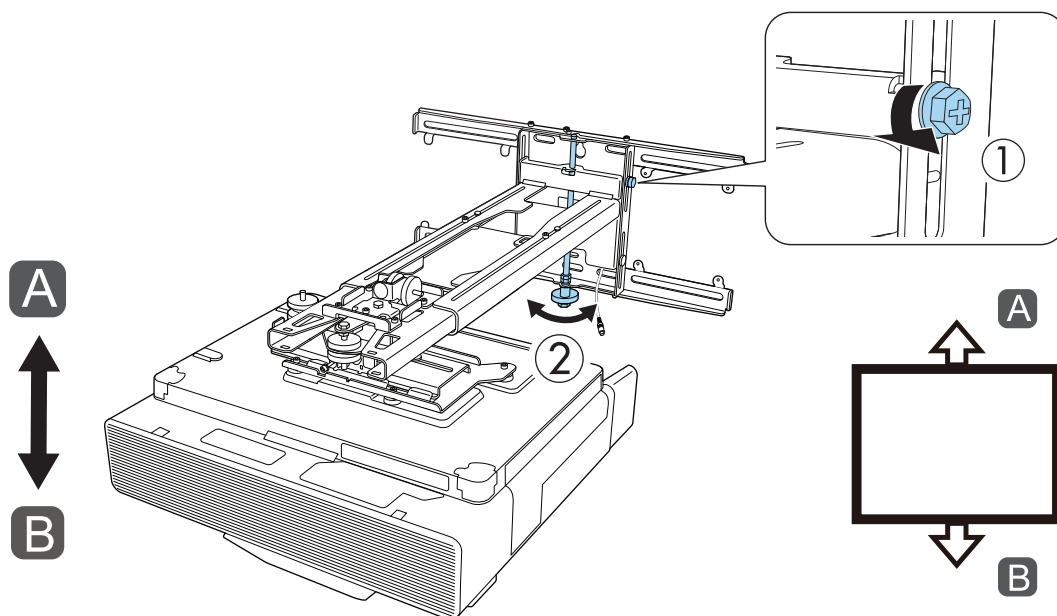

3. After you finish making your adjustments, tighten the M6 × 20 mm hexagon shoulder bolt you loosened in ①.

11 Re-adjust the focus

1. Open the front cover (①).
2. Use the focus lever to adjust the focus (②).

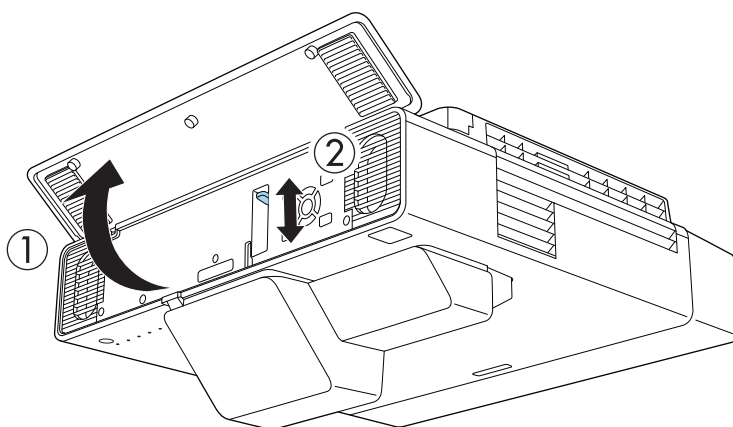

3. After you finish making the adjustment, close the front cover.



Turn off the display of the test pattern

Press the [Esc] button on the remote control or control panel to turn off the test pattern.



Warning


Tighten all screws firmly. Otherwise, the projector or wall mount may fall and cause personal injury or property damage.

7 Attaching the Covers


1 Attach the wall plate cover and end cap

If you need to use a security cable, make sure you attach it before installing the wall plate cover. See page 92 for instructions.


1. Attach the left wall plate cover.

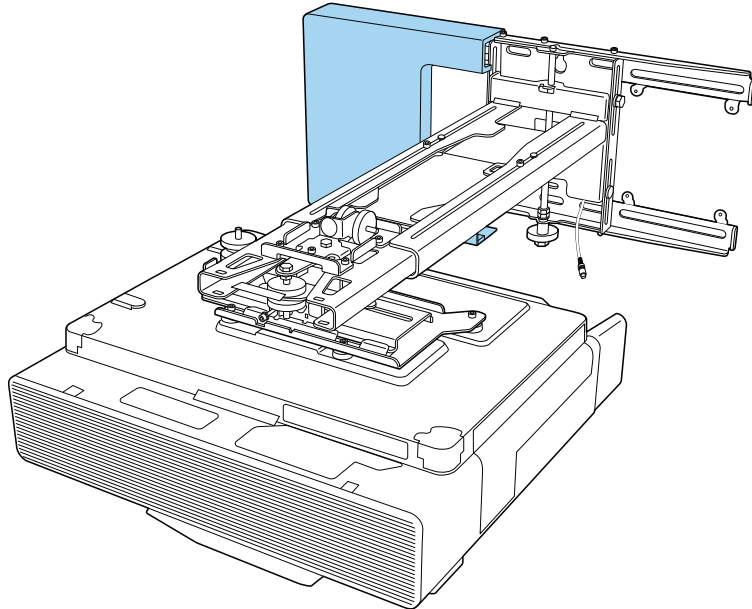


2. Attach the right wall plate cover.

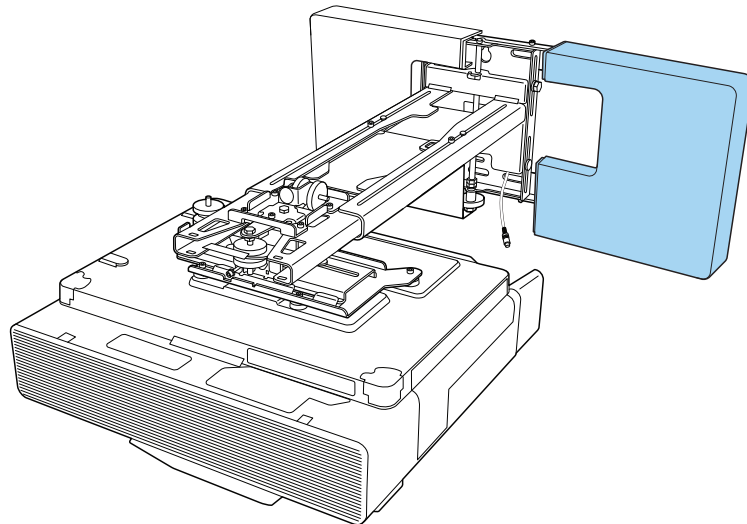

3. Attach the end cap to the mount arm.

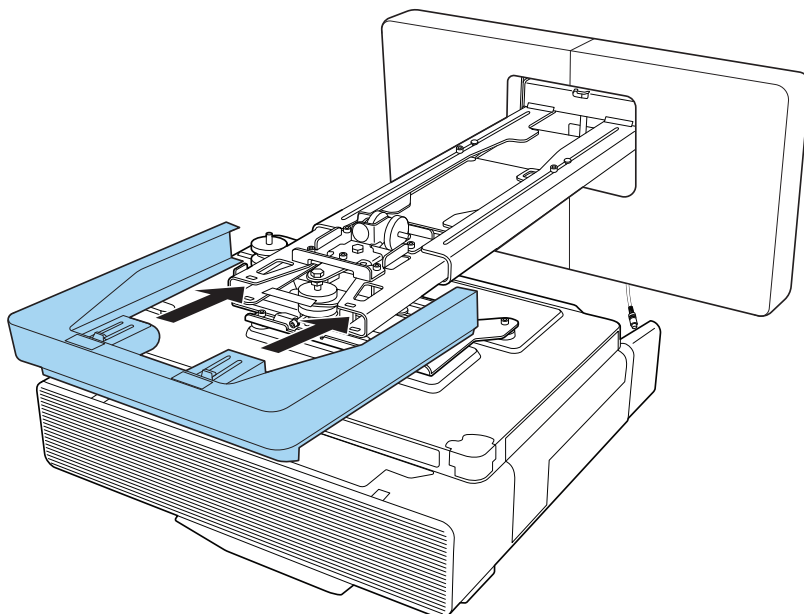


4. If you want to cover the groove in the mount arm, attach the masking sticker as shown.

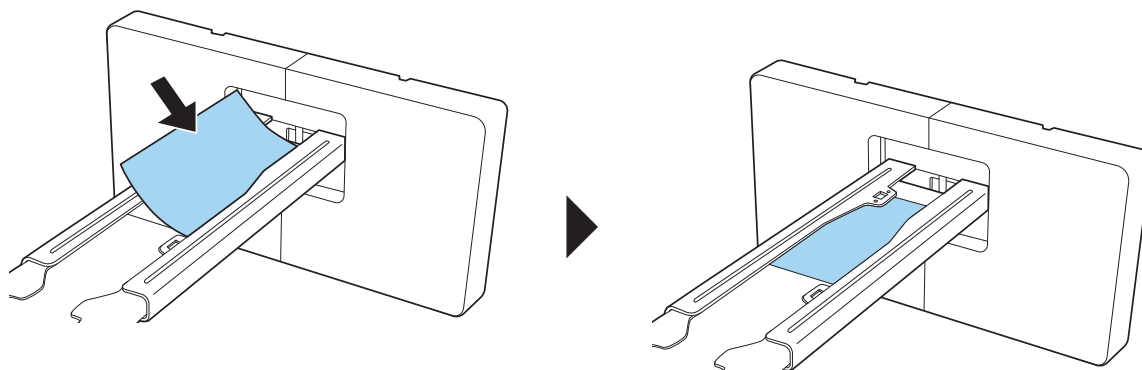

② Attach the cable cover to the projector

Attach the cable cover (①) and use a cross-head screwdriver to tighten the screws (x2) and secure the cable cover (②).

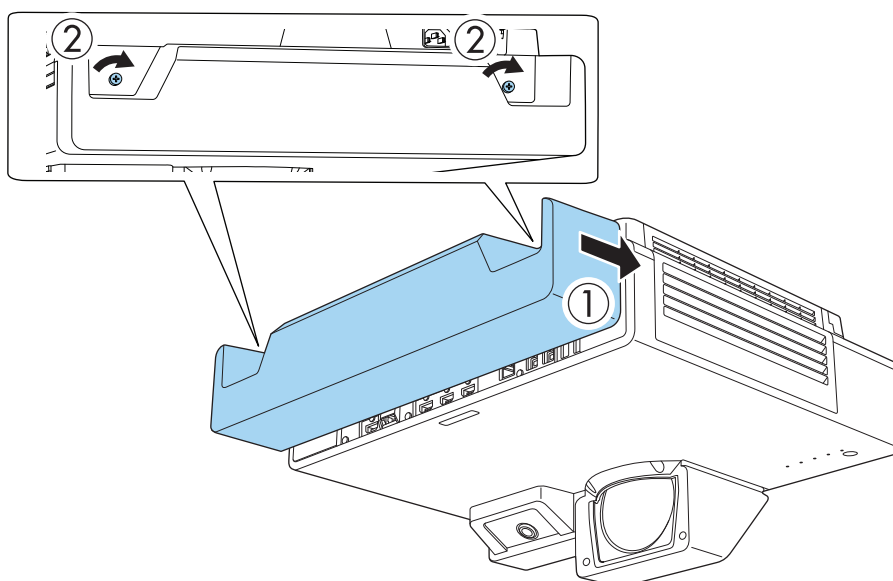



Caution

Only a specialist should remove or reinstall the projector, including for maintenance and repairs. Refer to your online *User's Guide* for your projector for instructions on maintenance and repairs.



Warning

- ☐ Never loosen the bolts and nuts after installation. If you find any loose screws, tighten them firmly. Otherwise, the projector or wall mount may fall and cause personal injury or property damage.
- ☐ Do not hang on the wall mount or hang a heavy object on the wall mount. If the projector or wall mount falls, it could cause personal injury or property damage.

8 Installing the Touch Unit

Before installing the touch unit, make sure you install the projector and adjust the projected image (see page 33). You also need to calibrate the interactive pen(s) before you install the touch unit (see the online *User's Guide* for more information).





The touch unit is included with the BrightLink 1485Fi/1485Fi+. You can purchase it as an optional accessory for the BrightLink 1480Fi/1480Fi+.

The steps for installing the touch unit vary depending on where you are installing the touch unit:

- If you are installing the touch unit on a whiteboard, see "Installing the touch unit on a whiteboard" on page 56.
- If you are installing the touch unit above the frame of a whiteboard (requires the optional touch unit bracket), see "Installing the touch unit above a whiteboard" on page 68.



- ❑ **If the distance from the wall to the surface of the whiteboard is greater than 2 inches (51 mm), you must install the touch unit on the whiteboard.**
- ❑ **If the frame of the whiteboard extends more than 0.1 inch (3 mm) away from the board surface, you must install the touch unit on the whiteboard.**

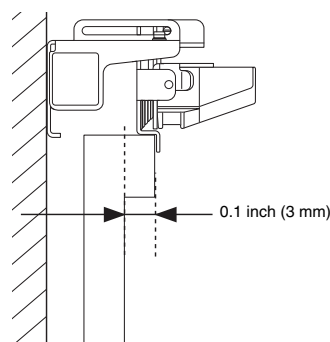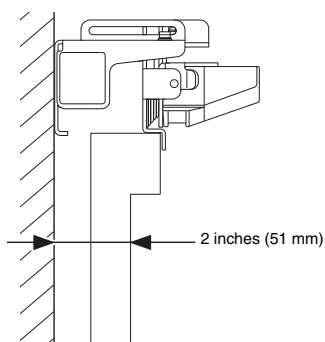

Caution

The touch unit should only be connected to the BrightLink 1480Fi/1480Fi+/1485Fi/1485Fi+ models. Do not connect the touch unit to any other projectors or devices.

Installing the touch unit on a whiteboard

Follow the steps below to install the touch unit on a whiteboard. Some menus may differ slightly from the illustrations, but the installation instructions are the same.




- ❑ **There are magnets built in to the back of the touch unit. Typically, the touch unit should be installed by attaching the magnets to the screen or whiteboard.**
- ❑ **If the touch unit cannot be attached with the magnets, use commercially available M4 screws (×2).**
- ❑ **Install the touch unit on a flat, smooth, unwarped surface. If there is unevenness on the screen surface of more than 0.2 inch (5 mm) in any direction, your fingers may not be detected and finger touch operations may not be performed correctly.**



1 Install infrared deflectors along any obstacles

If there is an obstacle that cannot be removed, such as a whiteboard tray or thick frame, remove the tape from the back of the supplied infrared deflectors and stick them to the screen so that the laser is not reflected by the obstacle.

Make sure to use as many deflectors as necessary to match the full width of the obstacle.

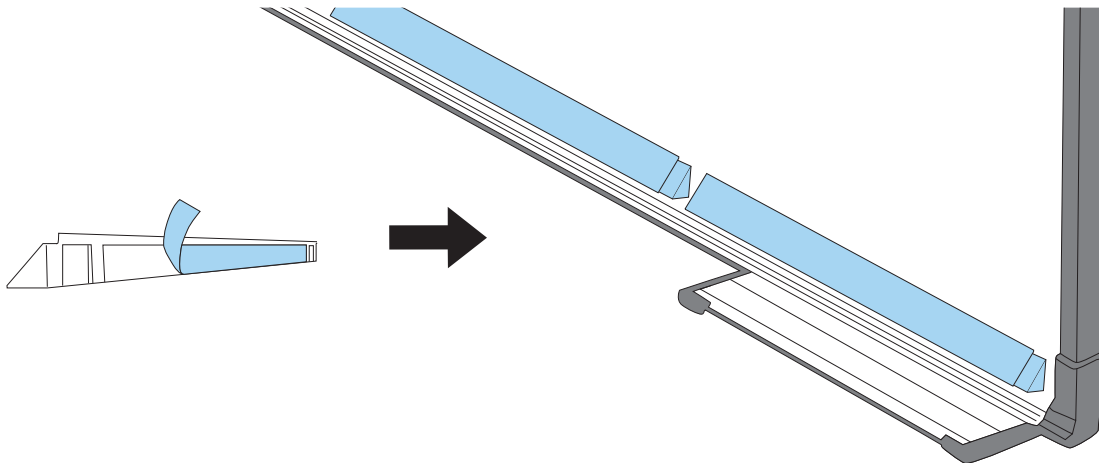


- ❑ **Do not remove an infrared deflector once it has been stuck in place.**
- ❑ **Do not stick tape on or place anything on the infrared deflectors. The deflectors will not function properly if anything is placed on them.**

2 Turn on the projector

Press the power button on the remote control or the projector.

3 Display the installation pattern

1. Press the [Menu] button on the remote control or control panel.

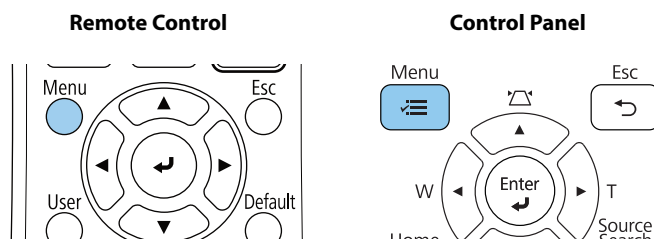


2. Select **Installation**.
3. Select **Touch Unit**.

| | |
|-----------------------|--------------------------------------|
| Frequently Used Items | Installation |
| Image | Fixed Installation Off |
| Signal I/O | Test Pattern |
| Installation | Setting Plate Installation Guide |
| Display | Vertical Installation No |
| Operation | Projection Front/Upside Down |
| Management | Auto Screen Adjustment |
| Network | Geometry Correction Point Correction |
| Pen/Touch | Digital Zoom |
| Interactive | Connect ELPCB02 Off |
| Multi-Projection | Touch Unit |
| Memory | Remote Receiver Off |
| ECO | Screen Type 16:9 |
| Initial/All Settings | High Altitude Mode Off |
| | Reset Installation Settings |
| | Display |
| | Pattern Display |
| | Pattern Type |

4. Select **Installation Pattern**.

| | |
|----------------------|--------|
| [Touch Unit] | Return |
| Installation Pattern | |
| Power | On |
| Touch Unit Setup | |
| Touch Calibration | |
| Calibration Range | Wide |


The Installation pattern is displayed on the projected image.

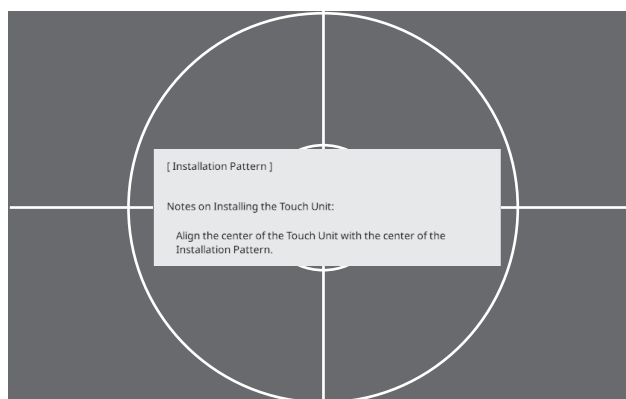

4 Determine the installation position for the touch unit


1. Mark the following installation positions:

- (①): The center line of the installation pattern.
- (②): 0.79 to 1.97 inches (20 to 50 mm) from the top edge of the projected image for 16:6/21:9 aspect ratio images or 0.22 to 1.97 inches (5.7 to 50 mm) from the top edge of the projected image for all others; align with the bottom edge of the touch unit.

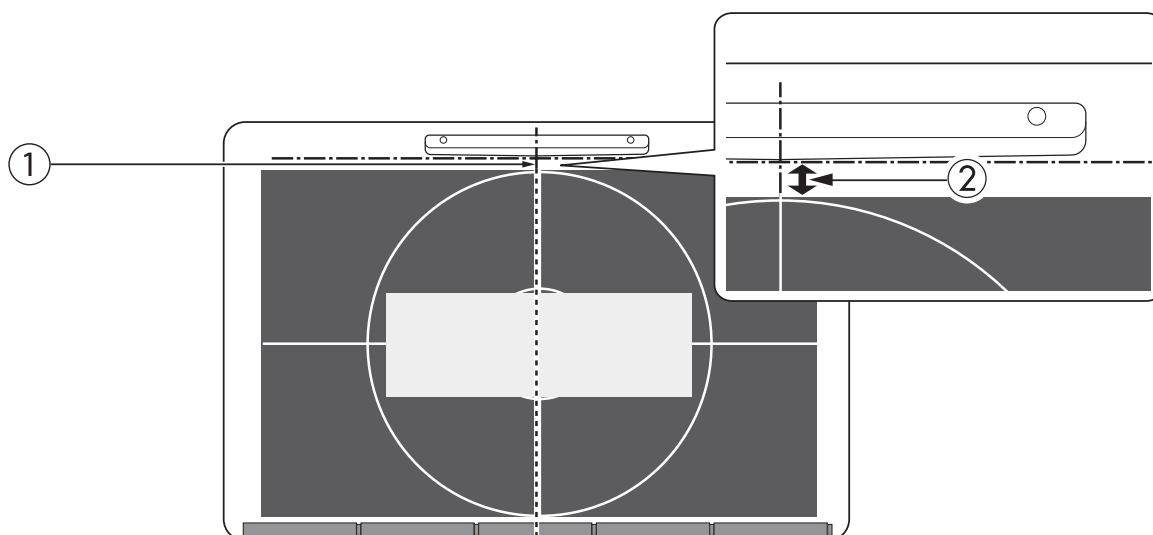

The touch unit must be installed above the image area.

2. For non-magnetic boards or screens, attach the template sheet to the board.
Line up the pattern on the bottom of the sheet with the top of the projected pattern.

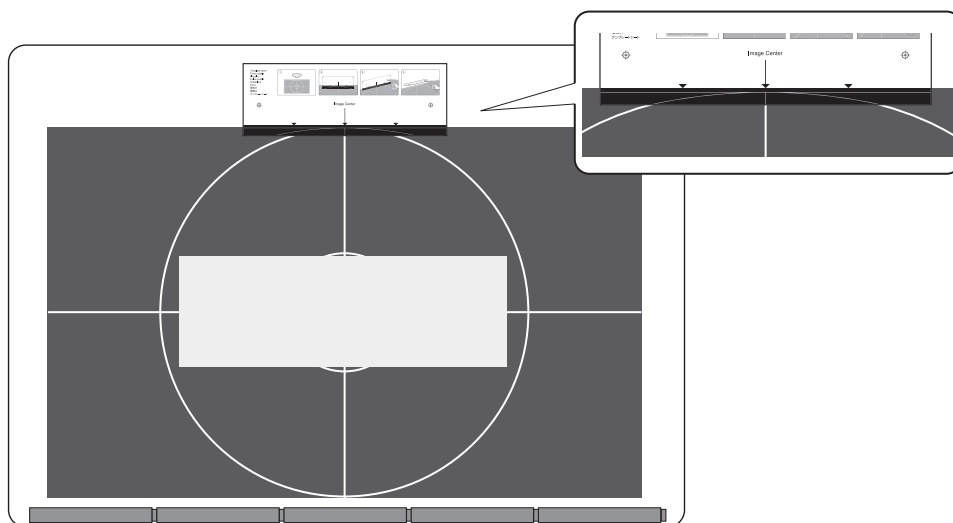

Drill two holes where indicated and remove the template sheet.


5 Install the touch unit

- For magnetic boards, place the back of the touch unit on the screen surface to secure it.




Caution


When installing the touch unit on a magnetic surface, be careful not to trap your fingers or any other part of your body between the magnets and the installation surface.

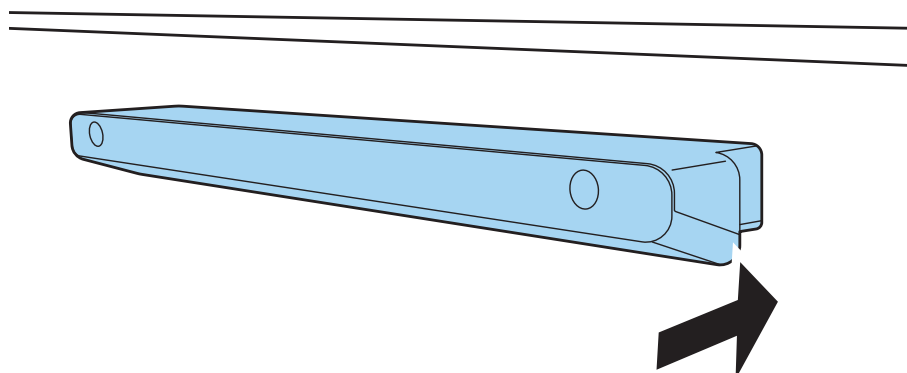



- For non-magnetic boards or screens, attach the spacers to the screw holes on the back of the touch unit.

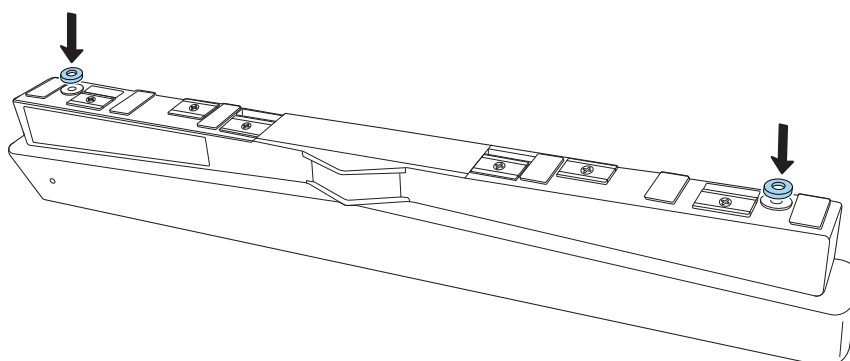


Remove the rubber caps from the front of the touch unit.

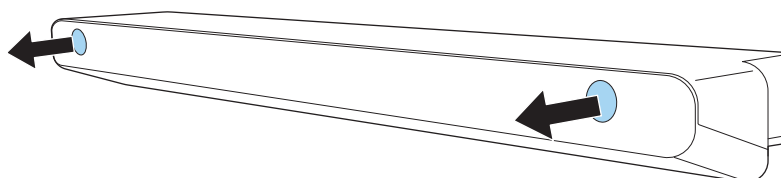

Secure the touch unit with two (2) M4 screws (not included).

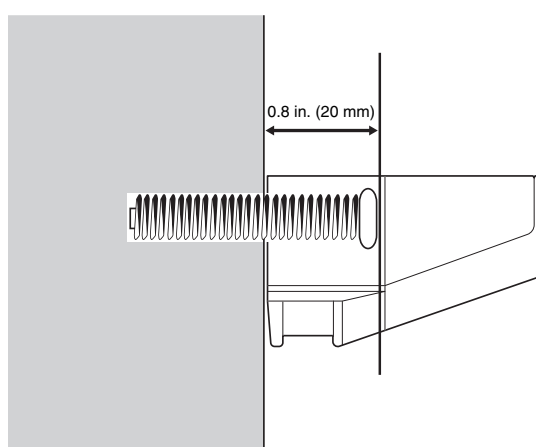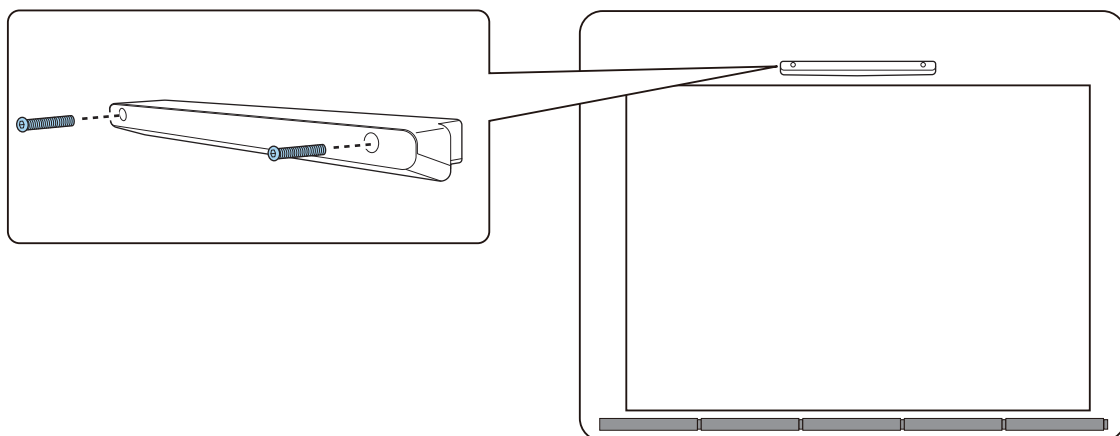

Re-attach the rubber caps.

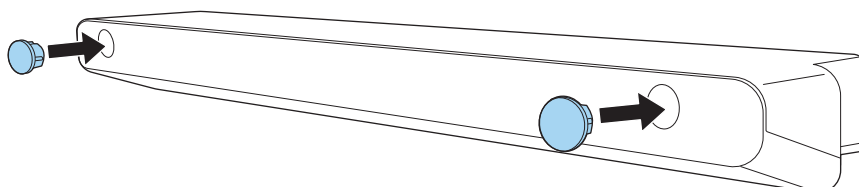


6 Turn on the touch unit

1. Connect the touch unit connection cable from the projector to the port on the touch unit. Make sure the arrows on the port and cable are lined up.




Make sure you use the supplied touch unit connection cable. Operations are not possible with a commercially available cable.

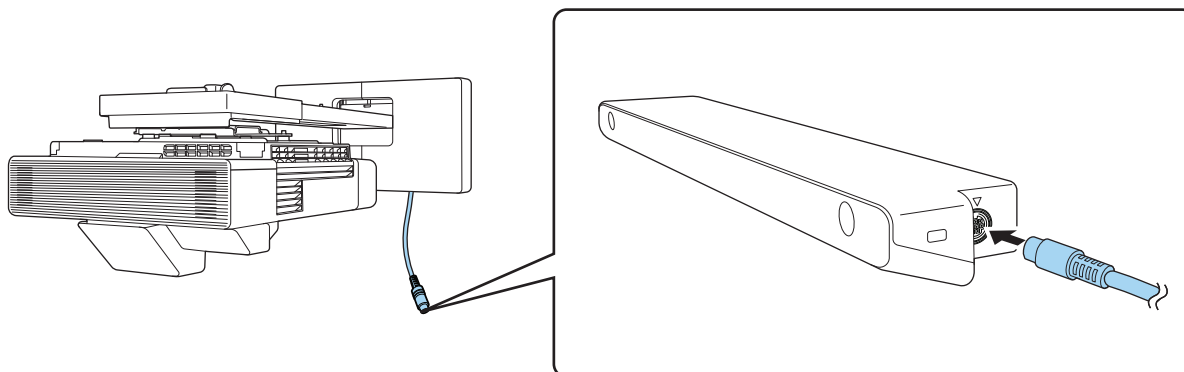


2. Press the [Menu] button on the remote control or control panel.

Remote Control

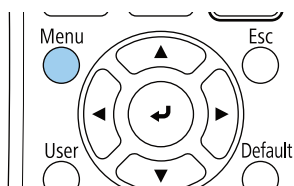


Control Panel

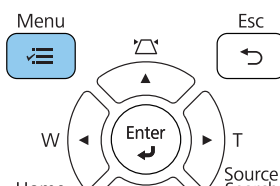


3. Select **Installation**.
4. Select **Touch Unit**.

| | |
|-----------------------|--------------------------------------|
| Frequently Used Items | Installation |
| Image | Fixed Installation Off |
| Signal I/O | Test Pattern |
| Installation | Setting Plate Installation Guide |
| Display | Vertical Installation No |
| Operation | Projection Front/Upside Down |
| Management | Auto Screen Adjustment |
| Network | Geometry Correction Point Correction |
| Pen/Touch | Digital Zoom |
| Interactive | Connect ELPCB02 Off |
| Multi-Projection | Touch Unit |
| Memory | Remote Receiver Off |
| ECO | Screen Type 16:9 |
| Initial/All Settings | High Altitude Mode Off |
| | Reset Installation Settings |
| | Display |
| | Pattern Display |
| | Pattern Type |

5. Set **Power** to **On**.

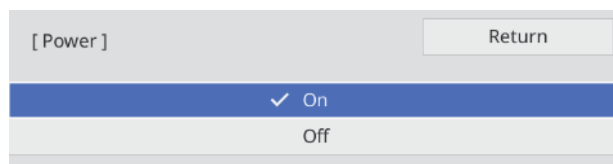

The touch unit power turns on and the power light turns blue.

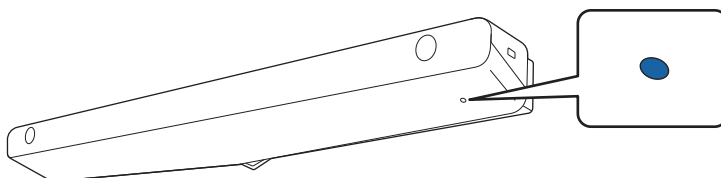

Warning

Do not look into the projector's projection window or the touch unit's laser diffusion ports (located on the bottom of the touch unit); this could cause injury to eyesight.



When Power is set to On, the touch unit automatically powers up when the projector is turned on.




Adjust the angle

Adjust the angle of the laser light coming from the touch unit so that the touch unit can detect the position of your fingers.



Make sure to calibrate the interactive pen(s) before running touch unit setup. Press the User button on the remote control and select Yes to perform an auto-calibration. Refer to the online *User's Guide* for your projector for detailed instructions on calibrating the pen(s).

1. Press the [Menu] button on the remote control or control panel.

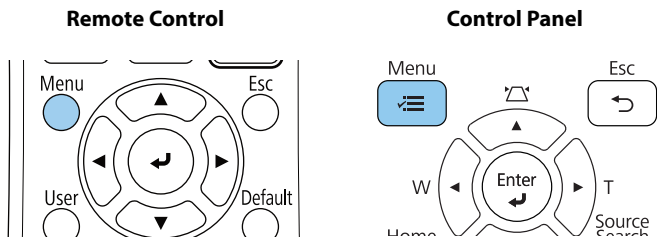


2. Select **Installation**.
3. Select **Touch Unit**.

| | |
|-----------------------|--------------------------------------|
| Frequently Used Items | Installation |
| Image | Fixed Installation Off |
| Signal I/O | Test Pattern |
| Installation | Setting Plate Installation Guide |
| Display | Vertical Installation No |
| Operation | Projection Front/UpSide Down |
| Management | Auto Screen Adjustment |
| Network | Geometry Correction Point Correction |
| Pen/Touch | Digital Zoom |
| Interactive | Connect ELPCB02 Off |
| Multi-Projection | Touch Unit |
| Memory | Remote Receiver Off |
| ECO | Screen Type 16:9 |
| Initial/All Settings | High Altitude Mode Off |
| | Reset Installation Settings |
| | Display |
| | Pattern Display |
| | Pattern Type |


4. Select **Touch Unit Setup**.

| | |
|----------------------|--------|
| [Touch Unit] | Return |
| Installation Pattern | |
| Power | On |
| Touch Unit Setup | |
| Touch Calibration | |
| Calibration Range | Wide |




If you're using multiple projectors and the HDMI Out Setting option in the Multi-Projection menu is set to Process Out, follow the on-screen instructions to turn off the Power setting for the touch unit on the next projector you set up.

5. Select **Installing the Touch Unit without the bracket.**

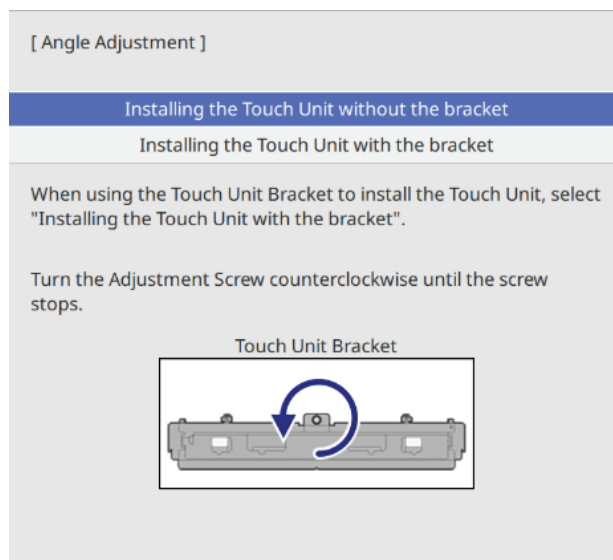


6. Attach the two markers to the positions shown on the projected screen.

Match the positions so that the crosses ((1)) overlap with the points ((2)) on the marker positions.
Move the marker over the projected cross until the lines of the cross align with the lines on the marker.

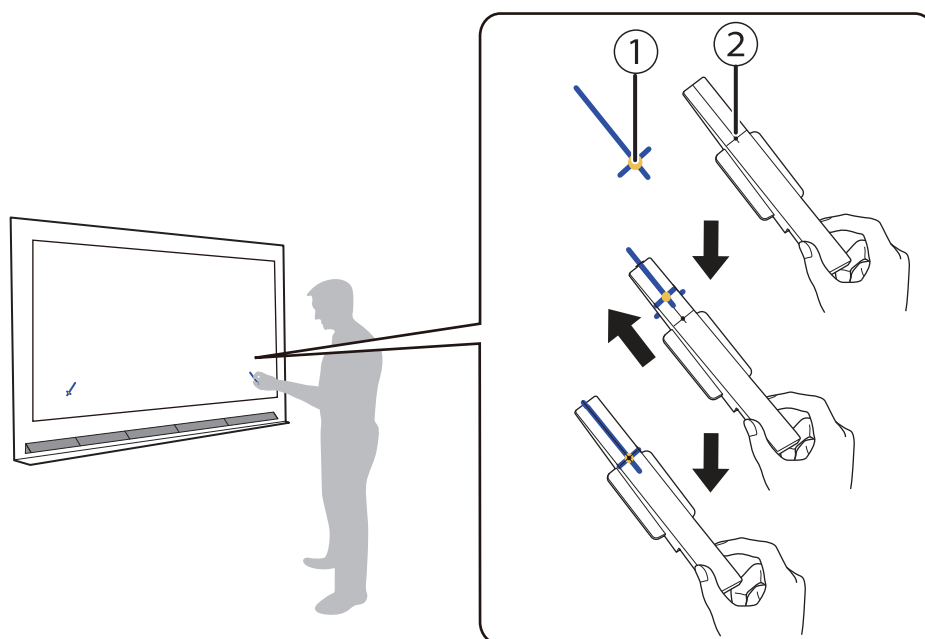

Attach the markers to the projection screen as follows:

- For magnetic screens: Place the bottom of the markers onto the screen with the thinner end of the marker facing the touch unit.
- For non-magnetic screens: Use the supplied tape to secure the markers with the thinner side of the marker facing the touch unit.

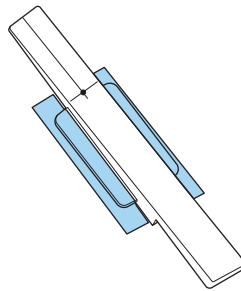


Do not place anything other than the markers near the projected image during angle adjustment. If other objects are on the projected image, angle adjustment may not be performed correctly.

7. Press the [Enter] button on the remote control or control panel to begin the auto adjustment.
8. When adjustments are complete, remove the markers.




If auto adjustment fails, follow the instructions on the screen to manually adjust the angle of the laser and run auto adjustment again.

9. Touch each of the four yellow circles on the screen and verify that the gray touch indicators appear in the correct position.

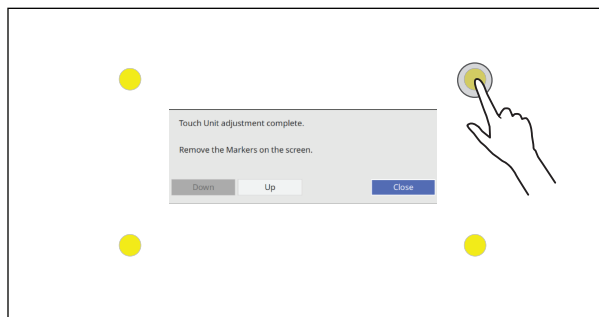

Finger touch operations may not function correctly if you are wearing bandages, artificial nails, nail polish, or anything else that may obstruct your fingers.

If the gray indicators do not appear where you touched the screen, you need to manually adjust the touch unit alignment.

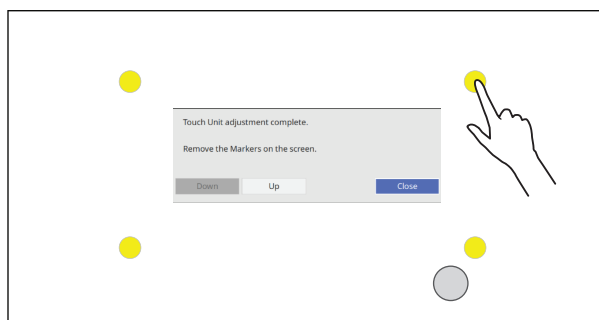

Select **Up** using the control panel or remote control and press [Enter]. Try touching the four dots again and repeat this process until the touch indicators appear in the correct position.

10. Perform touch calibration by pressing **Menu** on the remote control. On the **Installation** menu, select **Touch Unit**, then **Touch Calibration**. Follow the instructions on the screen.



See the online *User's Guide* for more details on the touch calibration.



Attach labels

Attach the labels to the tabs on either side of the touch unit.



If the touch unit moves out of position, use the labels to determine where to reposition the touch unit.

Installing the touch unit above a whiteboard

Follow the steps below to use the optional touch unit bracket to install the touch unit above the frame of a whiteboard. Some menus may differ slightly from the illustrations, but the installation instructions are the same.




Install the touch unit bracket on a flat, smooth, unwarped surface. If there is unevenness on the screen surface of more than 0.2 inch (5 mm) in any direction, your fingers may not be detected and finger touch operations may not be performed correctly.



1 Install infrared deflectors along any obstacles

If there is an obstacle that cannot be removed, such as a whiteboard tray or thick frame, remove the tape from the back of the supplied infrared deflectors and stick them to the screen so that the laser is not reflected by the obstacle.

Make sure to use as many deflectors as necessary to match the full width of the obstacle.

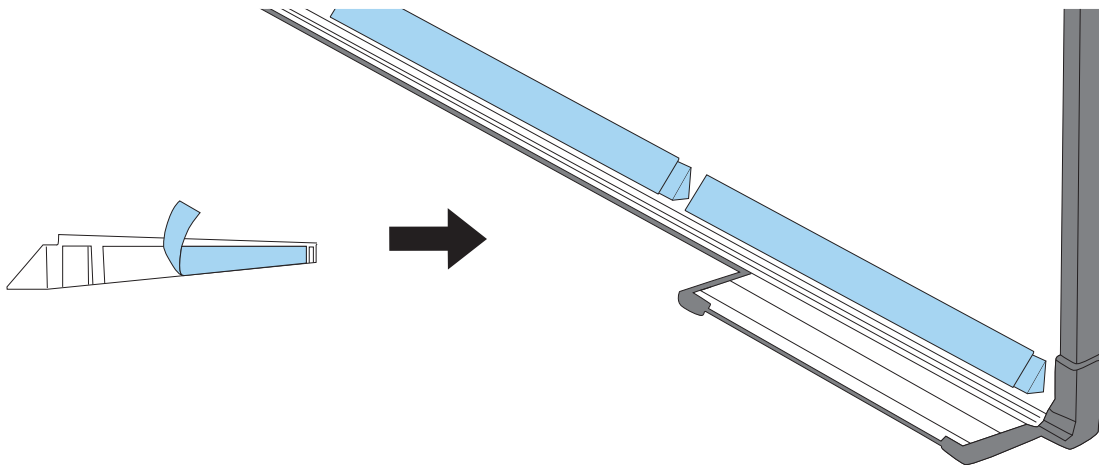


- ☐ **Do not remove an infrared deflector once it has been stuck in place.**
- ☐ **Do not stick tape on or place anything on the infrared deflectors. The deflectors will not function properly if anything is placed on them.**

2 Turn on the projector

Press the power button on the remote control or the projector.

3 Display the installation pattern

1. Press the [Menu] button on the remote control or control panel.

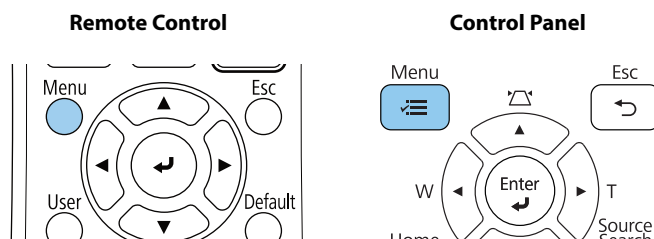


2. Select **Installation**.
3. Select **Touch Unit**.

| | |
|-----------------------|--------------------------------------|
| Frequently Used Items | Installation |
| Image | Fixed Installation Off |
| Signal I/O | Test Pattern |
| Installation | Setting Plate Installation Guide |
| Display | Vertical Installation No |
| Operation | Projection Front/Upside Down |
| Management | Auto Screen Adjustment |
| Network | Geometry Correction Point Correction |
| Pen/Touch | Digital Zoom |
| Interactive | Connect ELPCB02 Off |
| Multi-Projection | Touch Unit |
| Memory | Remote Receiver Off |
| ECO | Screen Type 16:9 |
| Initial/All Settings | High Altitude Mode Off |
| | Reset Installation Settings |
| | Display |
| | Pattern Display |
| | Pattern Type |

4. Select **Installation Pattern**.


| | |
|----------------------|--------|
| [Touch Unit] | Return |
| Installation Pattern | |
| Power | On |
| Touch Unit Setup | |
| Touch Calibration | |
| Calibration Range | Wide |

The Installation pattern is displayed on the projected image.

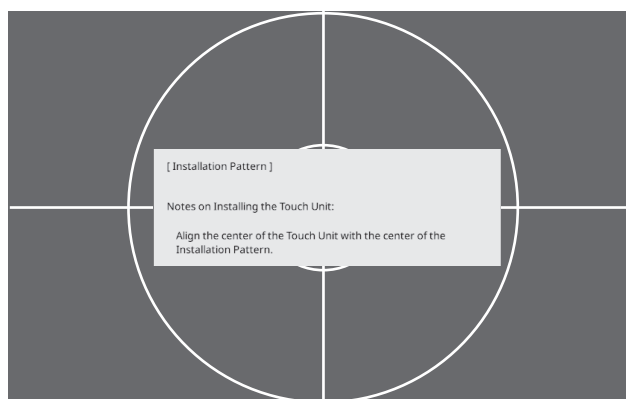

Determine the installation position for the bracket


Align the bottom of the bracket template sheet with the top of the projection surface and attach the sheet to the wall.

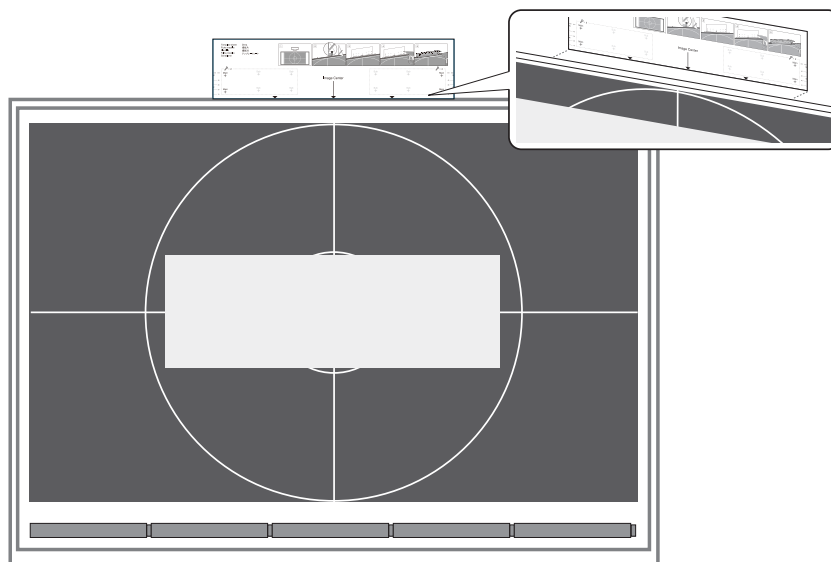


The touch unit must be installed above the image area.

5 Drill holes for the bracket

If possible, drill holes at the four points labeled **Main** on the template sheet.

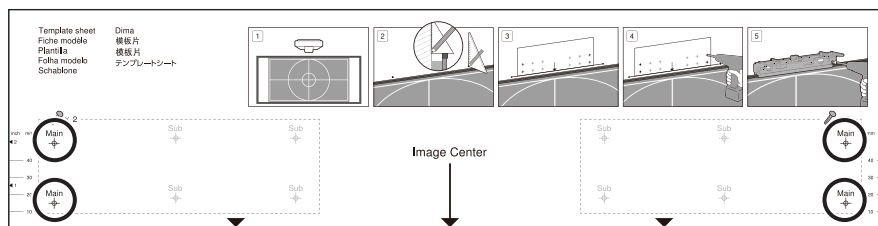


If you're unable to use the points labeled **Main**, you can secure the bracket at the points labeled **Sub**.

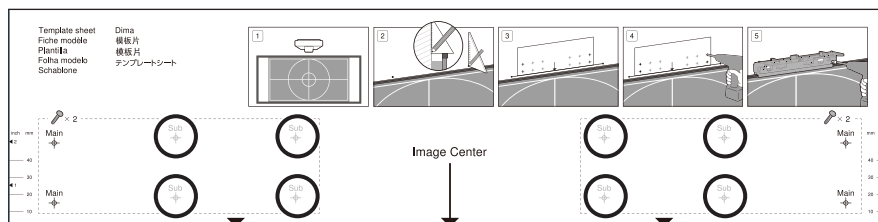


Make sure you secure the bracket at four points (two on the left and two on the right) for proper balance.

6 Install the bracket

1. Loosen the screws (×2) at the top of the bracket.

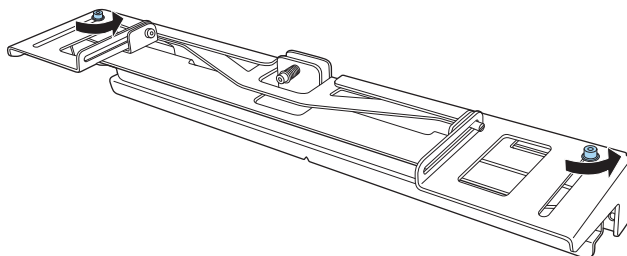


2. Slide the front of the bracket forward until it is fully extended.


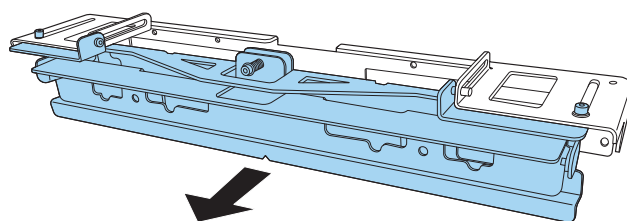


To prevent the front of the bracket from slipping during installation, loosely tighten the top screws.



3. Secure the bracket on the wall using four (×4) 3.8 mm wood screws that are 46 mm long or four (×4) M4 anchor bolts (not included).

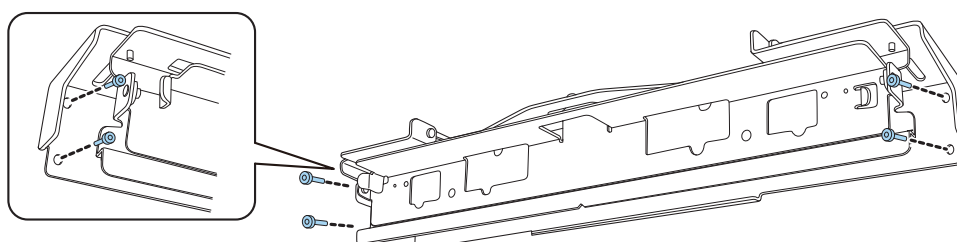

4. Slide the front of the bracket until the lower edge touches the projection surface.

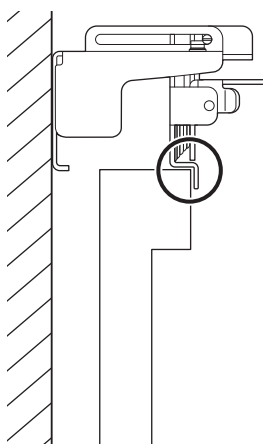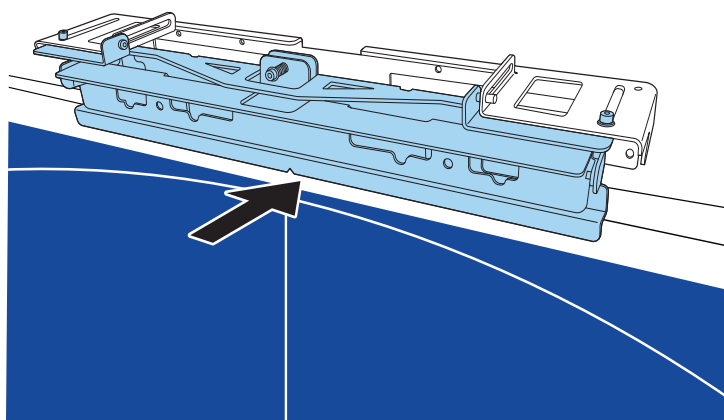


- ❑ If the distance from the wall to the surface of the whiteboard is greater than 2 inches (51 mm), you must install the touch unit on the whiteboard.
- ❑ If the frame of the whiteboard extends more than 0.1 inch (3 mm) away from the board surface, you must install the touch unit on the whiteboard.

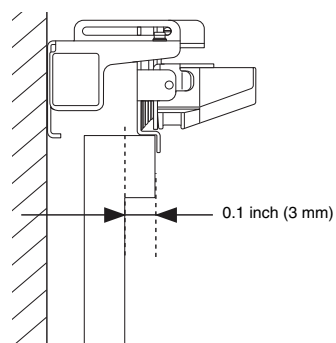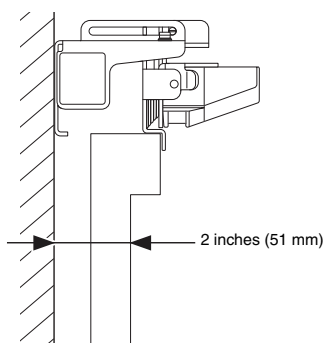


5. Tighten the screws (×2) at the top of the bracket that you loosened in step 1.

6. Remove the rubber caps (x2) from the front of the touch unit.

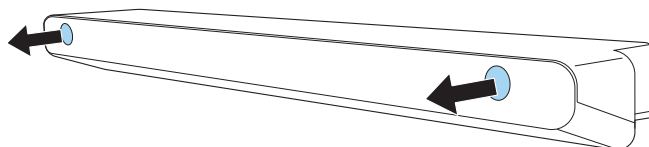


7. Secure the touch unit to the bracket with the M4 × 25 mm bolts (x2) supplied.

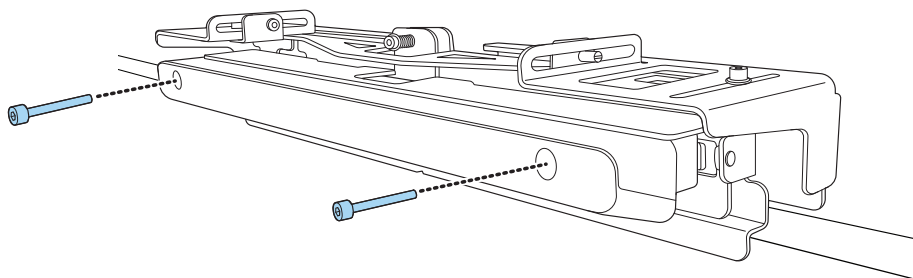

Caution

When attaching the touch unit to the bracket, be careful not to trap your fingers or any other part of your body between the magnets and the bracket.

8. Re-attach the rubber caps.

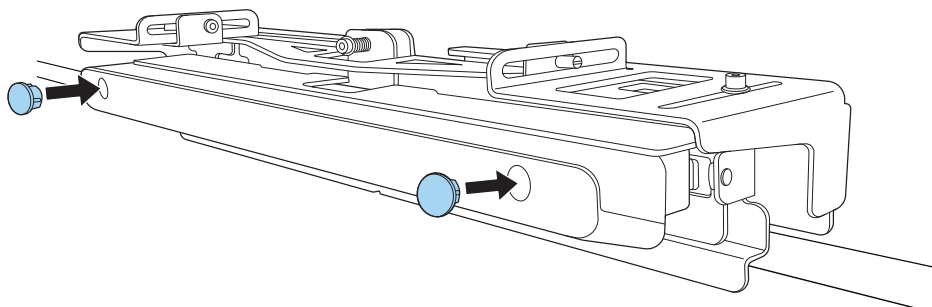


7 Turn on the touch unit

1. Connect the touch unit connection cable that is connected to the projector to the port on the Touch Unit.




Make sure you use the supplied touch unit connection cable. Operations are not possible with a commercially available cable.

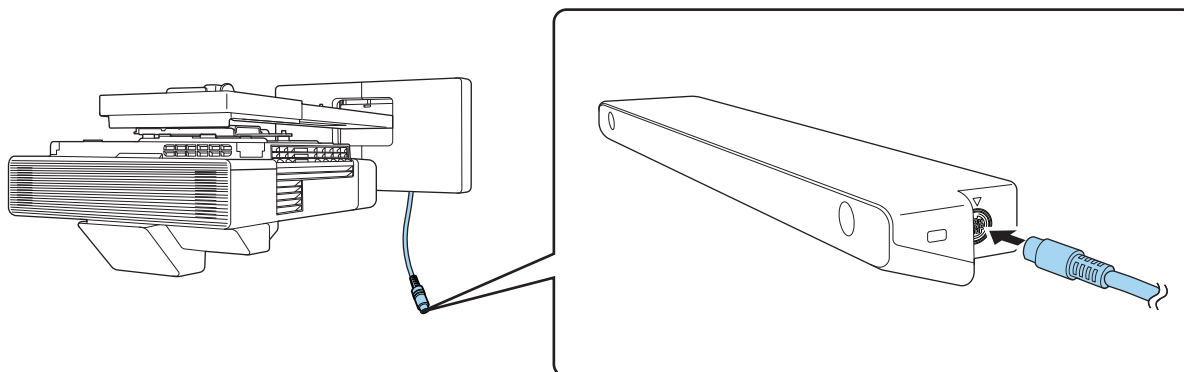


2. Press the [Menu] button on the remote control or control panel.

Remote Control

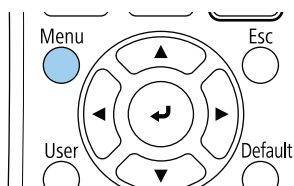


Control Panel

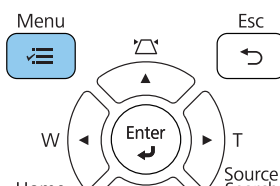


3. Select **Installation**.
4. Select **Touch Unit**.

| | |
|-----------------------|--------------------------------------|
| Frequently Used Items | Installation |
| Image | Fixed Installation Off |
| Signal I/O | Test Pattern |
| Installation | Setting Plate Installation Guide |
| Display | Vertical Installation No |
| Operation | Projection Front/Upside Down |
| Management | Auto Screen Adjustment |
| Network | Geometry Correction Point Correction |
| Pen/Touch | Digital Zoom |
| Interactive | Connect ELPCB02 Off |
| Multi-Projection | Touch Unit |
| Memory | Remote Receiver Off |
| ECO | Screen Type 16:9 |
| Initial/All Settings | High Altitude Mode Off |
| | Reset Installation Settings |
| | Display |
| | Pattern Display |
| | Pattern Type |

5. Set **Power** to **On**.

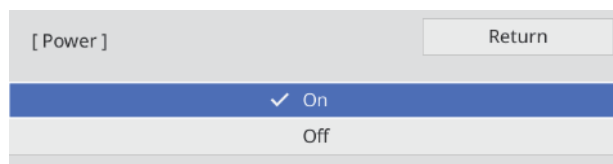

The touch unit power turns on and the indicator light turns blue.

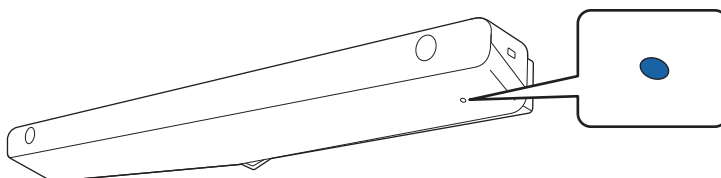

Warning

Do not look into the projector's projection window or the touch unit's laser diffusion ports (located on the bottom of the touch unit); this could cause injury to eyesight.



When Power is set to On, the touch unit automatically powers up the next time the projector is turned on.




Adjust the angle

Adjust the angle of the laser light coming from the touch unit so that the touch unit can detect the position of your fingers.



Make sure to calibrate the interactive pen(s) before running touch unit setup. Press the User button on the remote control and select Yes to perform an auto-calibration. Refer to the online *User's Guide* for your projector for detailed instructions on calibrating the pen(s).

1. Press the [Menu] button on the remote control or control panel.

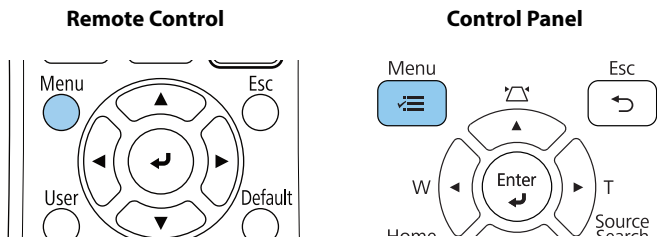

2. Select **Installation**.
3. Select **Touch Unit**.

| | |
|-----------------------|--------------------------------------|
| Frequently Used Items | Installation |
| Image | Fixed Installation Off |
| Signal I/O | Test Pattern |
| Installation | Setting Plate Installation Guide |
| Display | Vertical Installation No |
| Operation | Projection Front/UpSide Down |
| Management | Auto Screen Adjustment |
| Network | Geometry Correction Point Correction |
| Pen/Touch | Digital Zoom |
| Interactive | Connect ELPCB02 Off |
| Multi-Projection | Touch Unit |
| Memory | Remote Receiver Off |
| ECO | Screen Type 16:9 |
| Initial/All Settings | High Altitude Mode Off |
| | Reset Installation Settings |
| | Display |
| | Pattern Display |
| | Pattern Type |


4. Select **Touch Unit Setup**.

| | |
|----------------------|--------|
| [Touch Unit] | Return |
| Installation Pattern | |
| Power | On |
| Touch Unit Setup | |
| Touch Calibration | |
| Calibration Range | Wide |




If you're using multiple projectors and the HDMI Out Setting option in the Multi-Projection menu is set to Process Out, follow the on-screen instructions to turn off the Power setting for the touch unit on the next projector you set up.

5. Select **Installing the Touch Unit with the bracket.**

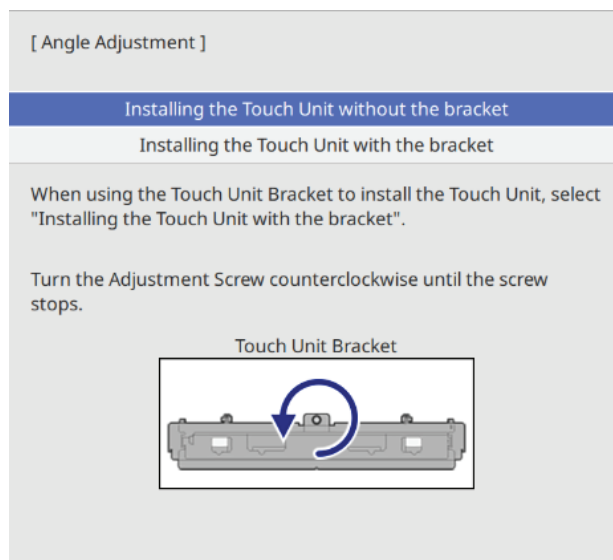

6. Loosen the adjustment screw at the top of the bracket until it stops turning.

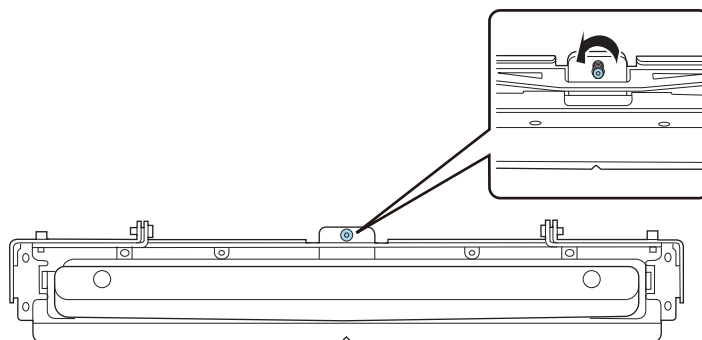


Make sure you stop loosening the screw as soon as it stops turning. Continuing to turn the screw may remove it from the bracket.

7. Attach the two markers to the positions shown on the projected screen.


Match the positions so that the crosses ((1)) overlap with the points ((2)) on the marker positions.

Move the marker over the projected cross until the lines of the cross align with the lines on the marker.

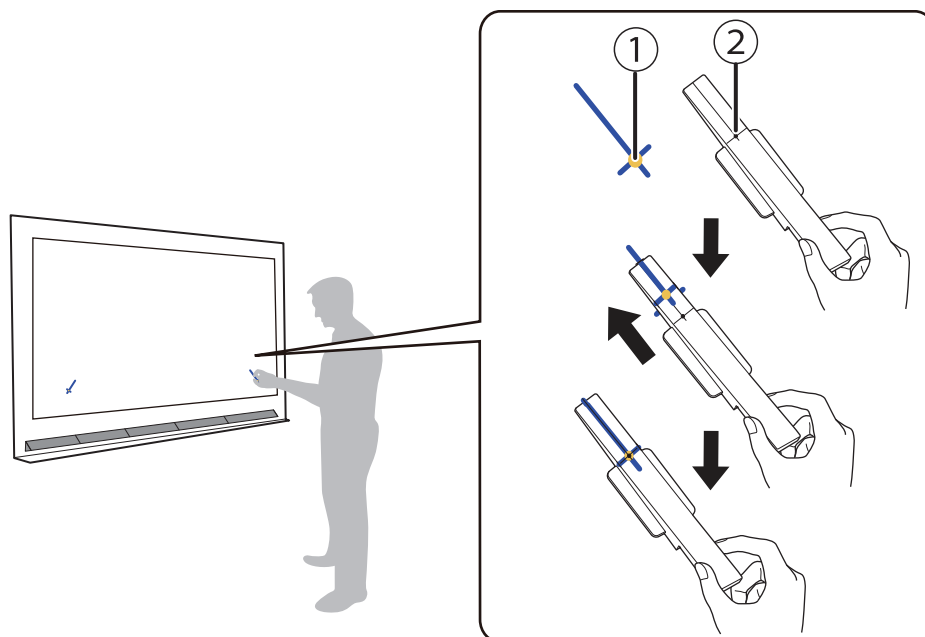

Attach the markers to the projection screen as follows:

- For magnetic screens: Place the bottom of the markers onto the screen.
- For non-magnetic screens: Use the supplied tape to secure the markers.

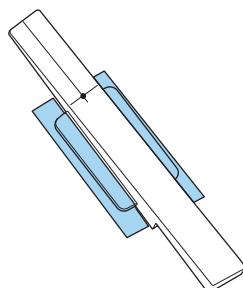


Do not place anything other than the markers near the projected image during angle adjustment. If other objects are on the projected image, angle adjustment may not be performed correctly.

8. Press the [Enter] button on the remote control or control panel to begin the auto adjustment.
9. When adjustments are complete, remove the markers.




If auto adjustment fails, follow the instructions on the screen to manually adjust the bracket position and run auto adjustment again.

10. Touch each of the four yellow circles on the screen and verify that the gray touch indicators appear in the correct position.

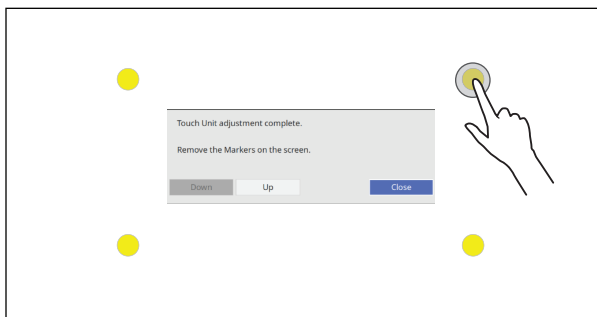

Finger touch operations may not function correctly if you are wearing bandages, artificial nails, nail polish, or anything else that may obstruct your fingers.

If the gray indicators do not appear where you touched the screen, you need to manually adjust the touch unit alignment.

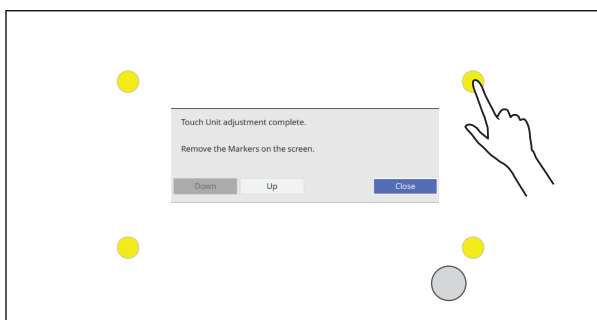

Select **Up** using the control panel or remote control and press [Enter]. Try touching the four dots again and repeat this process until the touch indicators appear in the correct position.

11. Perform touch calibration by pressing **Menu** on the remote control. On the **Installation** menu, select **Touch Unit**, then **Touch Calibration**. Follow the instructions on the screen.



See the online *User's Guide* for more details on the touch calibration.

9 Installing the Control Pad and Pen Stand (BrightLink 1485Fi/1485Fi+ Only)

You must install the projector before installing the control pad and pen stand.




Caution

The control pad should only be connected to the BrightLink 1485Fi/1485Fi+. Do not connect the control pad to any other projectors.

Check the installation location


Make sure there is enough space surrounding the control pad to easily connect or disconnect cables.

If you are using the touch unit, make sure that you do not install the control pad or pen stand in the shaded areas of the following figure. The touch unit will not operate correctly if anything is obstructing the infrared signal.

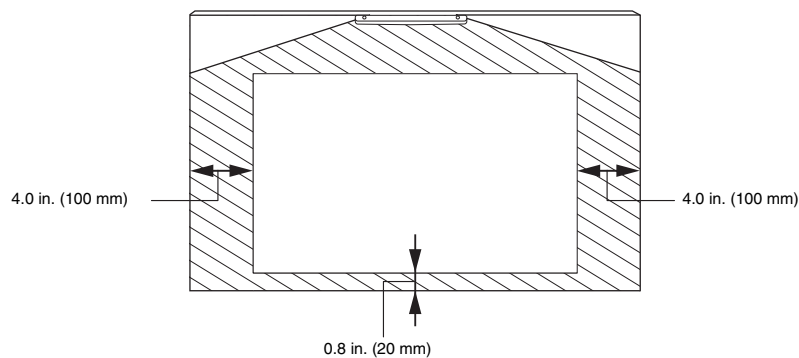


1 Remove the front cover

Grip the hole in the top of the cover and remove it.

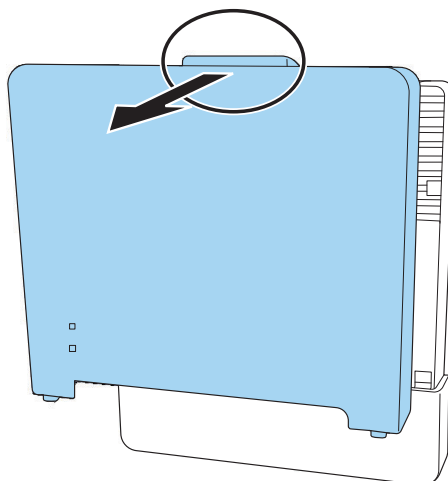


2 Connect the power cable

Connect the power cable and route it down the groove on the back of the control pad.

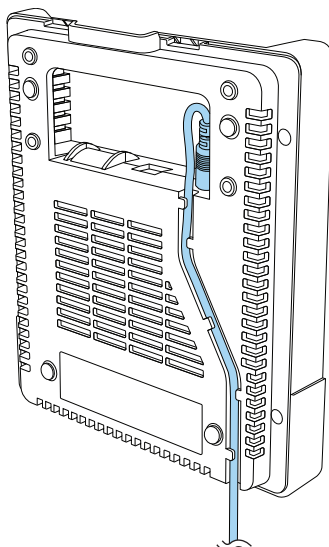

3 Attach the control pad

Attach the control pad with commercially available M4 × 20 mm screws (×4).

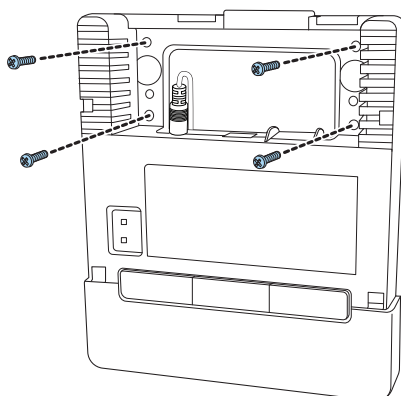

Warning


- ☐ Make sure the screws are not angled.
- ☐ Make sure the control pad is firmly attached.
- ☐ Do not attach the control pad with double-side tape or magnets.




Check that the control pad is operating correctly before attaching it with the screws.

4 Secure the AC adapter

Secure the AC adapter holder to the wall using M4 screws (×4)

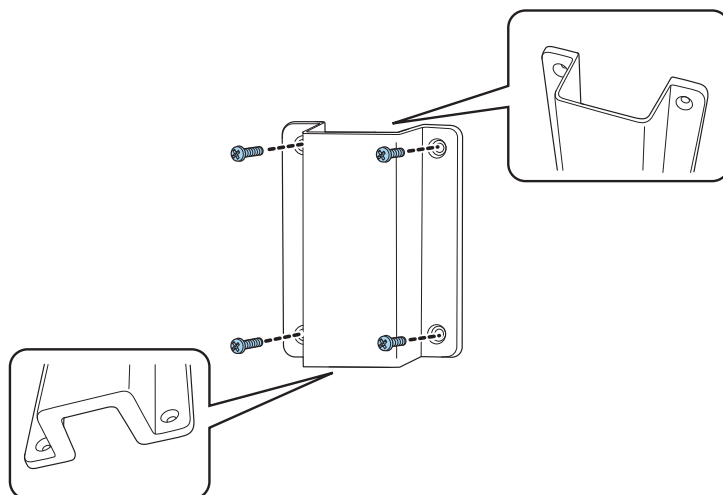


Slide the AC adapter into the holder and connect the power cable.

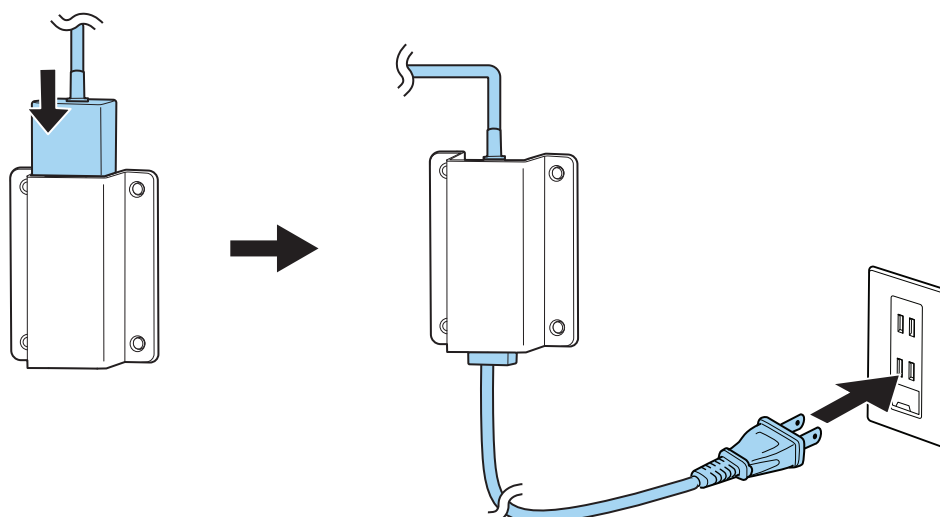

5 Connect the projector cables to the control pad

See the connection example on page 19 for details.

6 Attach the front cover

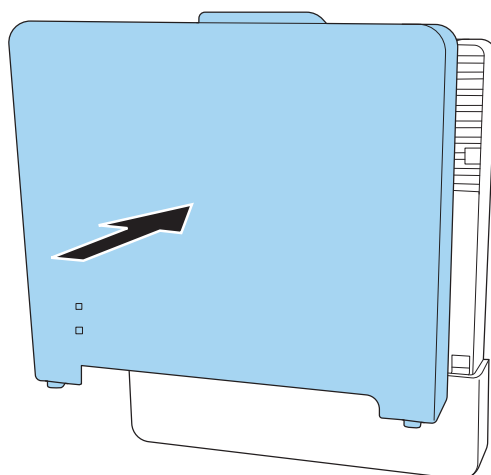


7 Install the pen stand

You can secure the pen stand with commercially-available M4 screws (not included) or the attached magnets.


1. Secure the pen stand:

- If your whiteboard is magnetic, you can use the magnets on the back of the pen stand to secure it.

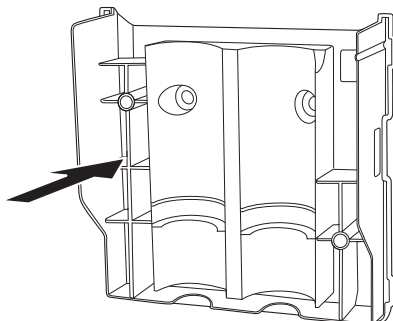


You need to leave a gap of at least 3.9 inches (100 mm) between the pen stand and the left or right side of the projected image or the touch feature may not function properly. If you are unable to leave this gap, install the pen stand on the wall next to the whiteboard.

- If you don't have a magnetic whiteboard or are unable to fit the pen stand on the whiteboard with the proper gap around the projected image, use commercially-available M4 screws (not included) to secure it to the wall.

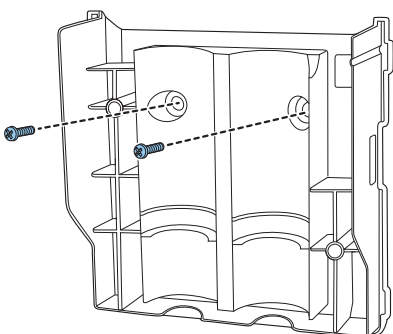

2. Attach the pen stand cover.

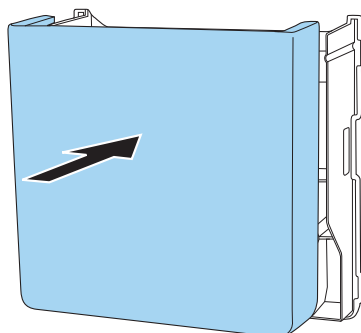

10 Appendix

Using the Easy Interactive Function

After you install your BrightLink projector (and the Touch Unit, if applicable), you need to perform calibration to align the positions of the cursor and your interactive pen(s) (and finger, if the Touch Unit is installed). See the projector's online *User's Guide* or *Start Here* folder for detailed instructions.

In order to use the Easy Interactive Tools software, you must first install the software on your computer. OS X users also need to install a driver that enables pen or finger touch interactivity to work. Both software programs are available for download.

For details, see the online *User's Guide* or visit:

U.S.: www.epson.com/support/brightlinkdownloads

Canada: www.epson.ca/support/brightlinkdownloads

Latin America: www.epson.com.jm/support

Using Auto Screen Adjustment



If possible, avoid adjustments with the Auto Screen Adjustment, Quick Corner, or Keystone functions of the projector. Doing so may result in a reduction in image quality and pen or finger touch calibration.

The Auto Screen Adjustment feature automatically corrects the position and shape of any image that is 110 inches or smaller diagonally.




Make sure you select the correct Screen Type setting before performing the Auto Screen Adjustment. Changing the Screen Type will reset any screen adjustments. See page 45 for more information.

The Auto Screen Adjustment may not work properly if:


- ☐ **The projection surface is not flat.**
- ☐ **There are patterns, obstructions, or dirt/debris on the projection surface.**

1. Place one corner marker in each corner of the intended image location.

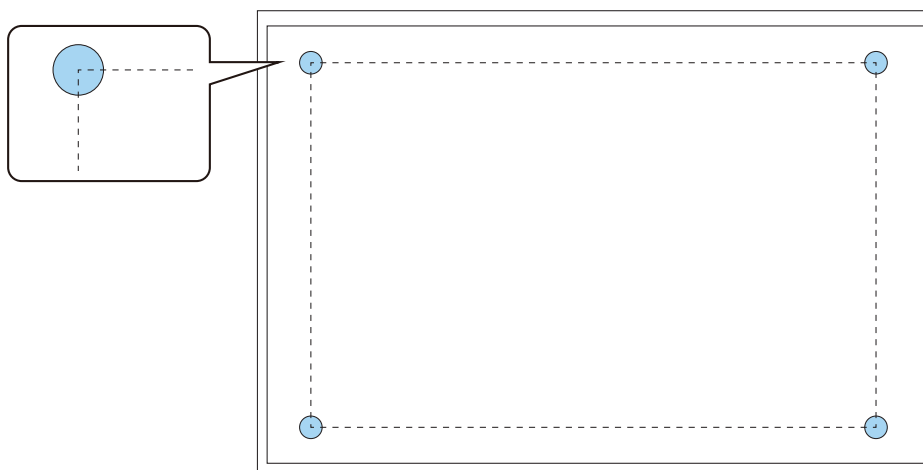

The corner marker stickers can only be placed once. If you want to re-use the markers, attach them to the included magnets.


- Press the [Menu] button on the remote control or control panel.

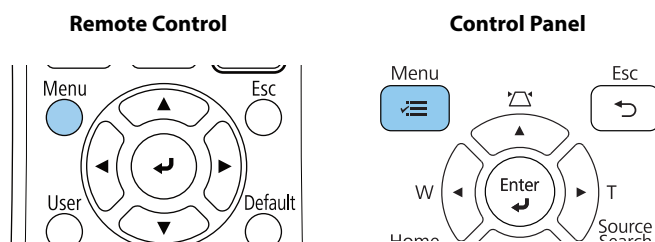


- Select **Installation**.
- Select **Auto Screen Adjustment**.

| | |
|-----------------------|--------------------------------------|
| Frequently Used Items | Installation |
| Image | Fixed Installation Off |
| Signal I/O | Test Pattern |
| Installation | Setting Plate Installation Guide |
| Display | Vertical Installation No |
| Operation | Projection Front/Upside Down |
| Management | Auto Screen Adjustment |
| Network | Geometry Correction Point Correction |
| Pen/Touch | Digital Zoom |
| Interactive | Connect ELPCB02 Off |
| Multi-Projection | Touch Unit |
| Memory | Remote Receiver Off |
| ECO | Screen Type 16:9 |
| Initial/All Settings | High Altitude Mode Off |
| | Reset Installation Settings |
| | Display |
| | Pattern Display |
| | Pattern Type |

- Loosen all of the adjustment dials and screws.

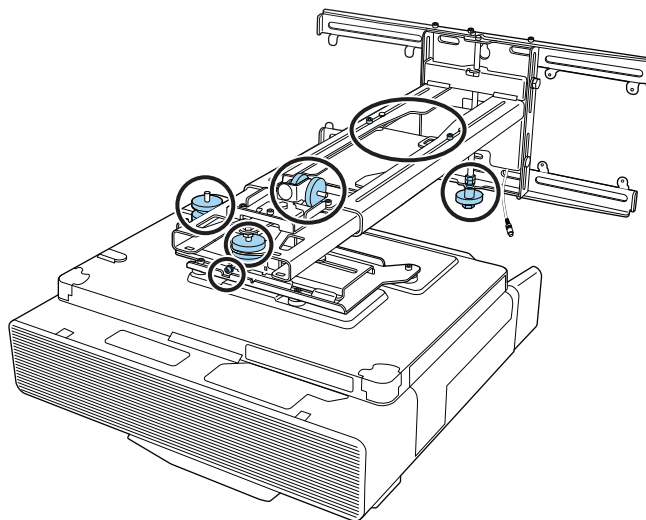

6. Adjust the projector position so that the corner markers are completely within the highlighted areas in the corners of the image.

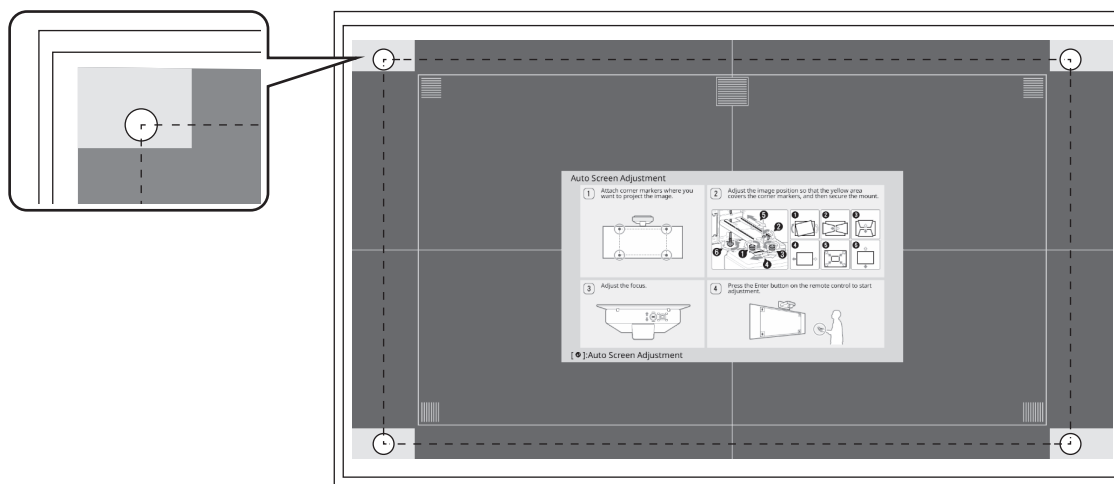


7. Tighten any adjustment dials and screws that you previously loosened.



Warning

Tighten all screws firmly. Otherwise, the projector or wall mount may fall and cause personal injury or property damage.

8. Open the front cover ((1)).
9. Use the focus lever to adjust the focus ((2)).

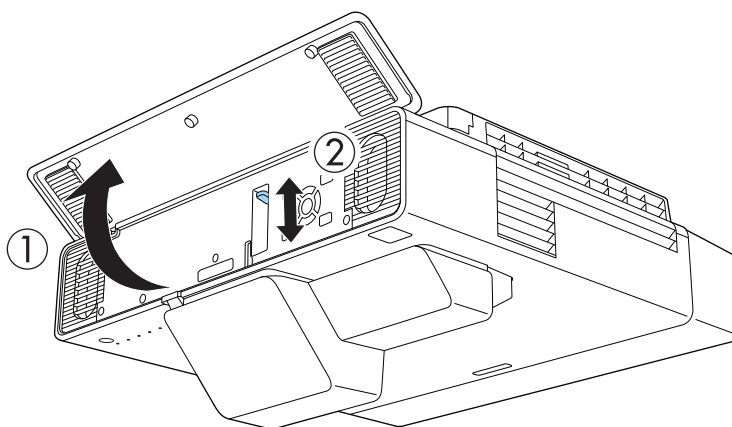

10. After you finish making the adjustment, close the front cover.
11. Press the [Enter] button on the remote control or control panel to begin the adjustment.
Once the adjustment is complete, you can use the Quick Corner setting to make further adjustments. Using the Arc Correction or Point Correction options will reset your previous adjustments.

Making Additional Screen Adjustments



If possible, avoid adjustments with the Auto Screen Adjustment, Quick Corner, or Keystone functions of the projector. Doing so may result in a reduction in image quality and pen or finger touch calibration.


Correcting the Image Shape on a Curved Screen

If you are projecting on a curved screen, adjust the Arc Correction setting to correct the image shape.



Touch unit installation requires a projection surface that is flat, smooth, and unwarped with no more than 0.2 inch (5 mm) of unevenness in any direction on the screen surface.

1. Press the [Menu] button on the remote control or control panel.

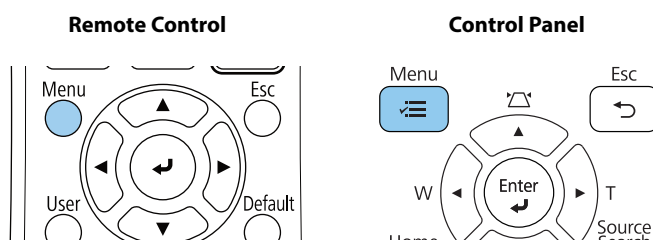


2. Select **Installation**.
3. Select **Geometry Correction**.

| | |
|-----------------------|--------------------------------------|
| Frequently Used Items | Installation |
| Image | Fixed Installation Off |
| Signal I/O | Test Pattern |
| Installation | Setting Plate Installation Guide |
| Display | Vertical Installation No |
| Operation | Projection Front/Upside Down |
| Management | Auto Screen Adjustment |
| Network | Geometry Correction Point Correction |
| Pen/Touch | Digital Zoom |
| Interactive | Connect ELPCB02 Off |
| Multi-Projection | Touch Unit |
| Memory | Remote Receiver Off |
| ECO | Screen Type 16:9 |
| Initial/All Settings | High Altitude Mode Off |
| | Reset Installation Settings |
| | Display |
| | Pattern Display |
| | Pattern Type |

4. Select **Arc Correction**.

| | |
|-------------------------|--------|
| [Geometry Correction] | Return |
| H/V-Keystone | |
| Quick Corner | |
| ✓ Arc Correction | |
| Point Correction | |
| Memory | |

5. Select the area that you want to correct.

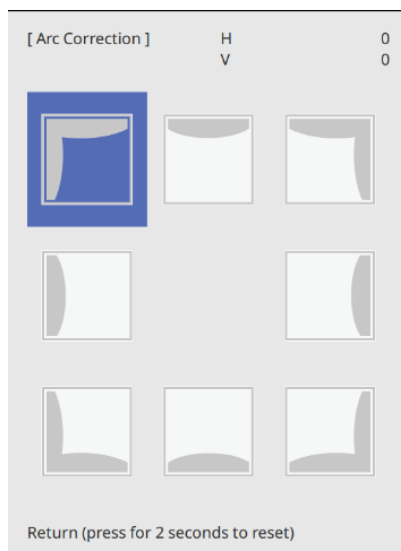


6. Use the arrow buttons on the remote control or control panel to change the shape of the selected area.
7. Repeat steps 5 and 6 to adjust any additional areas.

Correcting the Corner Shape

You can adjust the shape of the image corners with the Quick Corner setting.


1. Press the [Menu] button on the remote control or control panel.

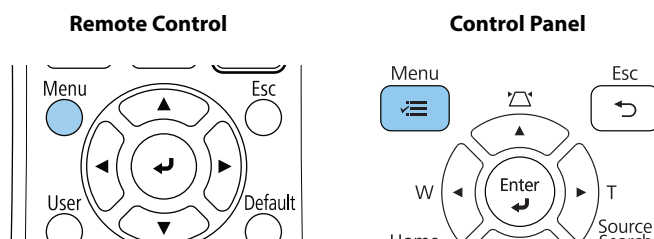


2. Select **Installation**.
3. Select **Geometry Correction**.

| | | |
|-----------------------|----------------------------------|-------------------|
| Frequently Used Items | Installation | |
| Image | Fixed Installation | Off |
| Signal I/O | Test Pattern | |
| Installation | Setting Plate Installation Guide | |
| Display | Vertical Installation | No |
| Operation | Projection | Front/Upside Down |
| Management | Auto Screen Adjustment | |
| Network | Geometry Correction | Point Correction |
| Pen/Touch | Digital Zoom | ▼ |
| Interactive | Connect ELPCB02 | Off |
| Multi-Projection | Touch Unit | |
| Memory | Remote Receiver | Off |
| ECO | Screen Type | 16:9 ▼ |
| Initial/All Settings | High Altitude Mode | Off |
| | Reset Installation Settings | |
| | Display | |
| | Pattern Display | |
| | Pattern Type | |

4. Select **Quick Corner**.

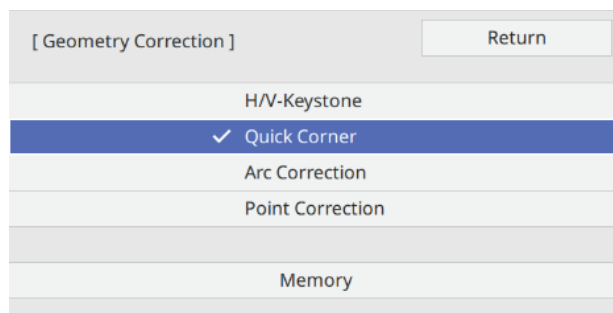

5. Select the corner that you want to correct.

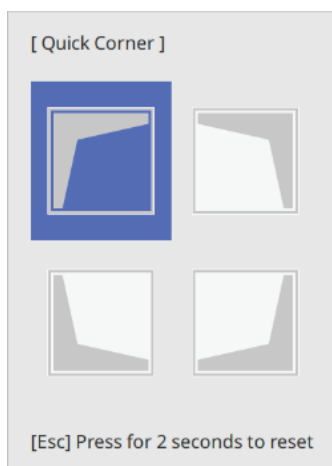


6. Use the arrow buttons on the remote control or control panel to change the shape of the selected corner.
7. Repeat steps 5 and 6 to adjust any additional corners.

Correcting the Image Shape at Individual Points


You can adjust the image at specific points with the Point Correction setting.

1. Press the [Menu] button on the remote control or control panel.

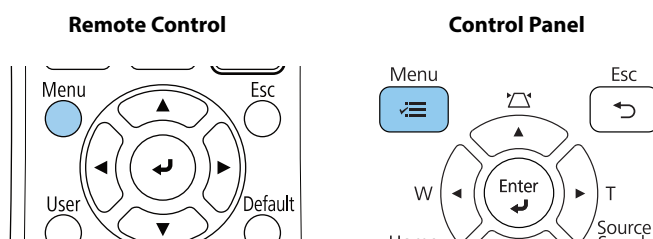


2. Select **Installation**.


3. Select **Geometry Correction**.

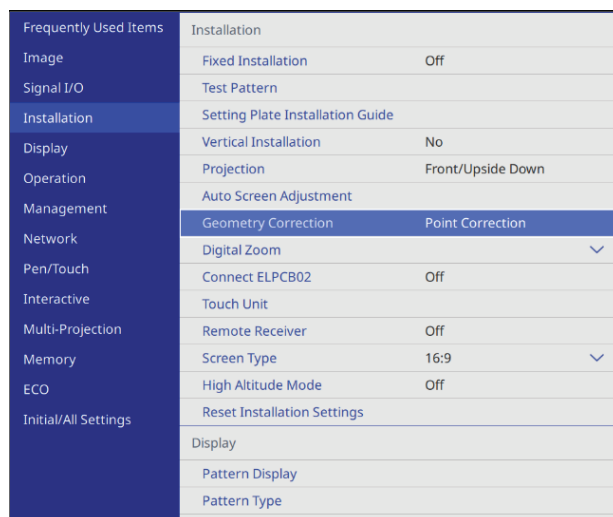


4. Select **Point Correction**.

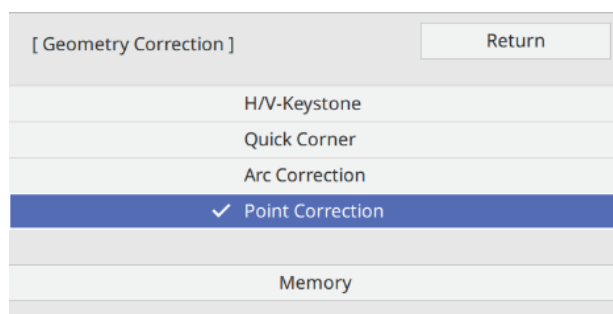

5. Select the point on the grid that you want to correct.

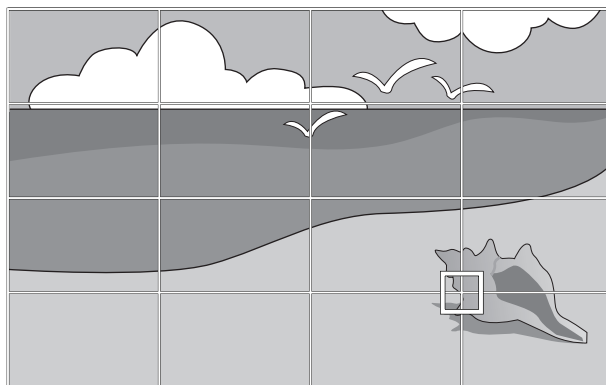

6. Use the arrow buttons on the remote control or control panel to change the shape of the selected point.

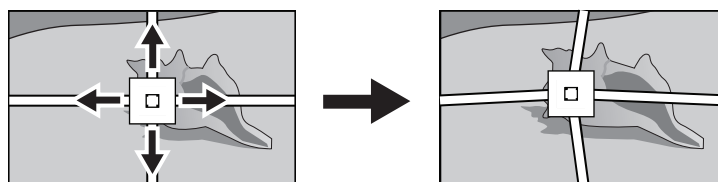


7. Repeat steps 5 and 6 to adjust any additional areas.

Attaching a Security Cable

If the projector is to be installed in a room where it will be left unattended, you can use a commercially available theft-prevention wire lock to secure the projector to a post or other object to prevent someone from taking it.

Pass the wire for the theft-prevention wire lock through the security cable installation point.

For details on how to lock the wire lock, refer to the *User's Guide* supplied with the wire lock.

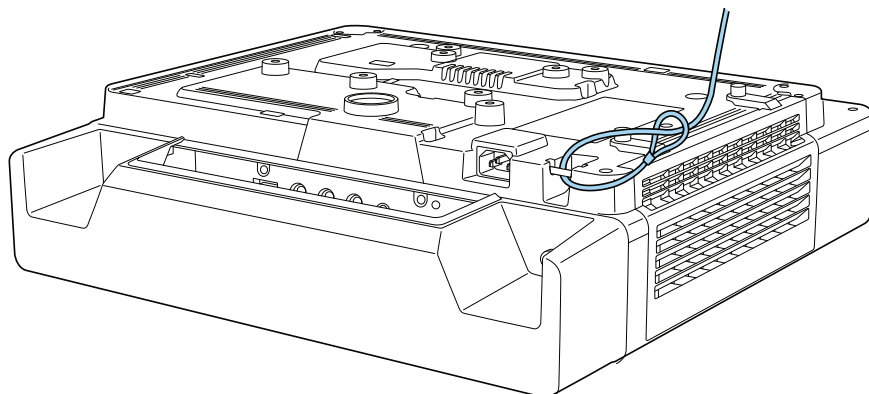

Make sure you leave the remote control, batteries, interactive pen(s), pen batteries, pen tray, and battery charger in the room with the projector. If your projector came with a product-specific installation guide or an installation leave-behind list, use that list instead of this one. The accessories included with the projector vary by model and region.