




I600

Quick Start Guide

Environment conditions

Environment	Operating	Non-Operating
Ambient temperature	5°C (41°F) to 40°C (104°F)	-20°C (-4°F) to 60°C (140°F)
Humidity	10% RH to 80% RH Non-condensed	10% RH to 90% RH Non-Condensed
Altitude	0 m (0 Ft) to 2500 m (8202 Ft)	-60 m (-197 Ft) to 10000 m (32810 Ft)
Air cleanness	Clean office environment ¹	n.a.
Air clearance	Air outlets: minimum 40 cm (15.7 in) Air inlets: minimum 10 cm (4 in)	n.a.


Remote control & local keypad

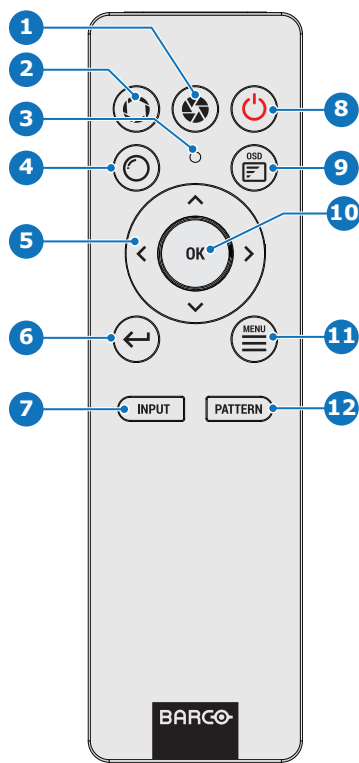

- 1 Shutter close
- 2 Shutter open
- 3 Button pressed
- 4 Lens menu
- 5 Navigation
- 6 Menu back
- 7 Input selection
- 8 Power On/Off
- 9 OSD On/Off
- 10 Confirmation
- 11 Menu enter/exit
- 12 Test patterns



- 1 Navigation
- 2 Confirmation
- 3 Menu enter/exit
- 4 Menu back
- 5 Power On/Off
- 6 OSD On/Off

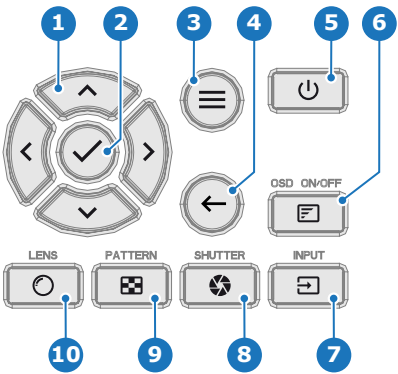

- 7 Input selection
- 8 Shutter open/close
- 9 Test patterns
- 10 Lens menu
- 11 LCD touch panel



1. Equivalent with cleanroom standard ISO 14644-1 ISO Class 9. If not, an environment protection housing must be used.

Main Power requirements









- The projector operates from a nominal mono phase power net with a separate earth ground PE.
- Power requirements : 100–240 V (+/-10%), 15-6 A, 50-60 Hz.
- The projector must be grounded.
- The power cord delivered with the projector must be used.

Button backlight status

The Power and Shutter buttons are equipped with white, blue and red backlit LEDs. The other keys are only equipped with white and blue backlit LEDs. The LEDs are controlled according to the features available.

Button	Color status	Description
	Short WHITE pulse	Projector starts up (booting), or is in ECO STANDBY
	Blinking WHITE	Firmware update, or in transition from ECO STANDBY to STANDBY
	Solid WHITE	Projector is in STANDBY or READY mode
	Blinking BLUE	Projector goes to ON mode
	Solid BLUE	Projector is ON
	Blinking RED	Error condition
	Off (no color)	Projector is OFF, starts up, or is in STANDBY or READY mode
	Solid WHITE	Projector is ON, shutter is open
	Solid RED	Projector is ON, shutter is closed



Available lenses for the I600 projector

Order No	Name (Screening) / Comments	Image	Resolution	Throw Range
R9803077	ILD lens 0.37 : 1 UST 90° (requires lens support and Pulse v2.5.10 or higher)		4K UHD 0.8"	(0.37 : 1)
R9803076	ILD lens 0.5 : 1 UST (requires Pulse v2.5.10 or higher)		4K UHD 0.8"	(0.5 : 1)
R9803072	ILD lens 0.65 - 0.8 : 1		4K UHD 0.8"	(0.65 - 0.8 : 1)
R9803071	ILD lens 0.8 - 1.0 : 1		4K UHD 0.8"	(0.8 - 1.0 : 1)
R9803070	ILD lens 1.0 - 1.4 : 1		4K UHD 0.8"	(1.0 - 1.4 : 1)
R9803061	ILD lens 1.4 - 2.1 : 1		4K UHD 0.8"	(1.4 - 2.1 : 1)
R9803075	ILD lens 2.1 - 4.0 : 1		4K UHD 0.8"	(2.1 - 4.0 : 1)
R9803073	ILD lens 4.0 - 7.4 : 1		4K UHD 0.8"	(4.0 - 7.4 : 1)


Install the projection lens

1. Gently insert the lens in the lens holder while aligning the **short red line** on the lens body with the red line on the projector top cover (reference 1,).
2. Once the lens is completely inserted, rotate the lens body clockwise until the **long red line** on the lens body is aligned with the red line on the projector top cover.

A click indicates that the lens mount mechanism is locked.

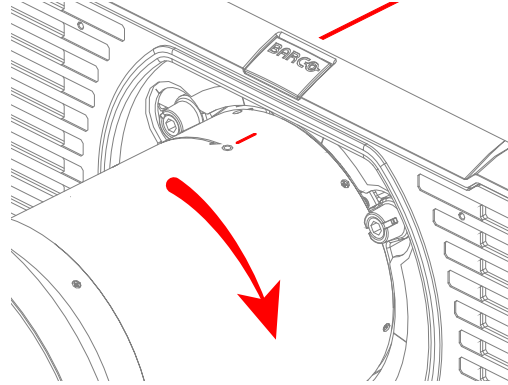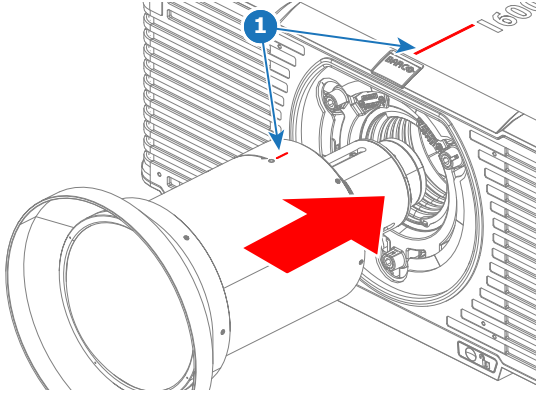


3. Check if the lens is securely locked by trying to rotate the lens body counter clockwise. This should not be possible!

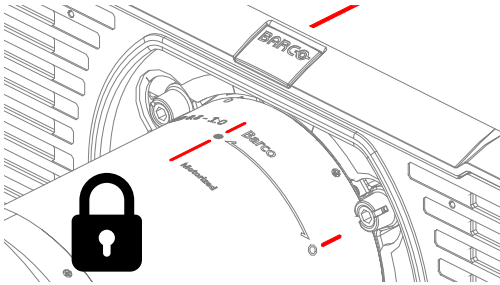

Power up the projector

1. Connect the mains power cord to the power inlet connector.
2. The projector will perform the startup sequence. When ready, the power button on the keyboard will illuminate white, meaning that the projector is in ready mode.
3. Press the Power button on the keypad or remote. The power button will after some seconds illuminate solid blue, meaning that the projector is ON.

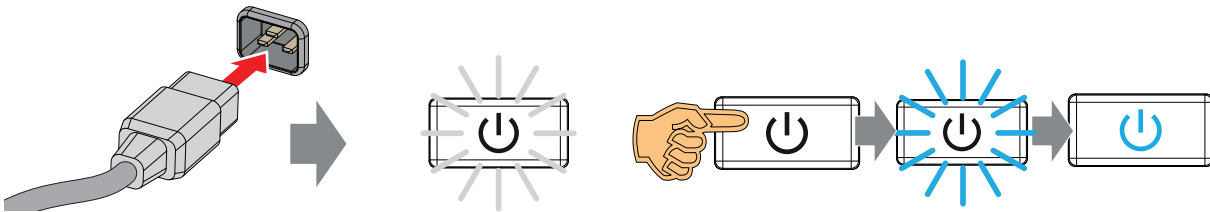

Initial setup with Pulse OSD

1. Power up the projector.
2. Select the UI language.
3. Approve the End User License Agreement (EULA).
4. Define a new strong password for the default administrator.²


² A strong password has a minimum of 8 characters and should be unique. The password should be a mix of upper case letters, lower case letters, numbers and special characters.

Initial setup with Pulse Prospector

Ensure the projector is powered and that the connected device and the projector operate within the same network or have full access to the projector network.

1. Open a browser and enter the IP address of the projector (default projector IP address is 192.168.1.101).³
2. Select the UI language.
3. Approve the End User License Agreement (EULA).
4. Fill in the default password: “**setup123**”.
5. Define a new strong password for the default administrator.²


Front panel Control & Communication module

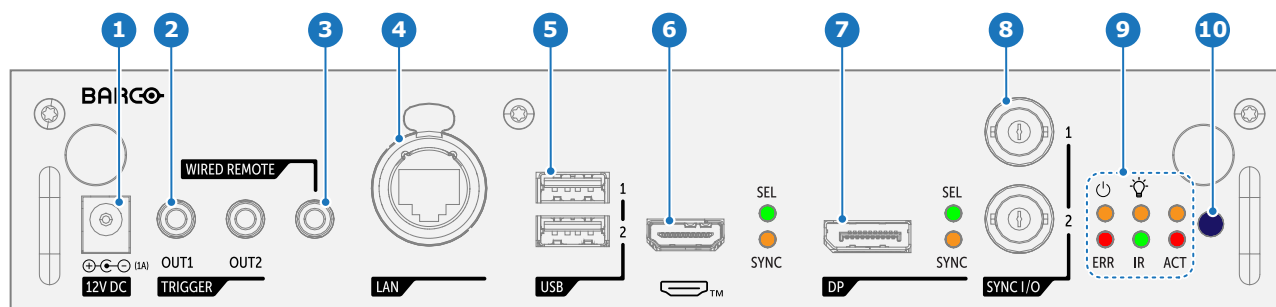

- 1 12V DC
- 2 TRIGGER
- 3 WIRED REMOTE
- 4 LAN
- 5 USB

- 6 HDMI™
- 7 DP
- 8 SYNC I/O
- 9 Projector status LEDs
- 10 IR receiver


Front panel Quad Combo Input Mk III

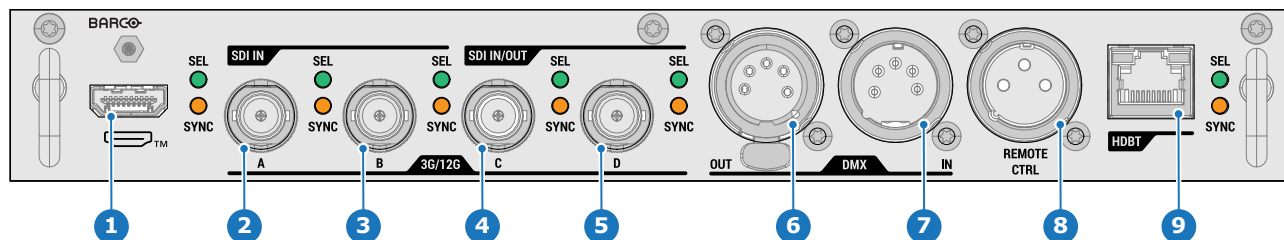

- 1 HDMI™ input⁴
- 2 Quad SDI channel A: 3G/12G input
- 3 Quad SDI channel B: 3G/12G input
- 4 Quad SDI channel C: 3G/12G input/output
- 5 Quad SDI channel D: 3G/12G input/output

- 6 DMX interface output
- 7 DMX interface input
- 8 XLR for wired projector control
- 9 HDBaseT input

Front panel Quad DP 1.2 input

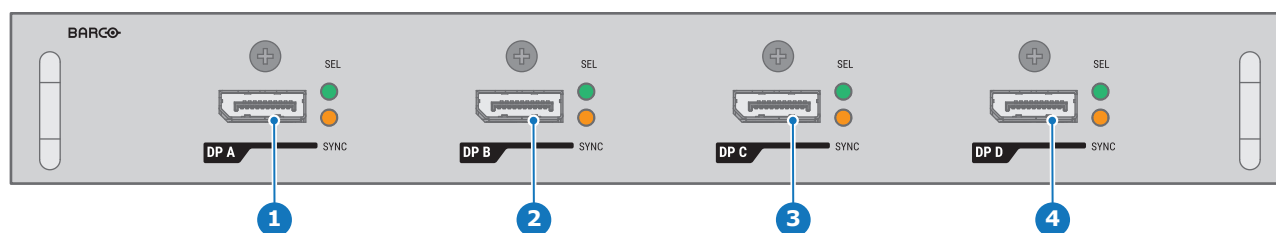


- 1 Quad DisplayPort channel A input
- 2 Quad DisplayPort channel B input
- 3 Quad DisplayPort channel C input
- 4 Quad DisplayPort channel D input

³ The projector IP address is visible on the Dashboard of the projector LCD touch panel.


⁴ The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Front panel Pulse HDBaseT input

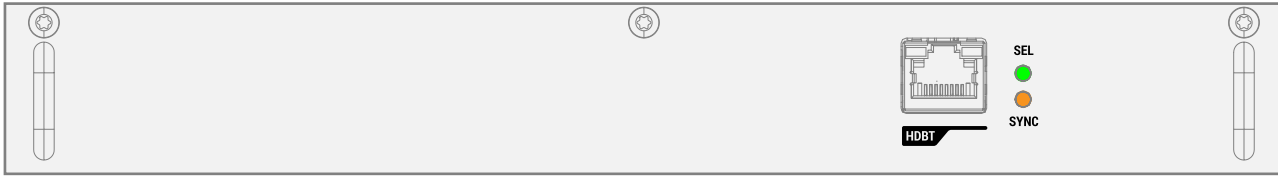

Connect and select source

1. **Connect** available sources to the appropriate input ports.
2. **Select** connected source. (See Pulse OSD user guide for detailed menu navigation steps).
 - **Select** LED (reference 1)
 - GREEN : port configured as input. Image appears on the screen.
 - Blinking GREEN : bidirectional port configured as output / loop-through.
 - **Sync** LED (reference 2)
 - YELLOW : sync/signal is present.
 - Blinking YELLOW: Sync/signal is present, but not conform with input port standard.

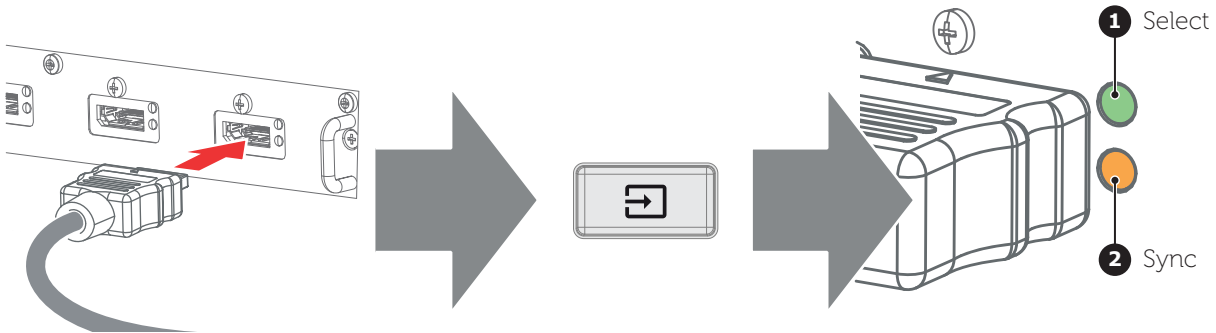

Adjust


1. **Adjust the lens settings** by pressing the lens menu button on the keypad or via the zoom, shift and focus buttons on the keypad.



2. **Orientation** of the unit is set as standard in table front projection mode.
Change the projector set up in the *Installation > Position > Orientation* menu.
3. For **Advanced adjustments** like Warping, Light management, etc. see Pulse OSD user guide.


Power down the projector

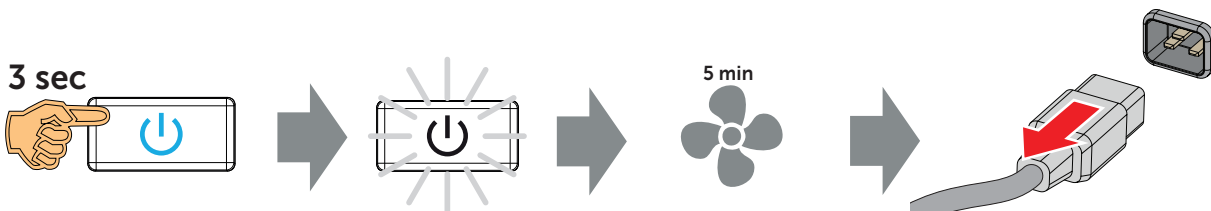

1. Press and hold the power button for 3 seconds. (A timer indicator will show up on the display).
2. The power button illumination will become white, and projector will enter the cool down mode for approximately 5 minutes.
3. When the backlight for the keypad is off, unplug the power cord from the projector.




Projector status indicator LEDs

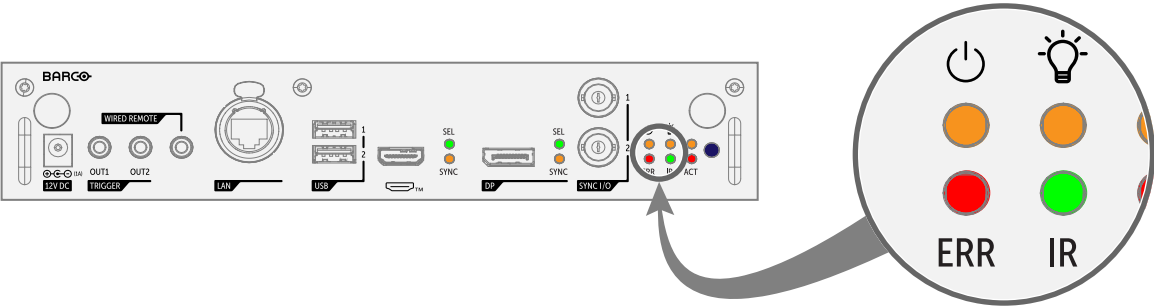





The Control & Communication module contains four status LEDs at the right side of the front panel. These LEDs allows a quick status analyses of the projector. For explanatory see table hereunder.

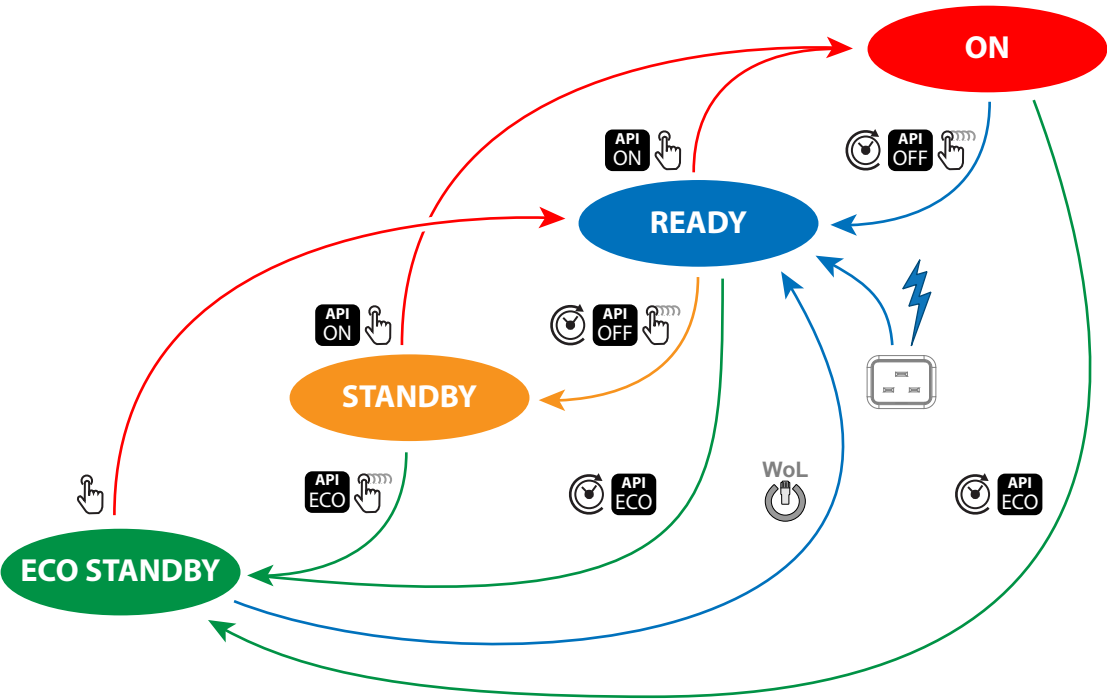

LED	Color status	Description
 Power	Off	Projector is in ECO STANDBY mode, or is powering up
	RED	Projector is in STANDBY mode
	ORANGE	Projector is in READY mode
	GREEN	Projector is ON
 Illumination	Off	Light source is OFF
	RED	No light source detected
	ORANGE	Light source is on in ECO mode
	GREEN	Light source is on in normal mode
ERR	GREEN-ORANGE	Light source is on in CLO mode
	Off	No error
	RED toggles on/off	Error
IR	ORANGE toggles on/off	Warning
	RED	IR signal received
	GREEN	IR signal acknowledged



Power transition diagram




Symbol	Description
	Short pressing the Power on/off button on the local keypad or on the remote control unit.
	Long pressing the Power on/off button on the local keypad or on the remote control unit.
	Wake-On-LAN (WOL). Only works if a network was connected with the LAN port of the projector while the projector went to ECO STANDBY .
	API command to change the power state of the projector (Power ON, Power OFF, Go to ECO). See Pulse user guide for more info (E.g. PJLink).
	Auto light source off and auto standby features. Default disabled (factory settings). For configuration see power saving settings in the Pulse user guide.
	The projector starts default up in READY mode when it is powered.

Remove the projection lens



1. Support the lens with one hand.
2. Push the lens unlock button with the other hand while rotating the lens a few degrees counter clock wise.
The lens unlock button is located bottom right of the lens holder.
3. Hold the lens with both hands and rotate it further counter clockwise until the **short red line** on the lens body is aligned with the red line on the projector top cover (reference 1).

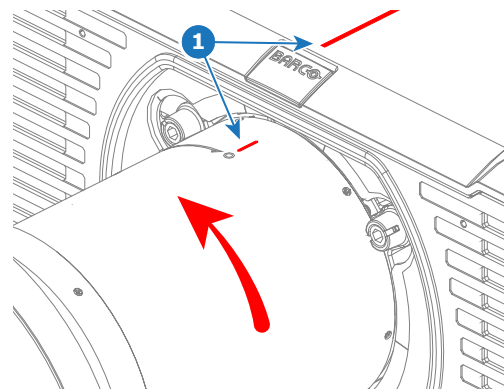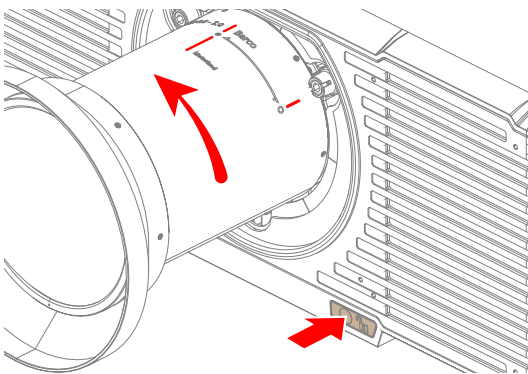

4. Pull the lens straight out of the lens holder.

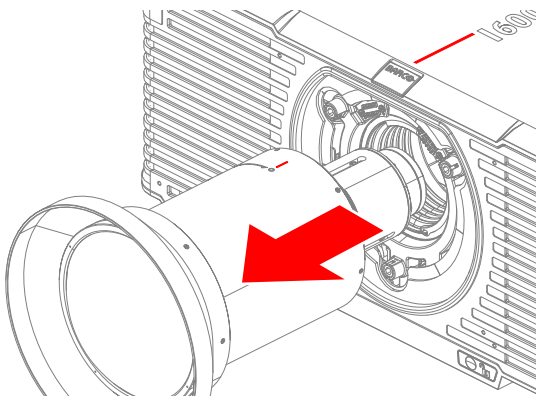

Pulse Remote Control Unit

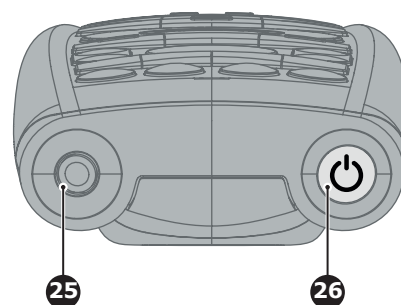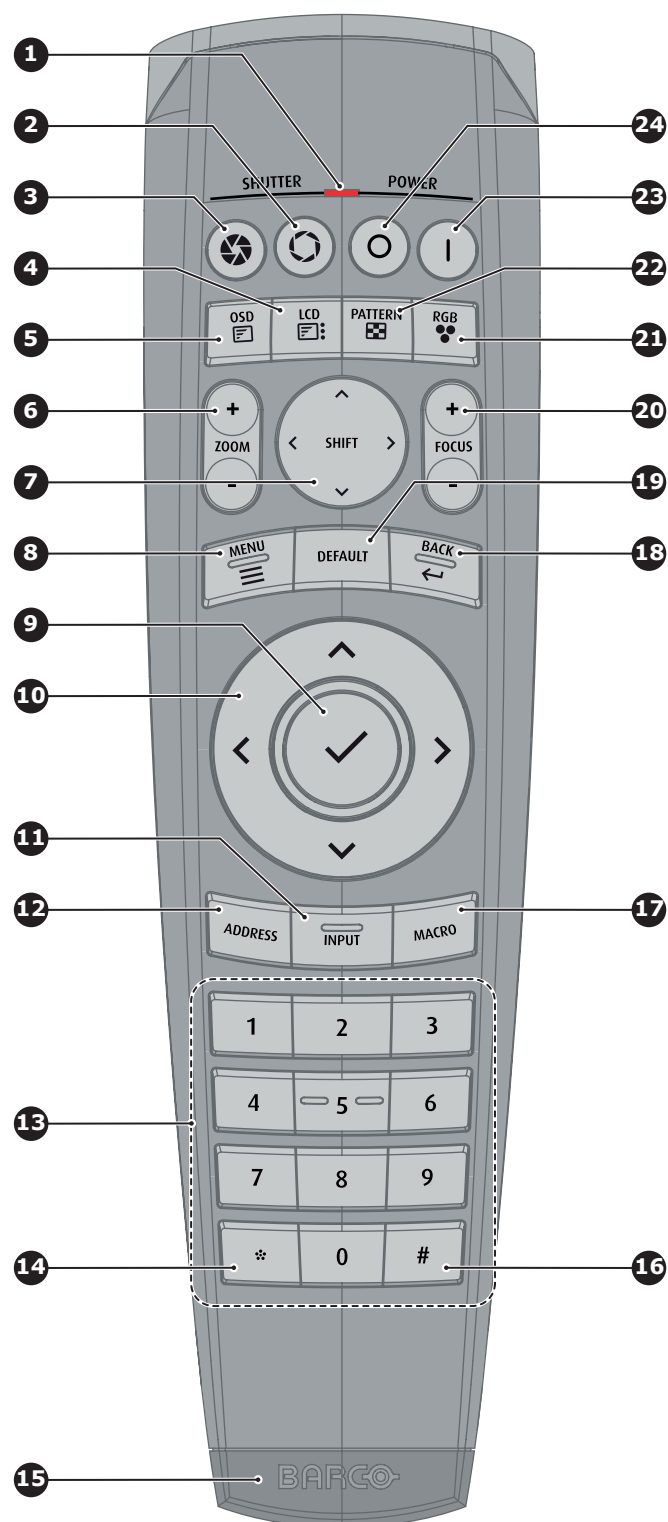

- 1 Button pressed indicator
- 2 Shutter open
- 3 Shutter close
- 4 LCD panel on / off
- 5 Project OSD on / off
- 6 Lens zoom
- 7 Lens shift
- 8 Menu open / close
- 9 Menu selection, OK button
- 10 Menu navigation
- 11 Input selection
- 12 Address button
- 13 Numeric buttons
- 14 Backspace (while entering values)
- 15 XLR connector
- 16 Decimal mark (while entering values)
- 17 Macro button
- 18 Menu back
- 19 Default value button
- 20 Lens focus
- 21 RGB filter
- 22 Test patterns
- 23 Power on
- 24 Power off
- 25 3.5 mm jack
- 26 RCU on / off



CAUTION: Replace batteries with the correct battery type. Use AAA size batteries for the basic RCU and AA size batteries for the Pulse RCU. There is a risk of explosion if the battery is replaced with an incorrect type. Use alkaline batteries for optimum range and life time. Make sure the polarities match the + and - marks, as depicted on the inside of the battery compartment. There is a risk of explosion if the batteries are installed incorrectly.



Replacing batteries will reset the broadcast address of the Pulse RCU to its default value '0'. Replacing batteries of the Pulse RCU switches on the Pulse RCU automatically.



In order to make sure you can control your projector remotely, Barco has provided a basic remote control unit in case the Pulse RCU is not available to you. While the basic remote control has a more limited amount of available features, it will be able to help you out with basic controls.